


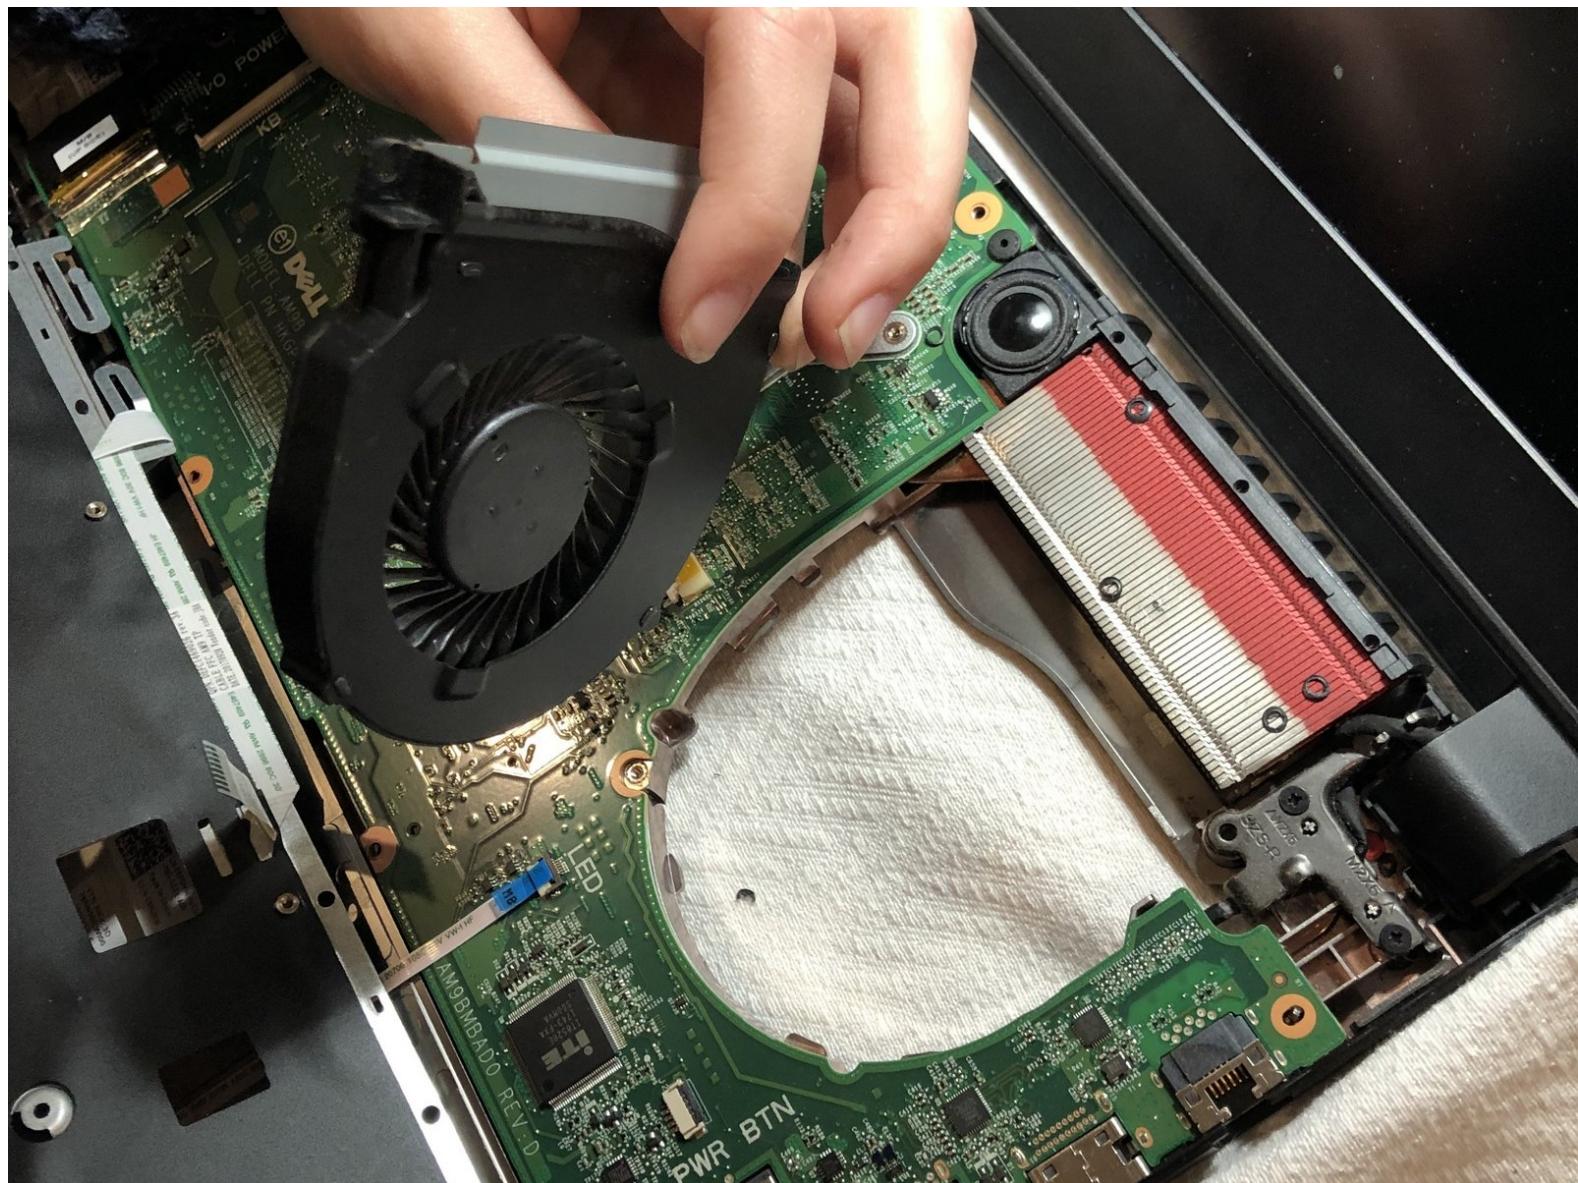

Dell Inspiron 15 5577 Gaming Fans Replacement

In this guide you will learn how to remove and replace the fans in the Dell Inspiron 15 5577 computer.

Written By: Julia Cabral



This document was generated on 2020-04-06 06:01:13 AM (MST).

 **TOOLS:**

- 64 Bit Driver Kit (1)

Step 1 — Fans




- Unscrew the base cover.

Step 2



- Remove the base cover.

Step 3

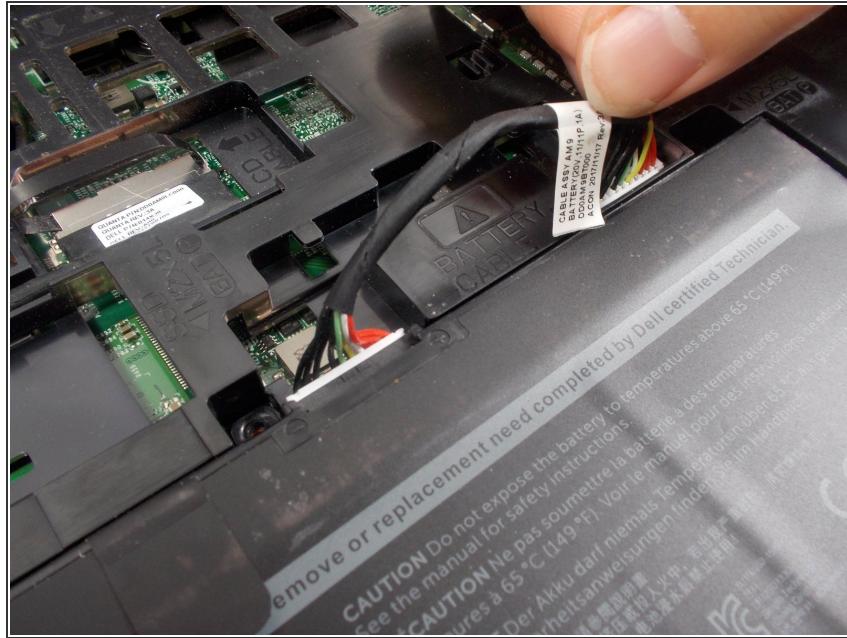


- Unplug the battery cable by gently tugging it.

Step 4



- Loosen the screws that secure the battery in place.

Step 5

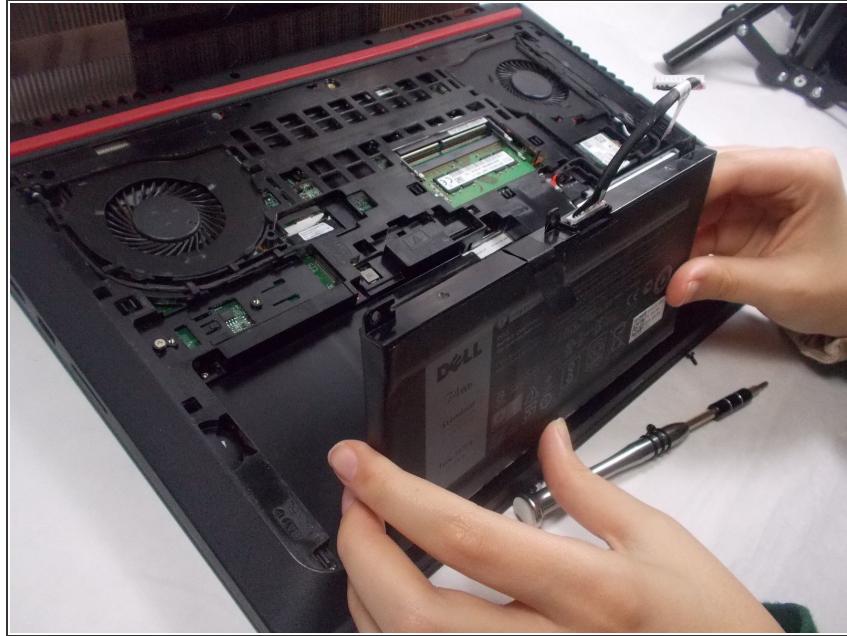

- Pull the battery out of the laptop.

Step 6




- Remove the cable above the hard drive.

Step 7




- Loosen the screws that secure the hard drive.

Step 8

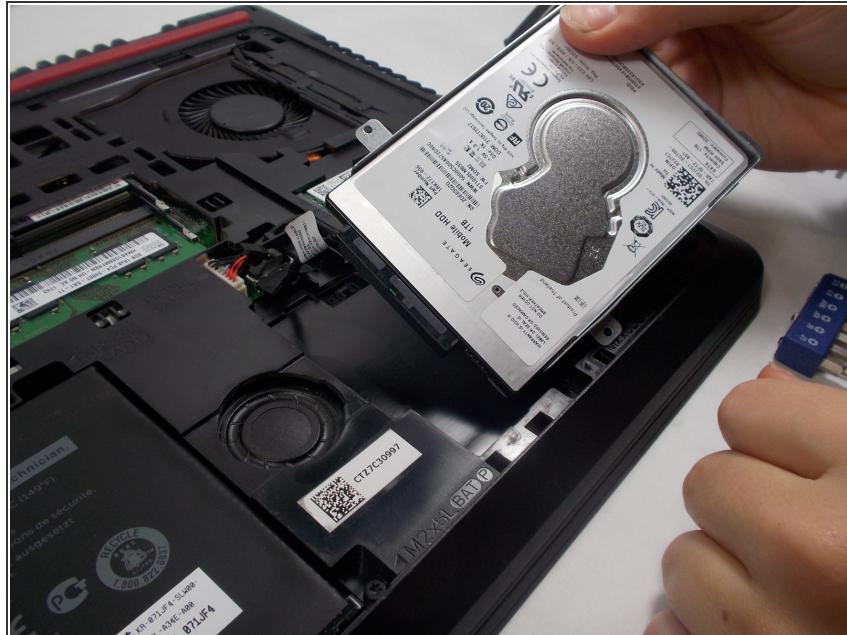

- Remove the hard drive.

Step 9

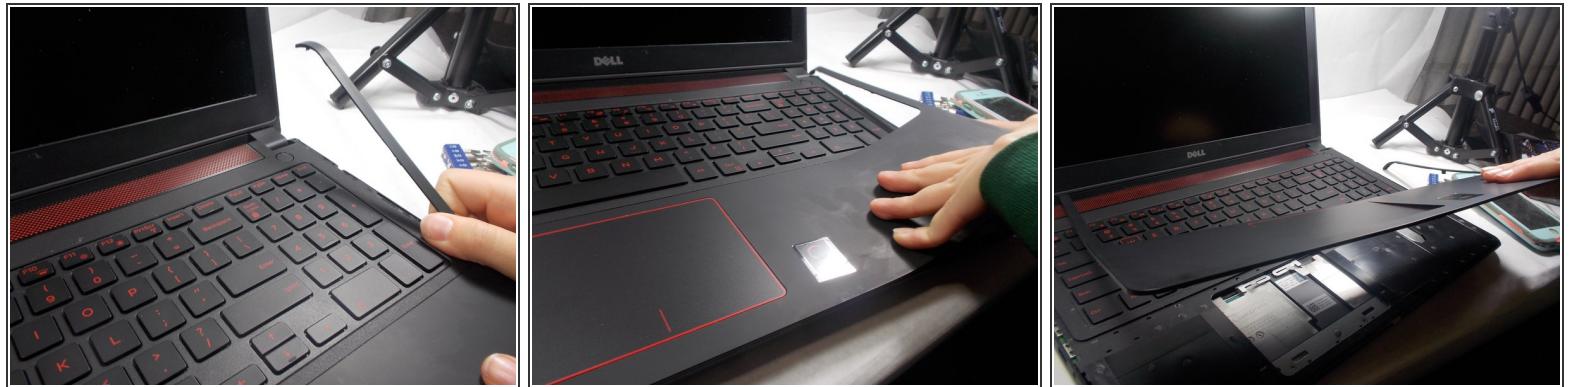


- Flip the laptop over and open the lid. Remove the palm-rest.

Step 10




- Carefully unsecure the rest of the shell on the base of the computer.

Step 11

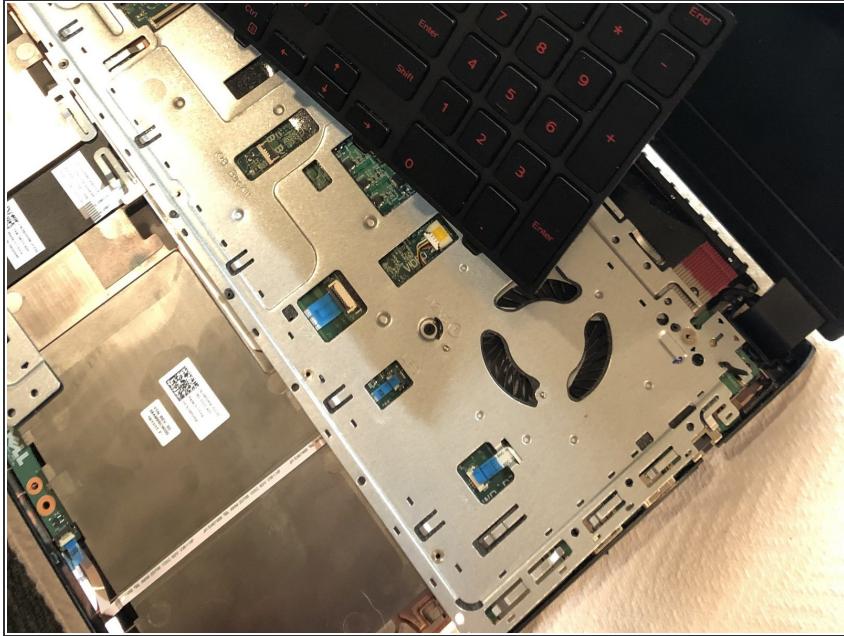

- Remove the keyboard.

Step 12

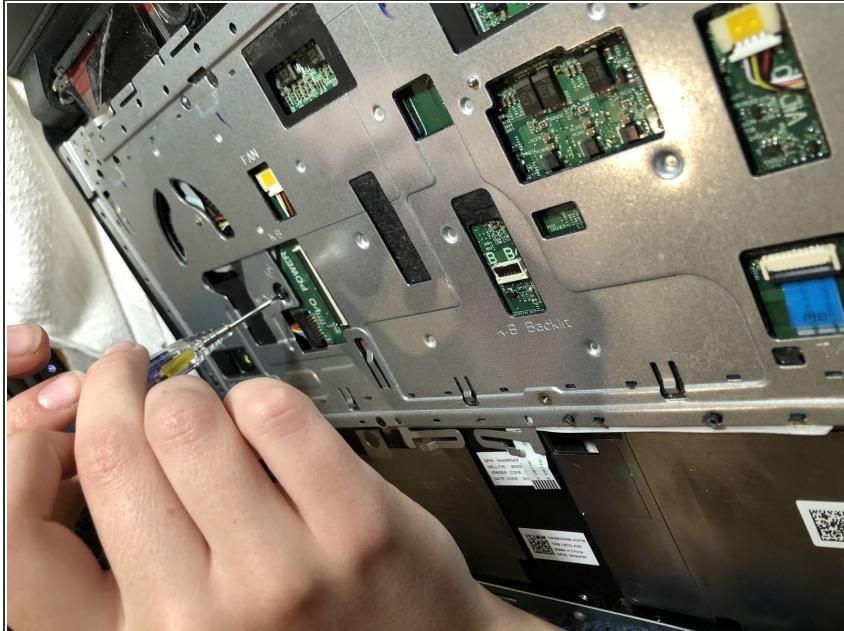


- Loosen the screws securing the metal plate and contents of the base.

Step 13




- Remove the plate.

Step 14

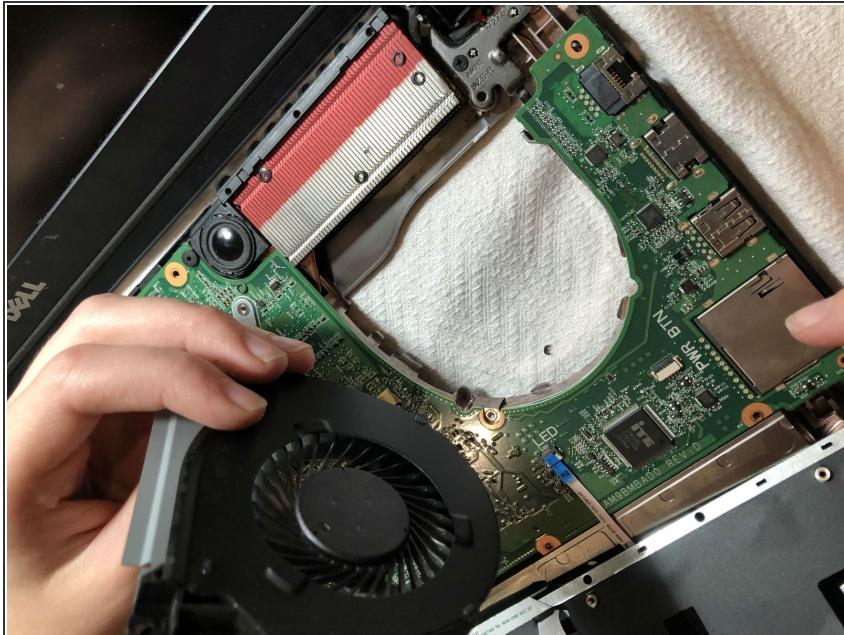


- Unscrew and remove the first fan from the base of the laptop.

Step 15

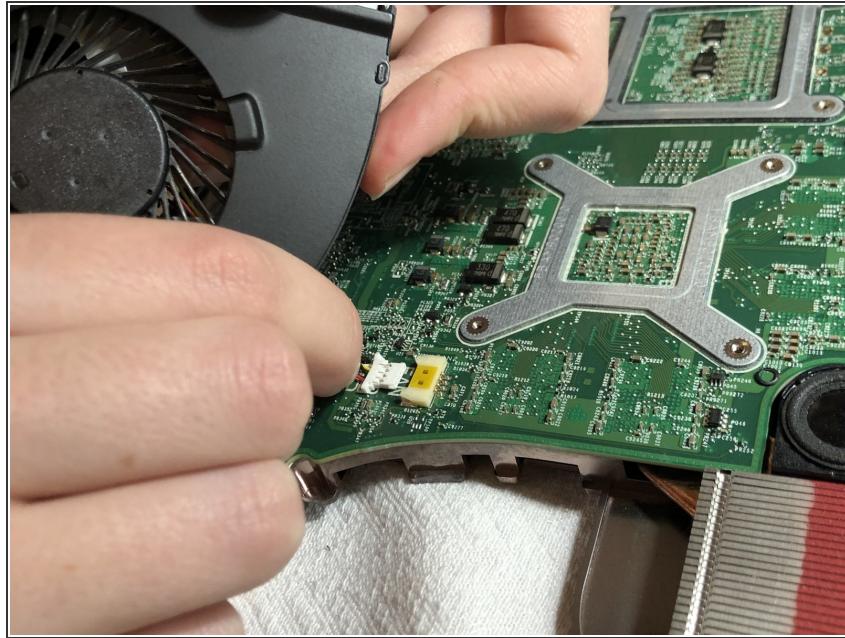

- Remove the fan's cable from the board.

Step 16

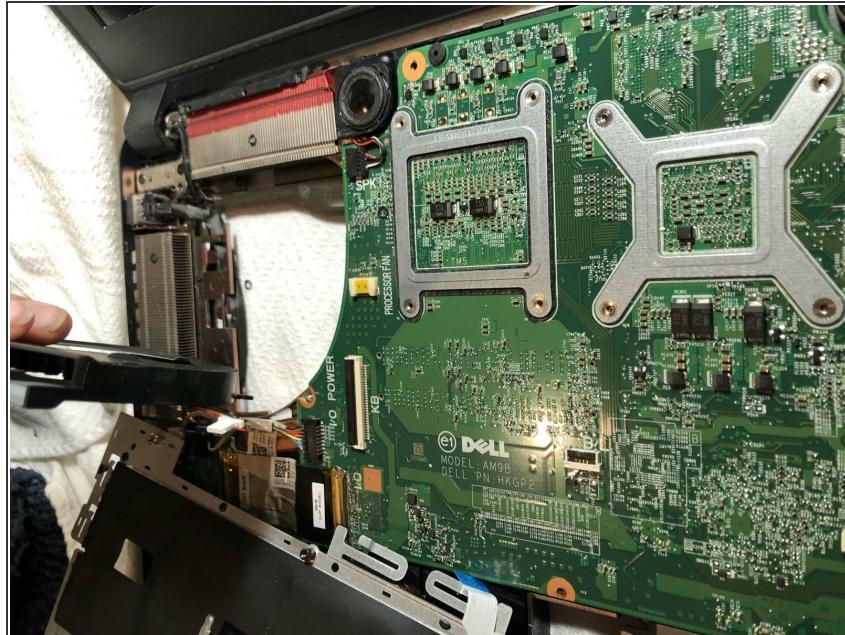

- Repeat steps 14 and 15 for the remaining fan.

To reassemble your device, follow these instructions in reverse order.