



Dell Inspiron 15 N5040 Display Assembly Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Display Assembly.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws




⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in "["Before You Begin"](#)".

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Remove the two screws from the computer base.

Step 2 — Disconnect the Display Cable

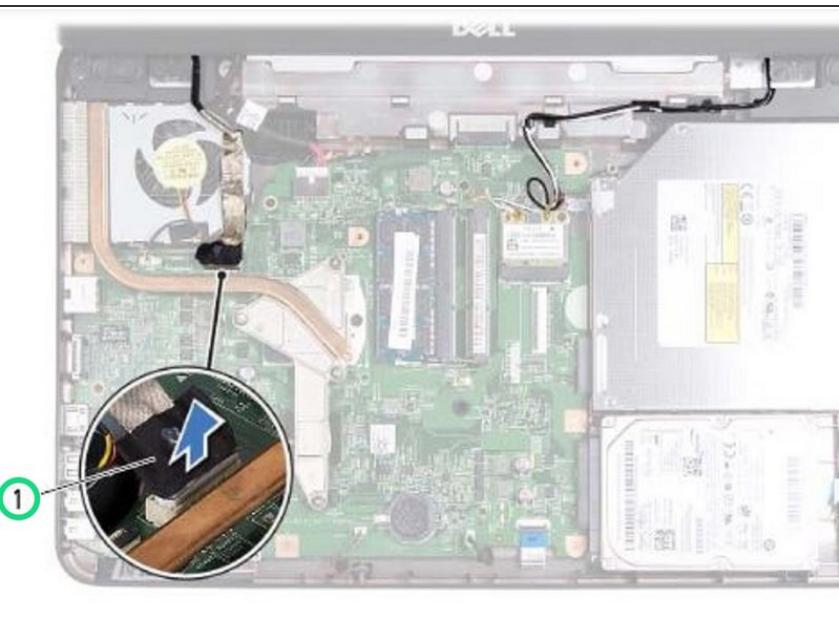

- Disconnect the display cable from the connector on the system board.

Step 3 — Remove the Cables

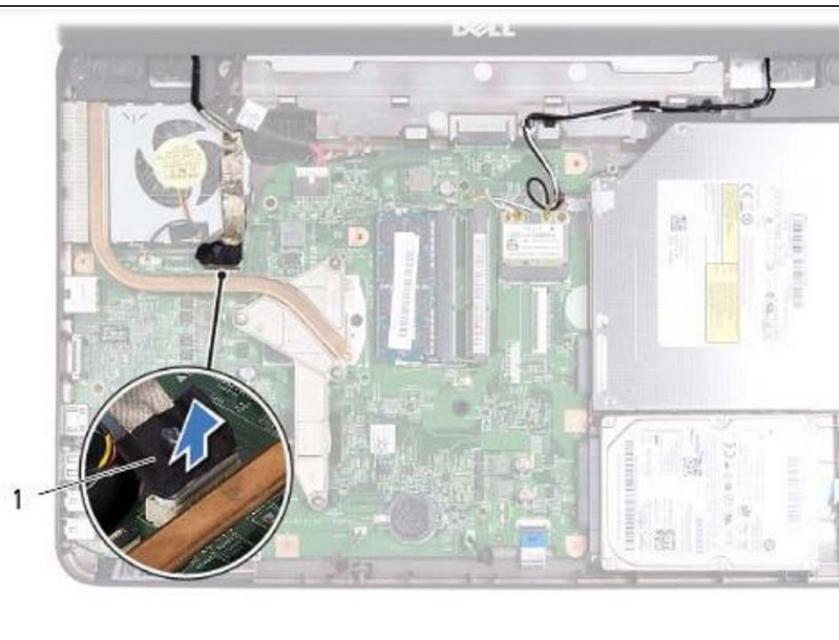

- Make a note of the display cable and Mini-Card antenna cables routing and remove the cables from the routing guides.

Step 4 — Remove the Screws



- Remove the four screws (two on each side) that secure the display assembly to the computer base.

Step 5 — Remove the Display Assembly




- Lift and remove the display assembly out of the computer base.

Step 6 — Placing the Display Assembly




- Place the **NEW** display assembly in position and replace the four screws (two on each side) that secure the display assembly to the computer base.

Step 7 — Routing the Display Cable

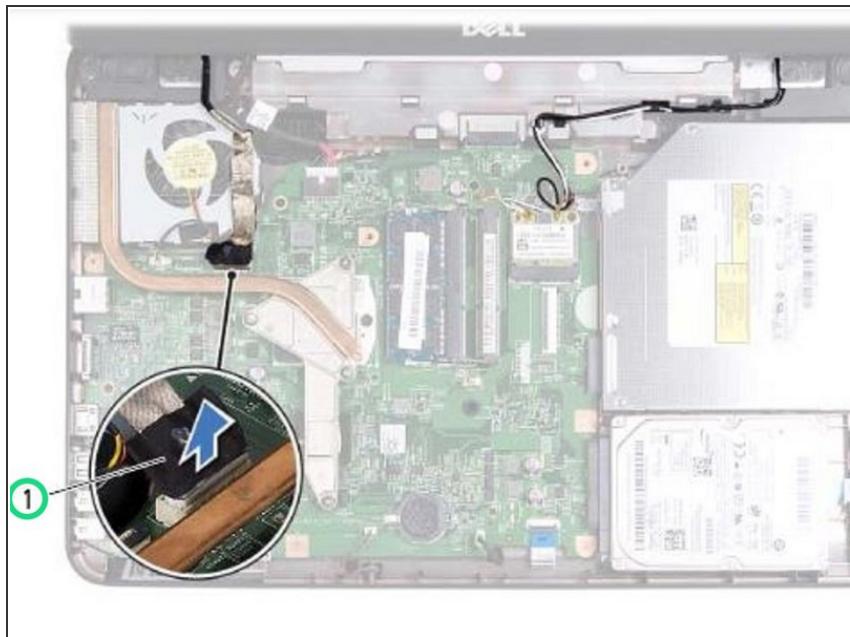

- Route the display cable and Mini-Card antenna cables through the routing guides.

Step 8 — Connect the Display Cable

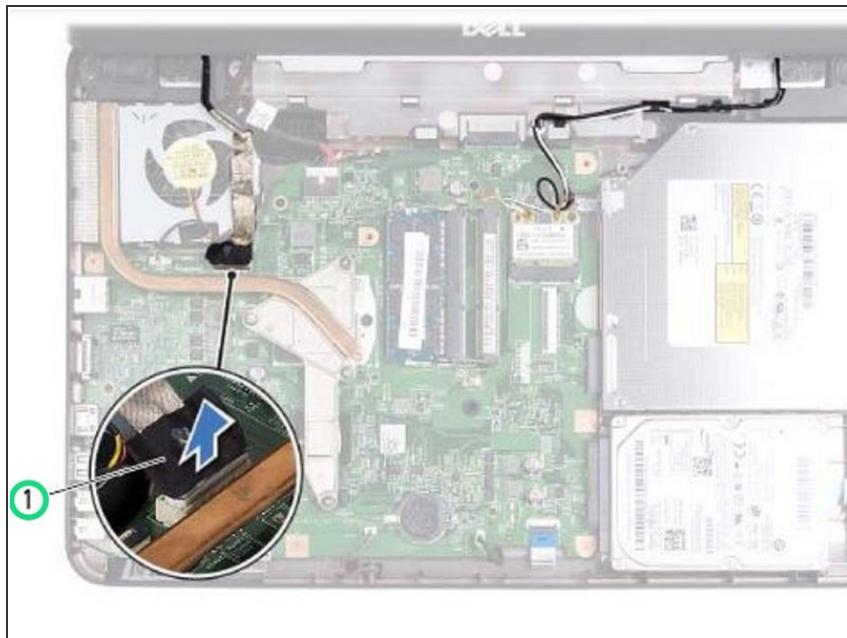

- Connect the display cable to the connector on the system board.

Step 9 — Replace the Screws



- Replace the two screws to the computer base.