




Dell Inspiron 15-3531 Hard Drive Replacement

Replace your hard drive failing to store information or to increase your laptop's storage capacity.

Written By: Kody Dahlke

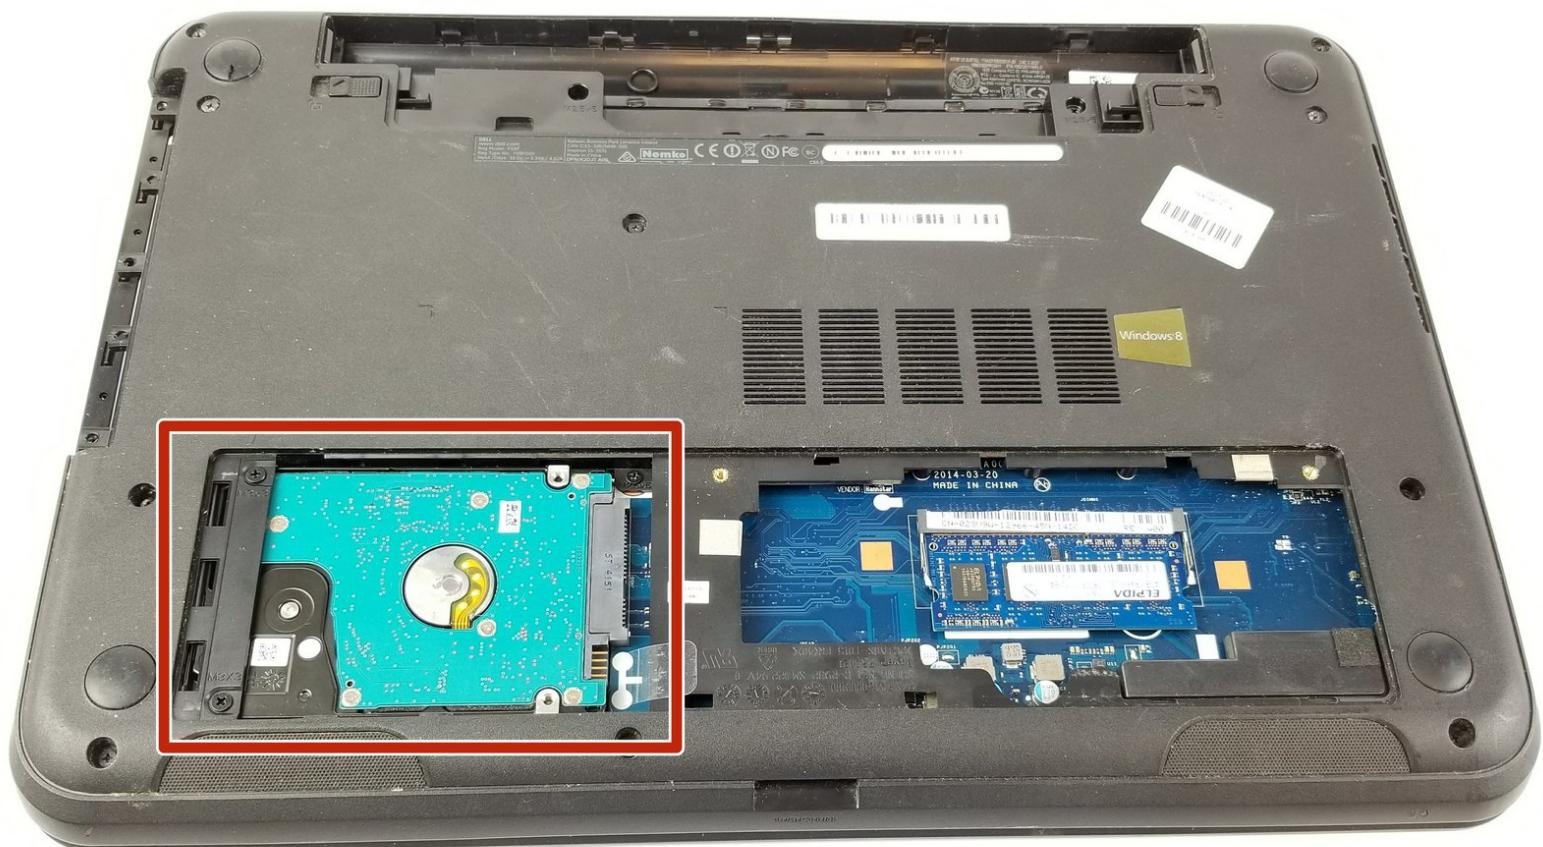

INTRODUCTION

As laptop hard drives age, they have a chance to fail or run out of storage space and may need to be replaced. Make sure the hard drive is at room temperature and not near any hazardous materials that could melt or destroy the hard drive during the removal process.

TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Battery



 Remove the battery to avoid electrical discharge while working with this system.


- Flip the laptop over.
- Slide the latches toward the edges to unlock the battery.
- Lift the battery out of the laptop.

Step 2 — Hard Drive



- Loosen the two screws on the access panel using the PH1 head screwdriver.
- Pry the access panel from the laptop using the spudger.


Step 3

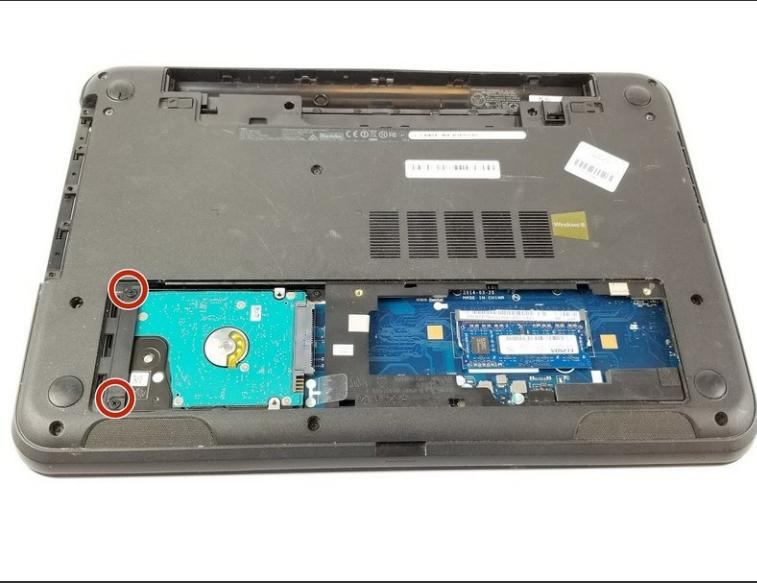

- Lift the access panel away from the laptop to reveal the hard drive on the left.
- Remove the two 8.65 mm screws on the left side of the hard drive using the PH0 head screwdriver.

ⓘ There is a plastic tab beneath the hard drive.

Step 4

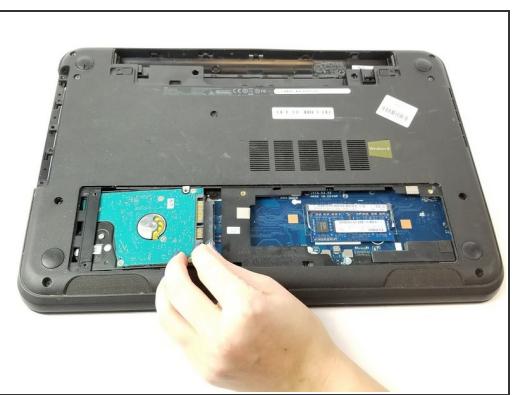

- Push the hard drive to the left to release it and use the tab to pull it free from the laptop. The hard drive is in a caddy.
- Remove the two 1.22 mm screws holding the hard drive in the caddy with the PH0 head screwdriver.

To reassemble your device, follow these instructions in reverse order.