



Dell Inspiron 15-5548 RAM Replacement

This guide will show how to replace the RAM in a Dell Inspiron 15-5548 Laptop.

Written By: Jacob Cotton



INTRODUCTION

This guide will show how to replace the RAM in a Dell Inspiron 15-5548 Laptop.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — RAM



 Unplug and power off the laptop.


- Turn the laptop over and locate both screws on the bottom.
- Unscrew the screws with a Phillips 00 Screwdriver.

Step 2



- Use the prying tool to pull up on the bottom cover.

Step 3

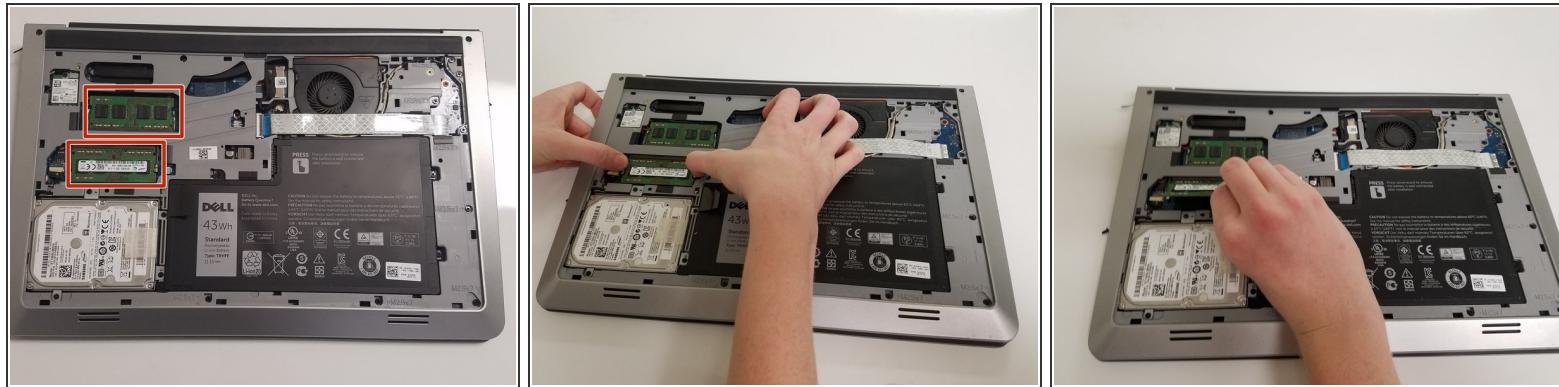

- Locate the RAM sticks on the left side of the device.
- Pull the metal tabs apart on both ends of the RAM stick.
- The RAM stick will pop up. Gently pull the RAM stick out.

To reassemble your device, follow these instructions in reverse order.