




# Dell Inspiron 15-5552 Battery Replacement

The following guide will give instructions on how to properly replace the battery on your Dell Inspiron 15-5552.

Written By: Mitchell Roberts

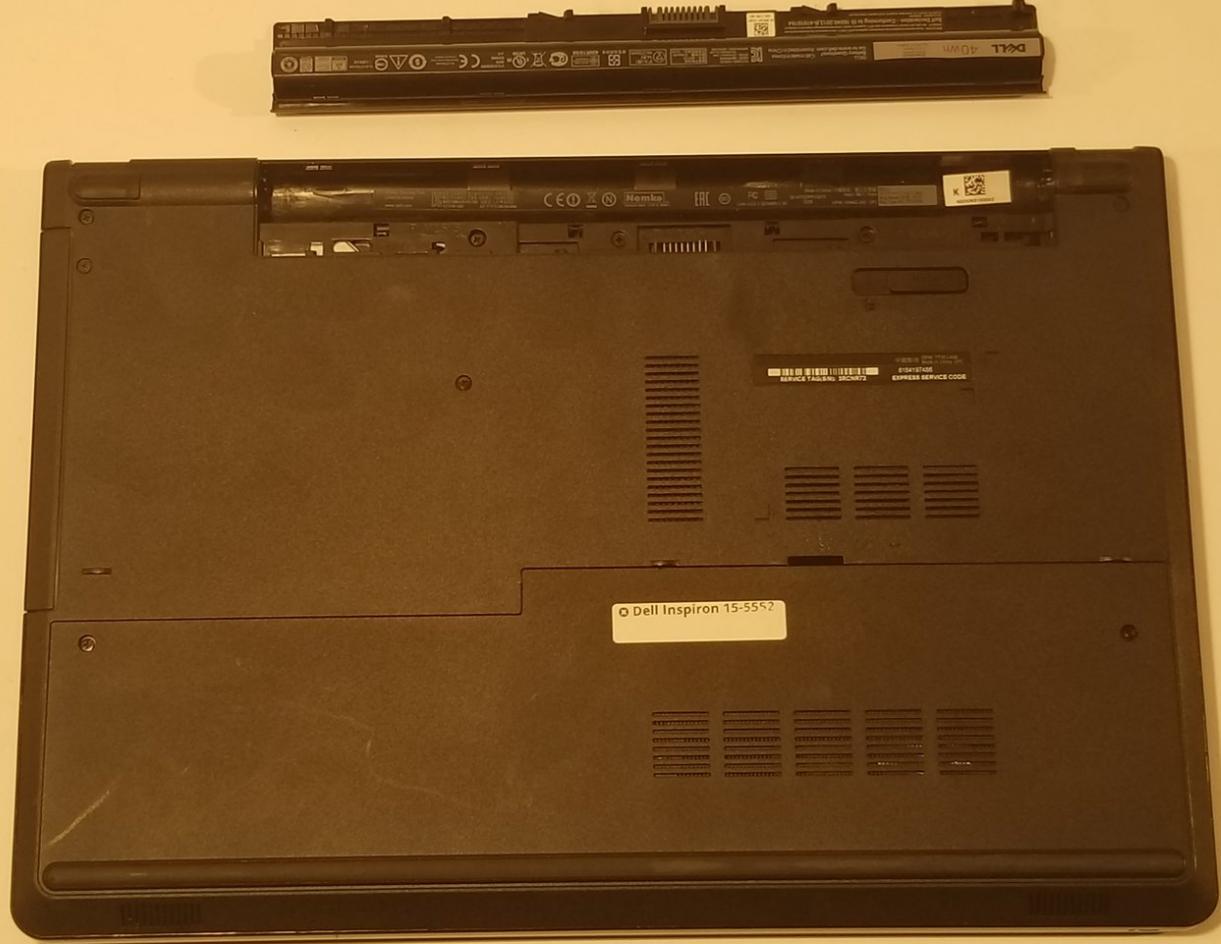


## Step 1 — Battery




- Make sure the laptop is powered down before you remove the battery.

## Step 2

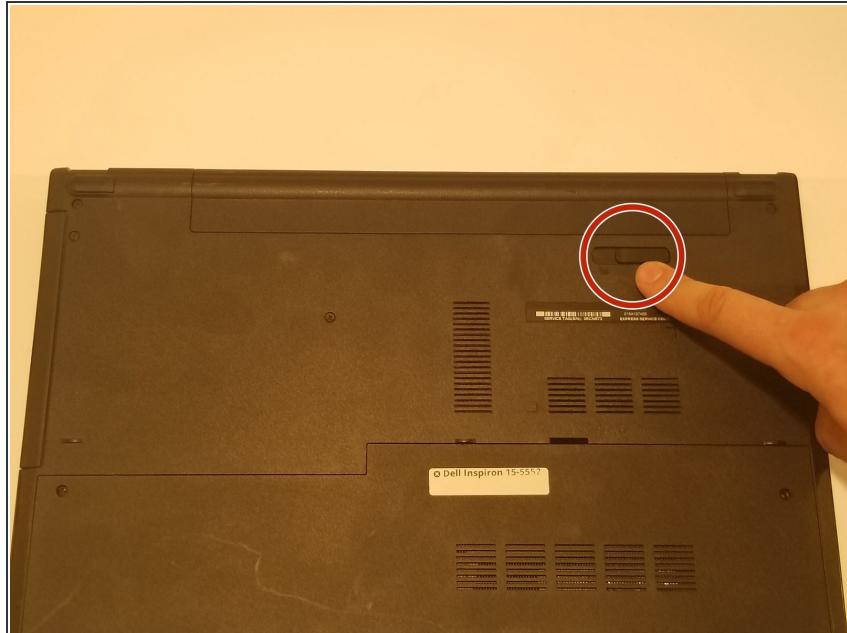


- Locate the battery release switch on the bottom of the laptop.

## Step 3

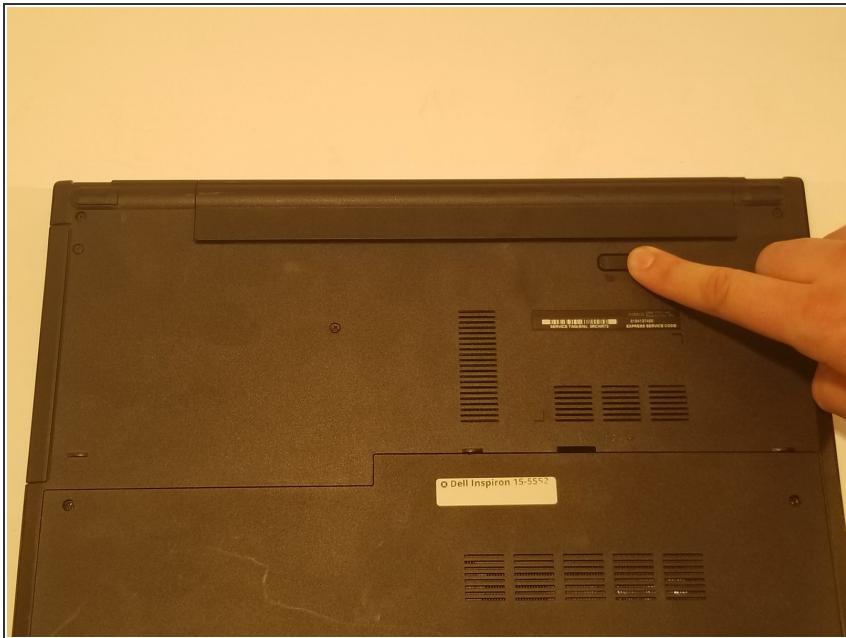

- Slide the battery release switch away from the lock symbol towards the “unlock” position.
- *(i)* You can tell that the battery is unlocked once you hear a "click."

## Step 4

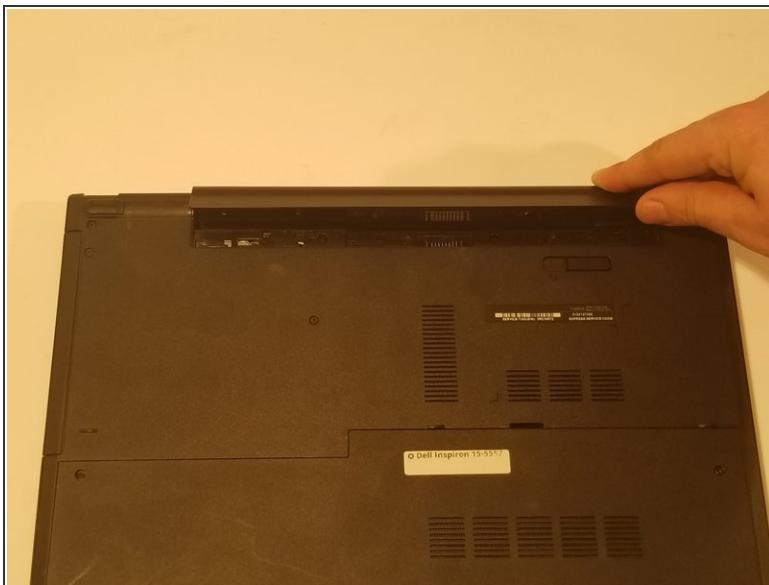

- Rotate the battery outward by lifting the bottom lip that pops out.
- Continue rotating the battery towards the top of the laptop until the battery is completely removed.

To reassemble your device, follow these instructions in reverse order.