


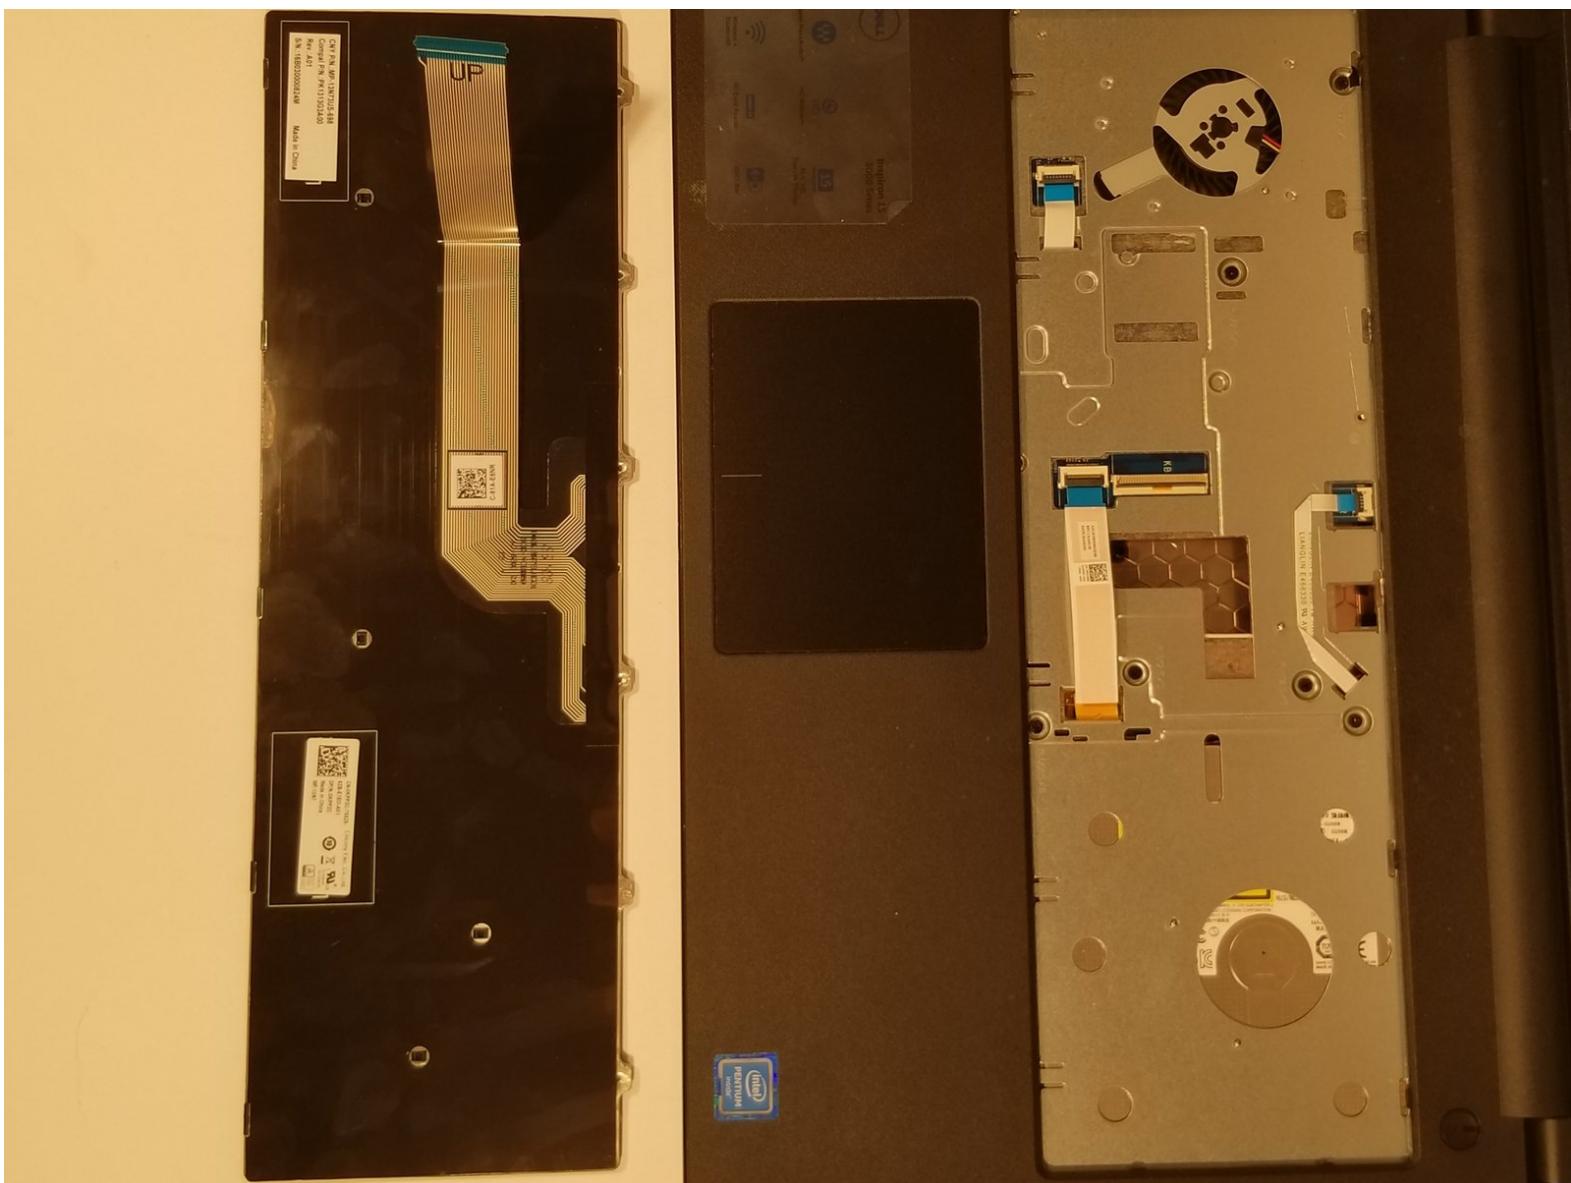

# Dell Inspiron 15-5552 Keyboard Replacement

The following guide will give instructions on how to properly replace the keyboard on your Dell Inspiron 15-5552.

Written By: Chandler Champion



 **TOOLS:**


- [JIS #0 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery




- Make sure the laptop is powered down before you remove the battery.

## Step 2

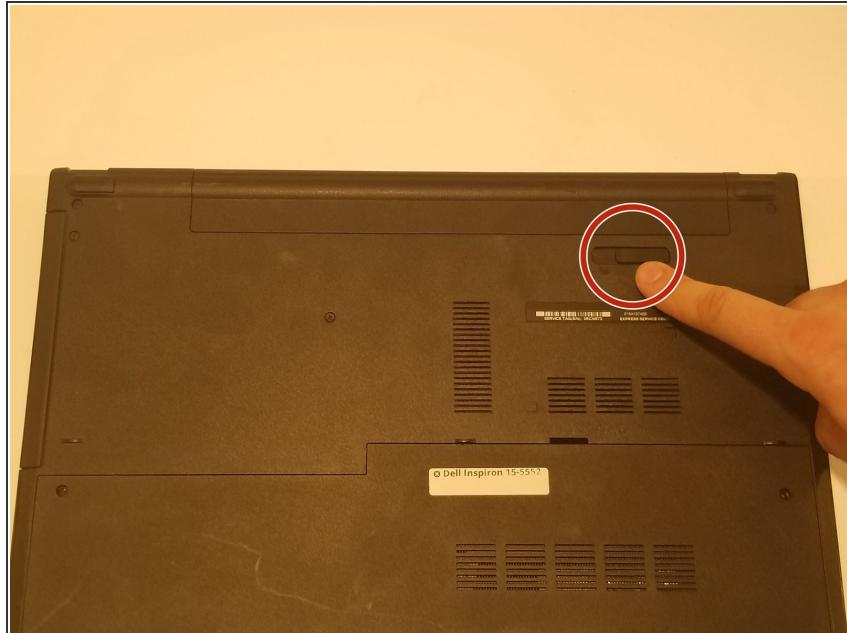


- Locate the battery release switch on the bottom of the laptop.

## Step 3

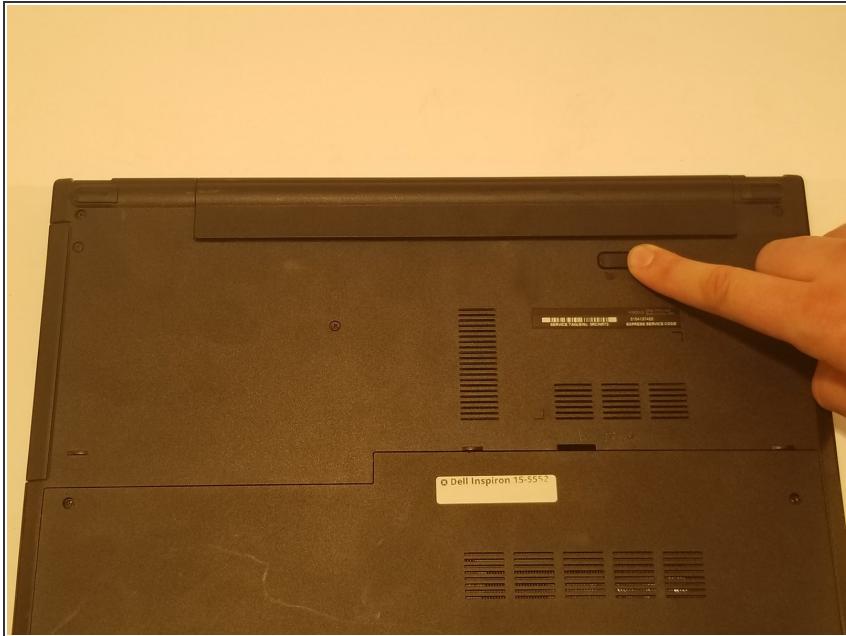


- Slide the battery release switch away from the lock symbol towards the “unlock” position.
- *(i)* You can tell that the battery is unlocked once you hear a "click."

## Step 4

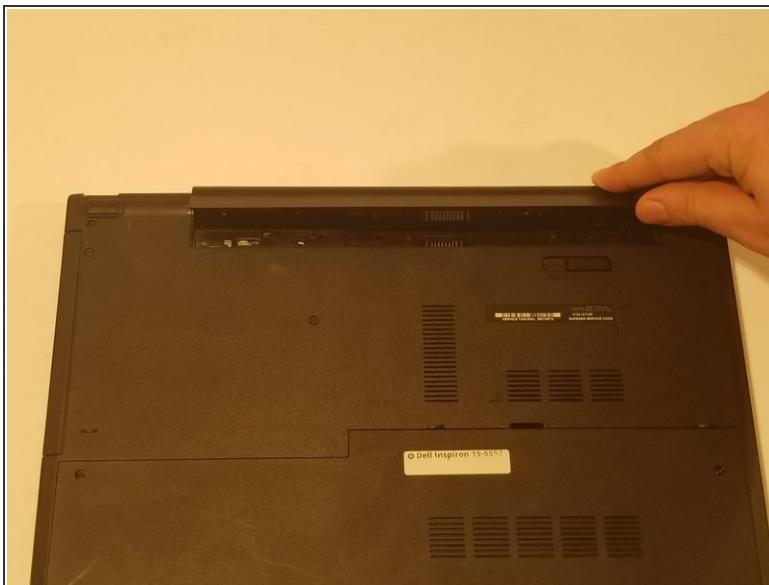

- Rotate the battery outward by lifting the bottom lip that pops out.
- Continue rotating the battery towards the top of the laptop until the battery is completely removed.


## Step 5 — Keyboard

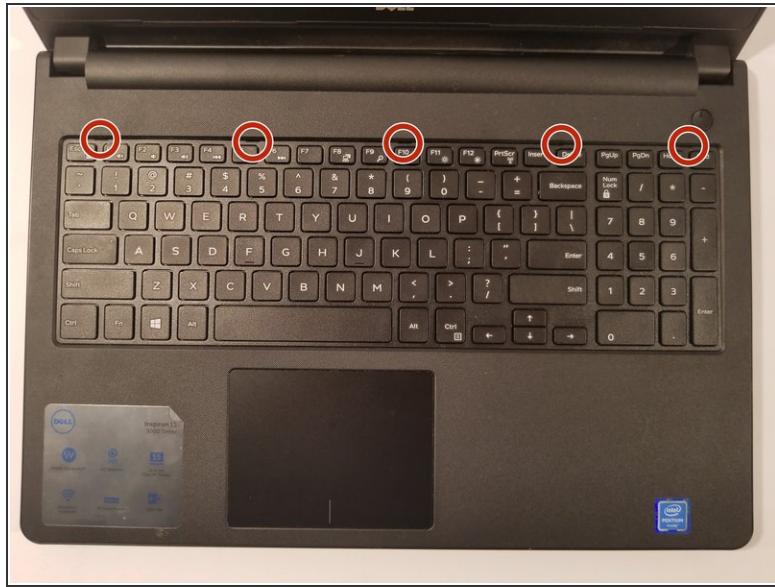

### ● Keyboard

- Insert a spudger next to the 5 plastic indents located at the top of the keyboard and gently pry to release the securing clips.


## Step 6

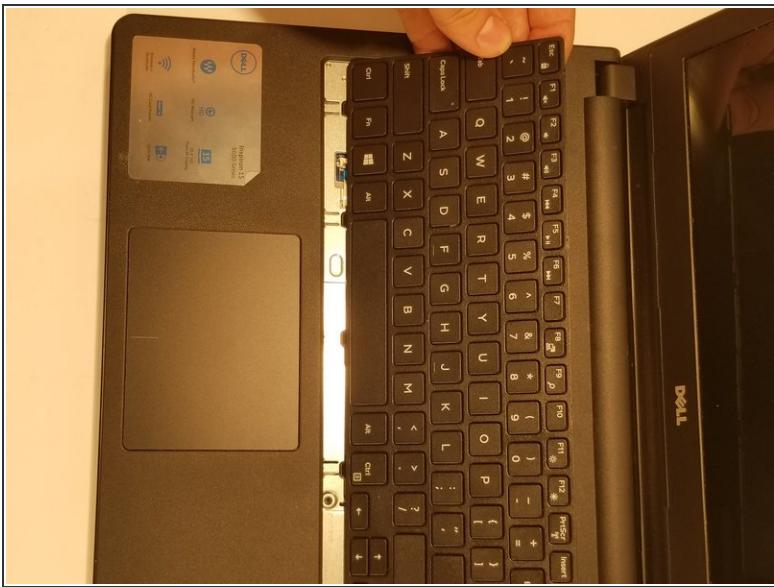

- Lift the keyboard off of the computer. \*Be careful not to tear the ribbon that attaches the back of the keyboard to the computer when lifting it.\*


This document was generated on 2020-03-13 05:56:19 AM (MST).

## Step 7

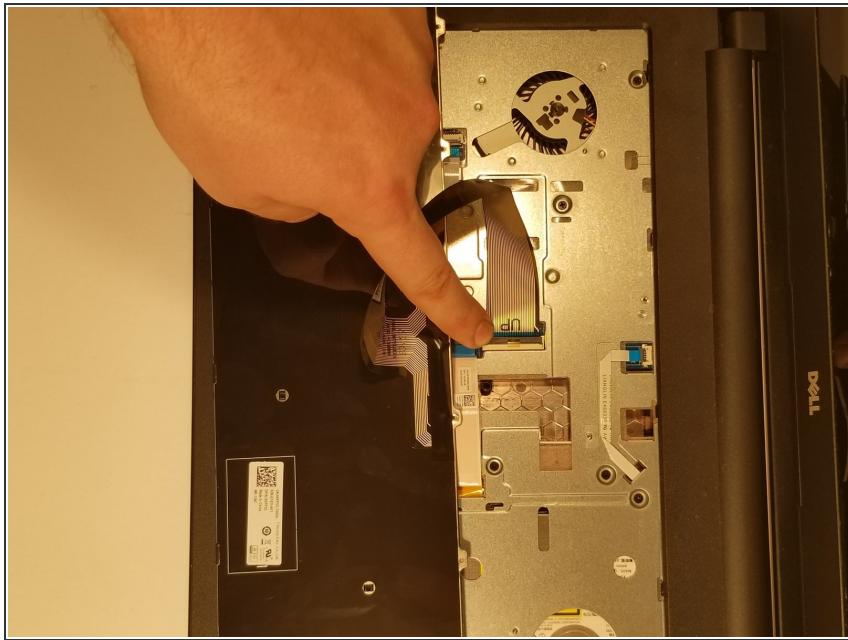

- Flip the keyboard over onto the palm-rest assembly.

## Step 8

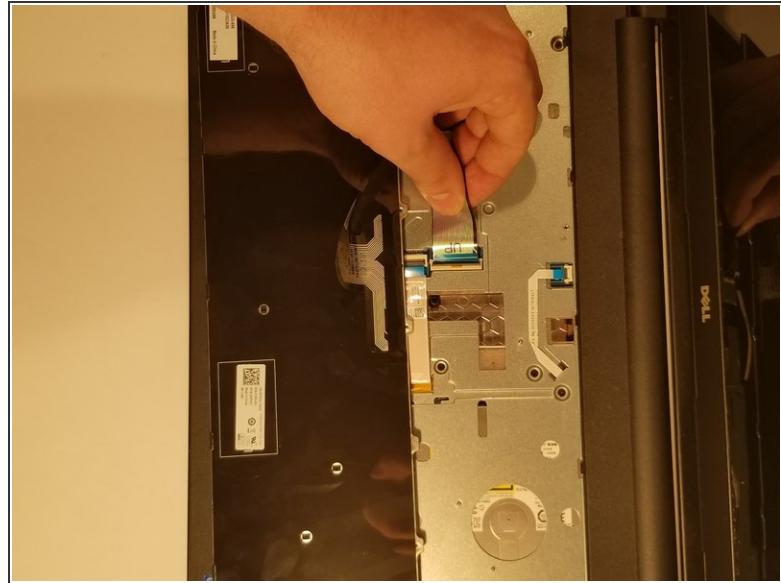

- Flip the black securing bar near the base of the ribbon with a spudger to release the ribbon from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-03-13 05:56:19 AM (MST).

