




Dell Inspiron 15-5558 Keyboard Replacement

This guide will show you how to remove and replace the Dell Inspiron 15-5558's keyboard.

Written By: Adam Lourenco

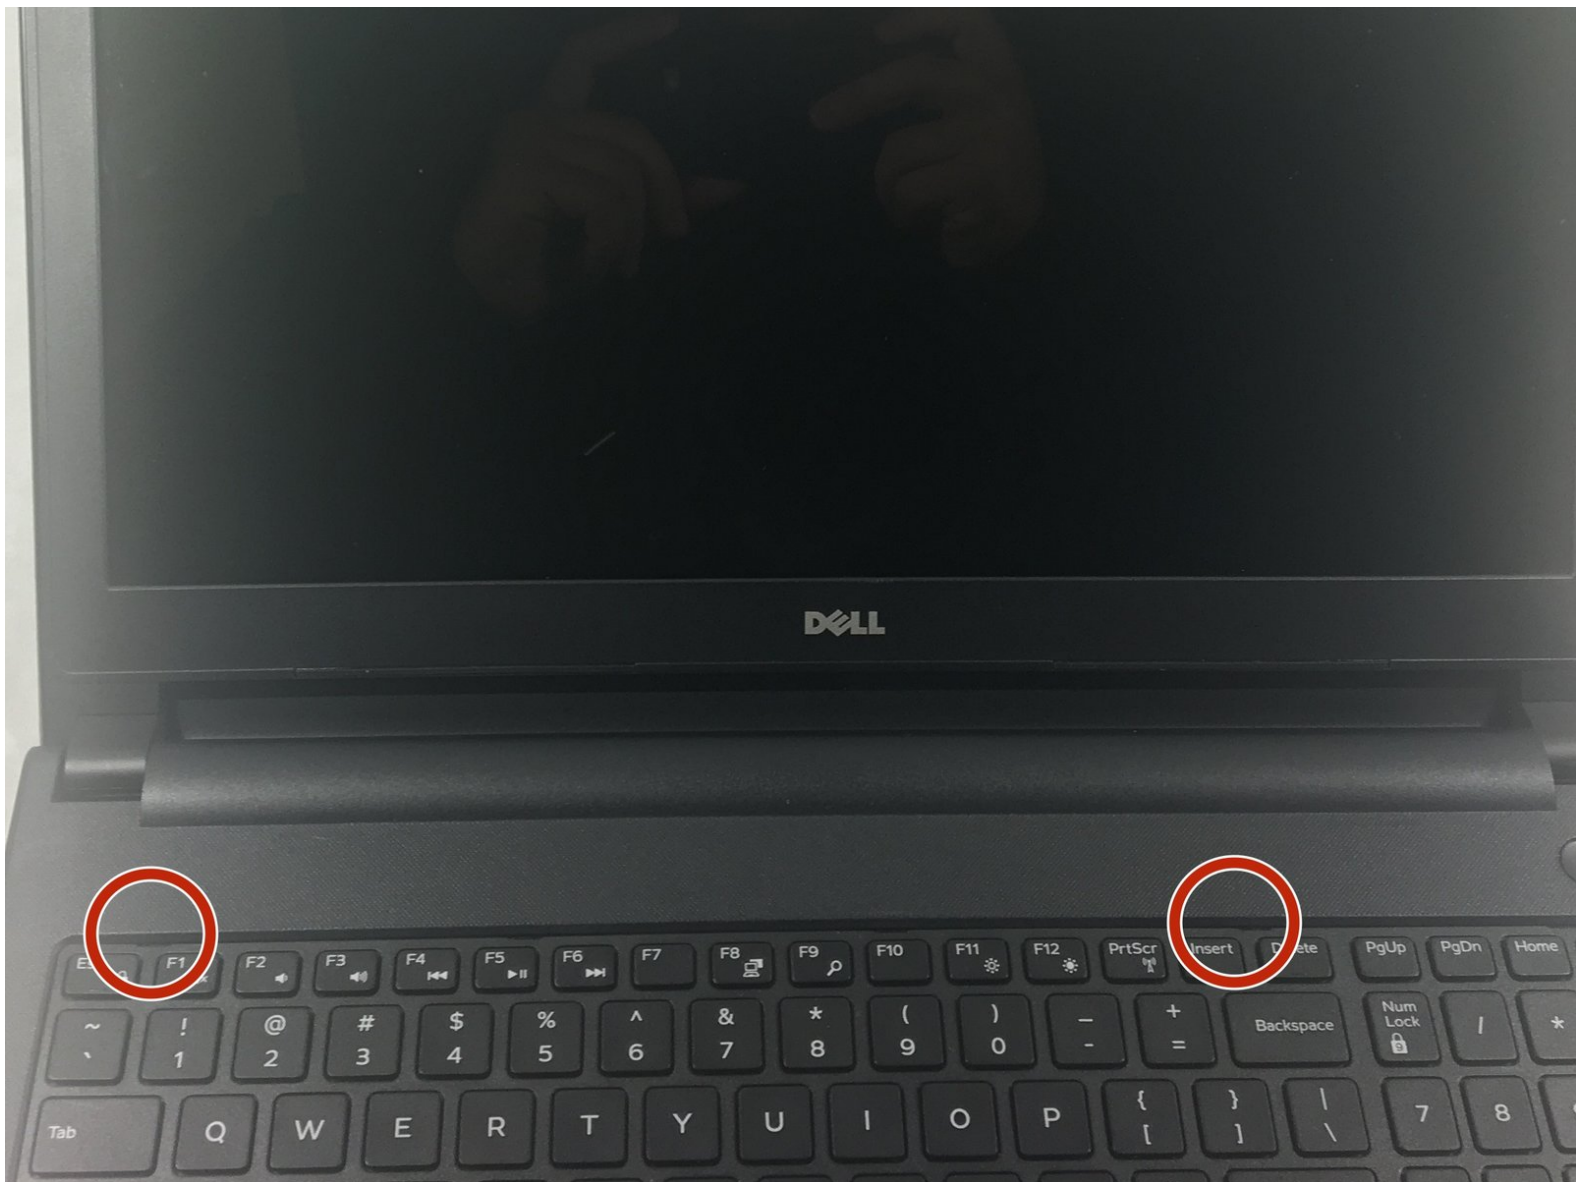

INTRODUCTION


If your keyboard buttons are stuck or missing you might need to replace the keyboard. This guide will instruct you on how to replace a faulty keyboard.



TOOLS:


- [Spudger](#) (1)
-

Step 1 — Battery

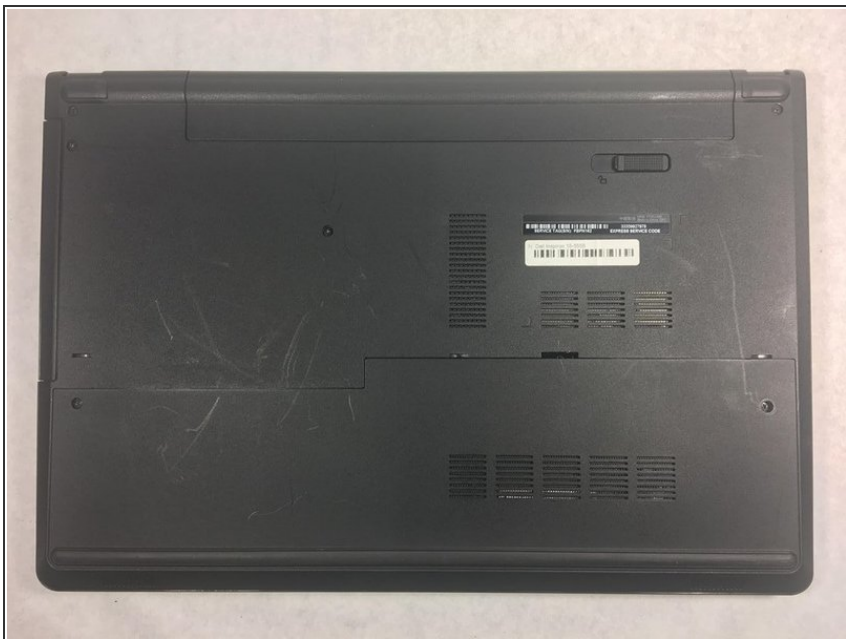



- ① Make sure you turn off the device before starting.
- Flip the device over and so the white bar code is on the right.

Step 2

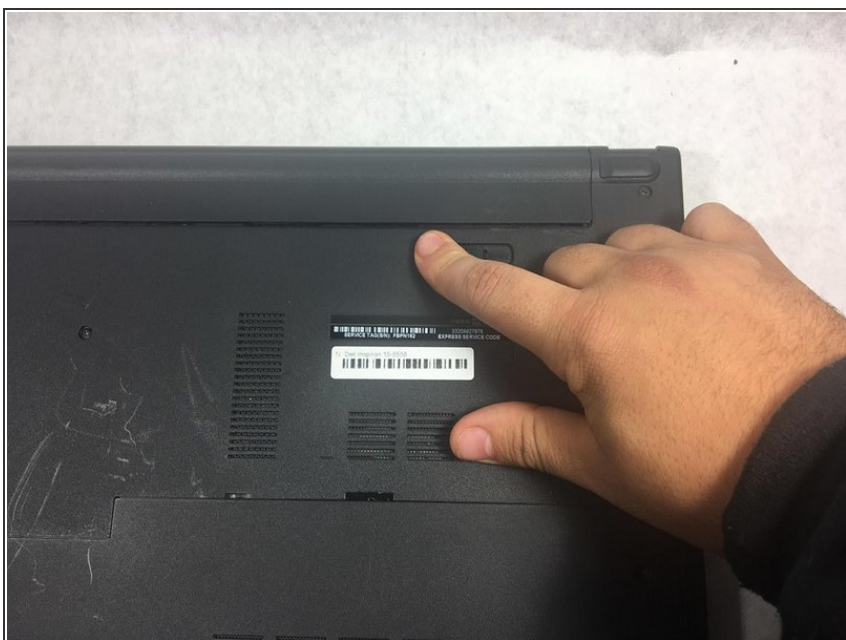




- Slide the battery latch all the way to the left until you hear the click and see the battery prop up.

Step 3

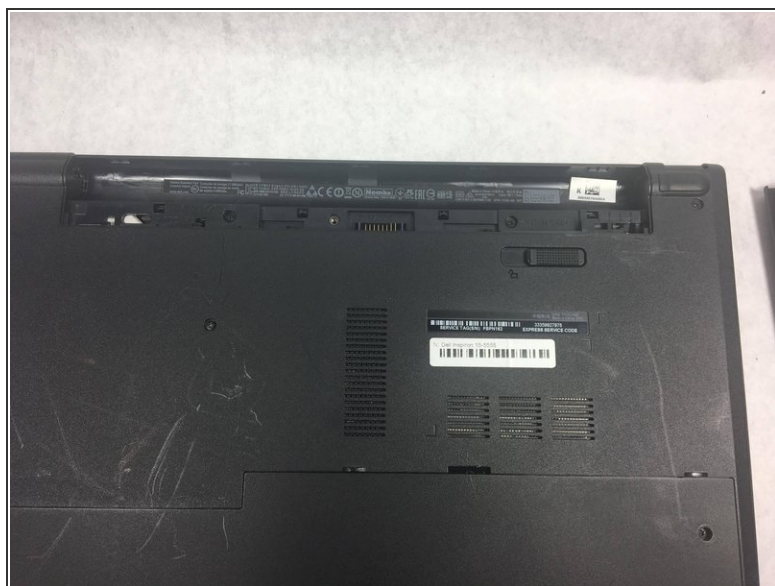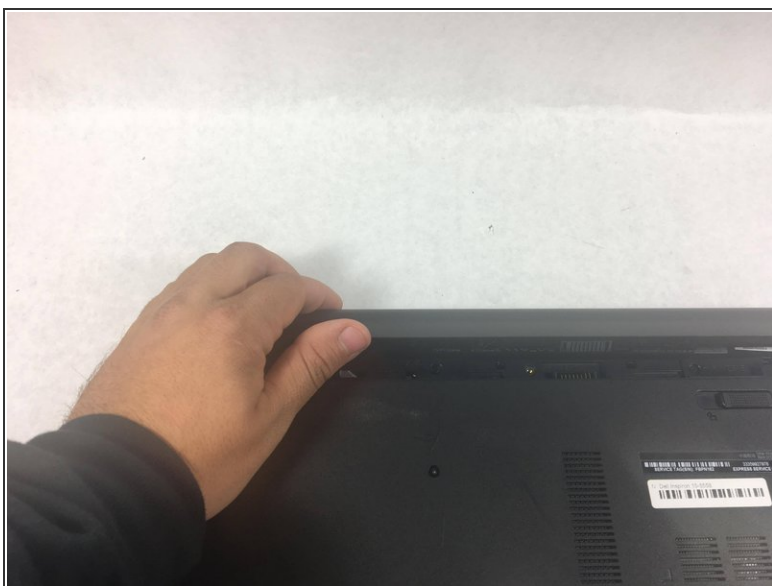

- Rotate the battery up and remove it.

Step 4 — Keyboard

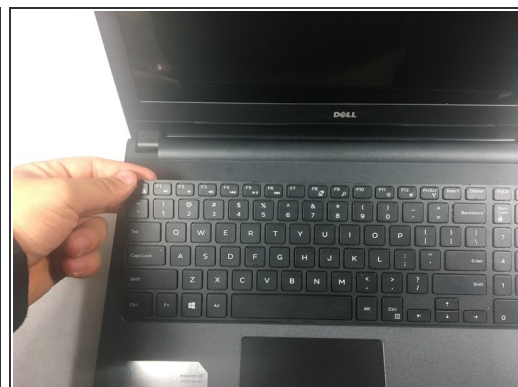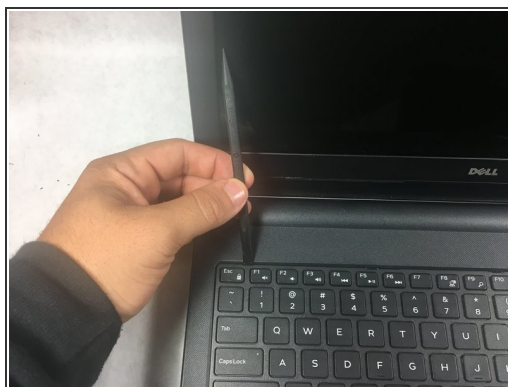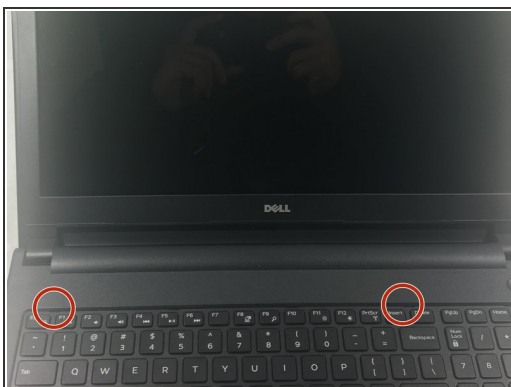

- Identify the two small slots along the side of the keyboard closest to the screen.
- Wedge the spudger in the two small slots and push the spudger in and down to detach the pins.
- Using your hands, pull the keyboard up and out.

Step 5



- At the end of the ribbon cable attaching the keyboard to the device is a bar secure.
- Using your finger or spudger, flip the bar up and the keyboard will be freed from the device.

To reassemble your device, follow these instructions in reverse order.