




Dell Inspiron 15-5559 RAM Replacement

This guide will show you how to remove the RAM in your Dell Inspiron 15-5559 laptop.

Written By: Kyla Ward

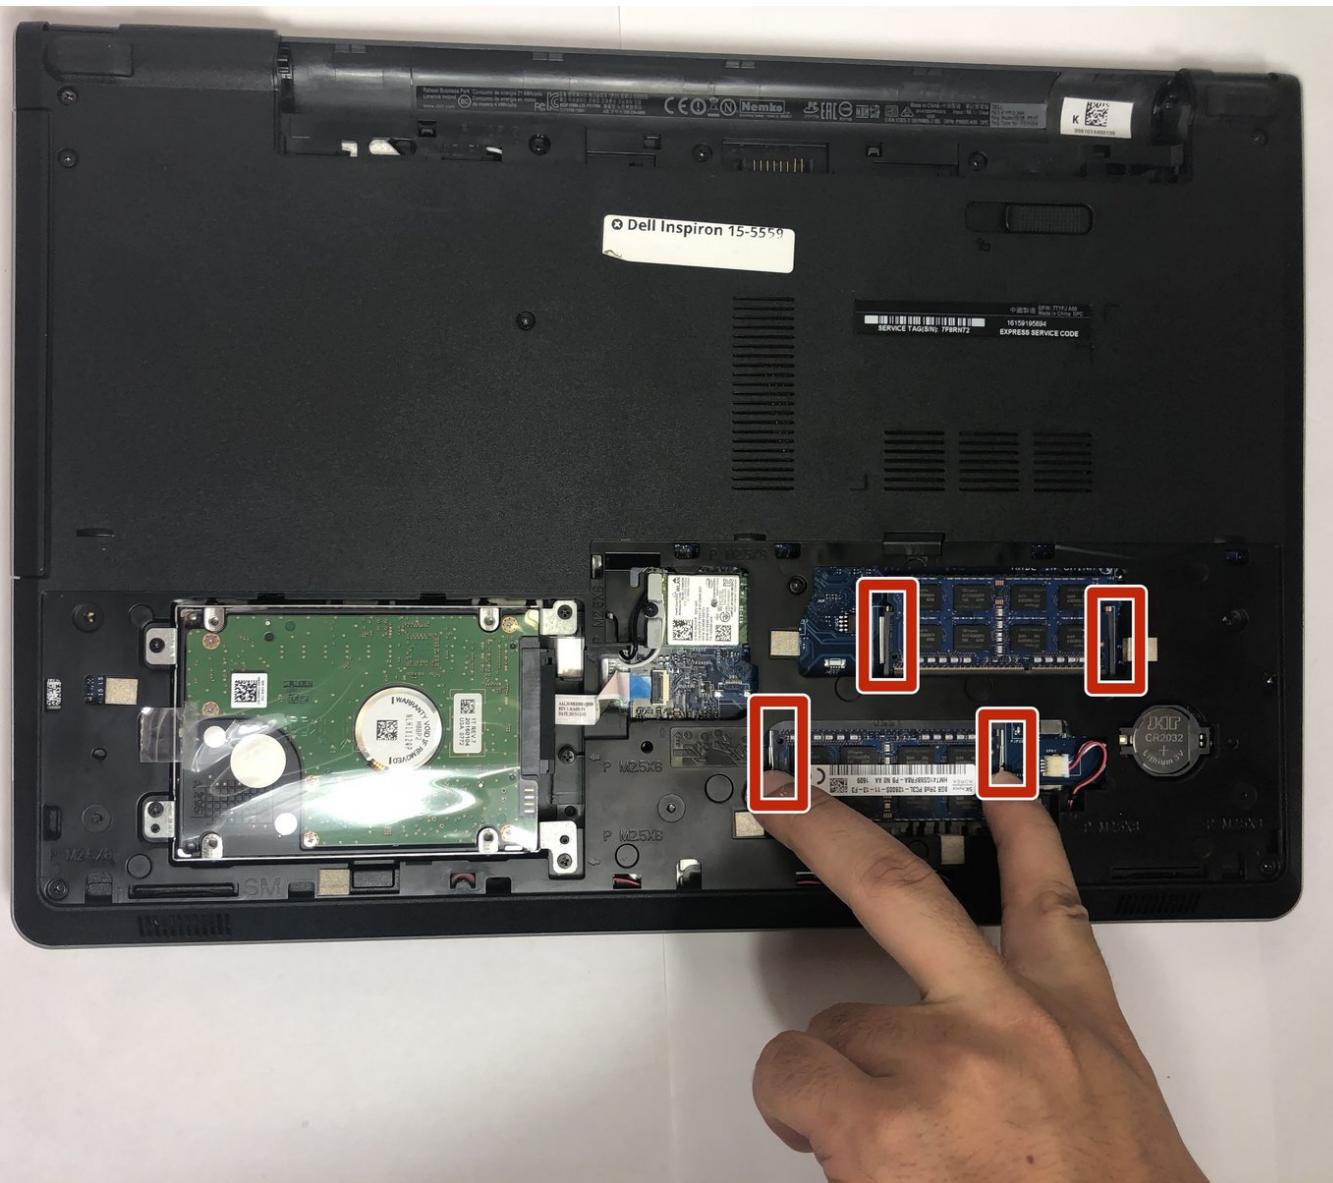

INTRODUCTION

Before you attempt this guide make sure your device is not connected to a power source and be sure that the battery is removed. This guide is relatively easy and doesn't require any special skills.


TOOLS:

- Phillips #1 Screwdriver (1)
- Spudger (1)

PARTS:


- Dell Inspiron 15-5559 Back Panel (1)
- m2.5x8 screws (2)
- Dell Inspiron 15-5559 RAM Memory Stick (2)

Step 1 — Back Panel

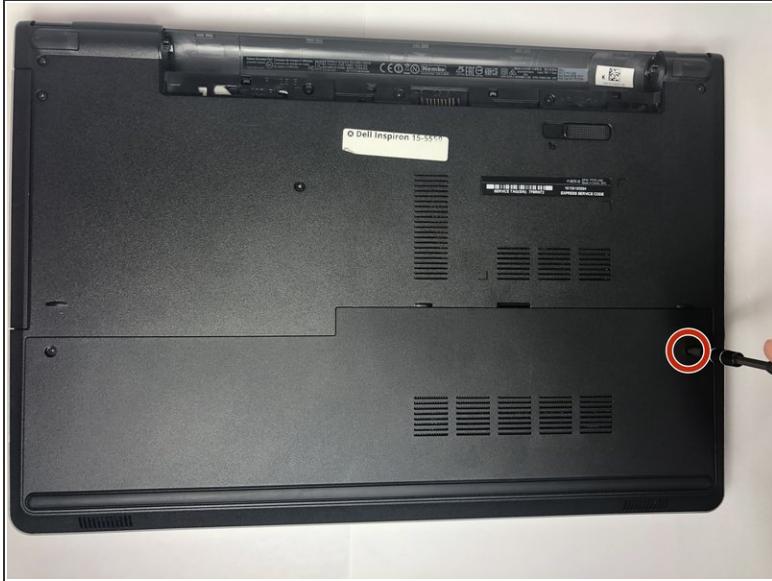

- Use a Phillips #1 screwdriver to remove the two 2.5x8mm screws on the back panel.

Step 2

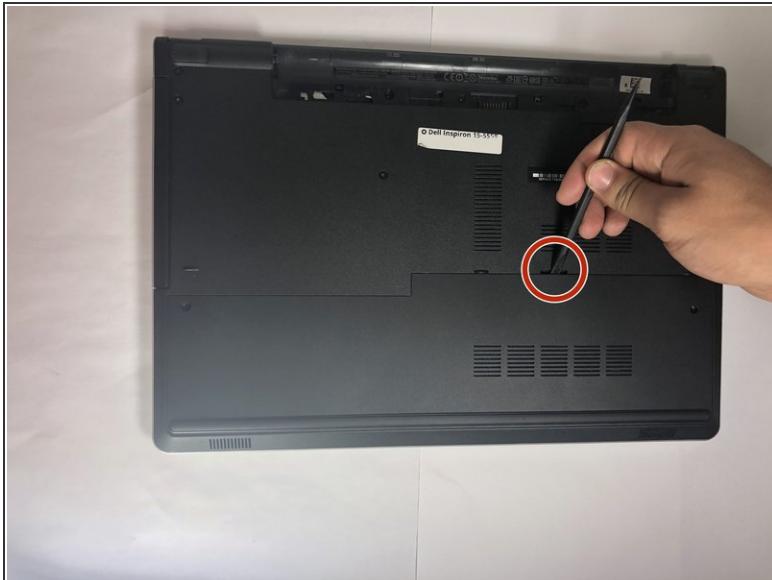

- Place the plastic spudger in the slot. Using the flat side of the spudger pry the back panel upward and off.
- Do not be afraid to use a bit of muscle, as the panel does not come off without some force.

Step 3 — RAM



- Place a finger on each of the 2 metal prongs on either side of the RAM stick and apply light pressure to release the RAM stick.
- Remove the first stick of RAM. Repeat this process for the second RAM stick.

To reassemble your device, follow these instructions in reverse order.