




Dell Inspiron 15-5567 Memory Modules Replacement

How to replace the Memory Modules in a Dell Inspiron 15-5567.


Written By: Terrence15

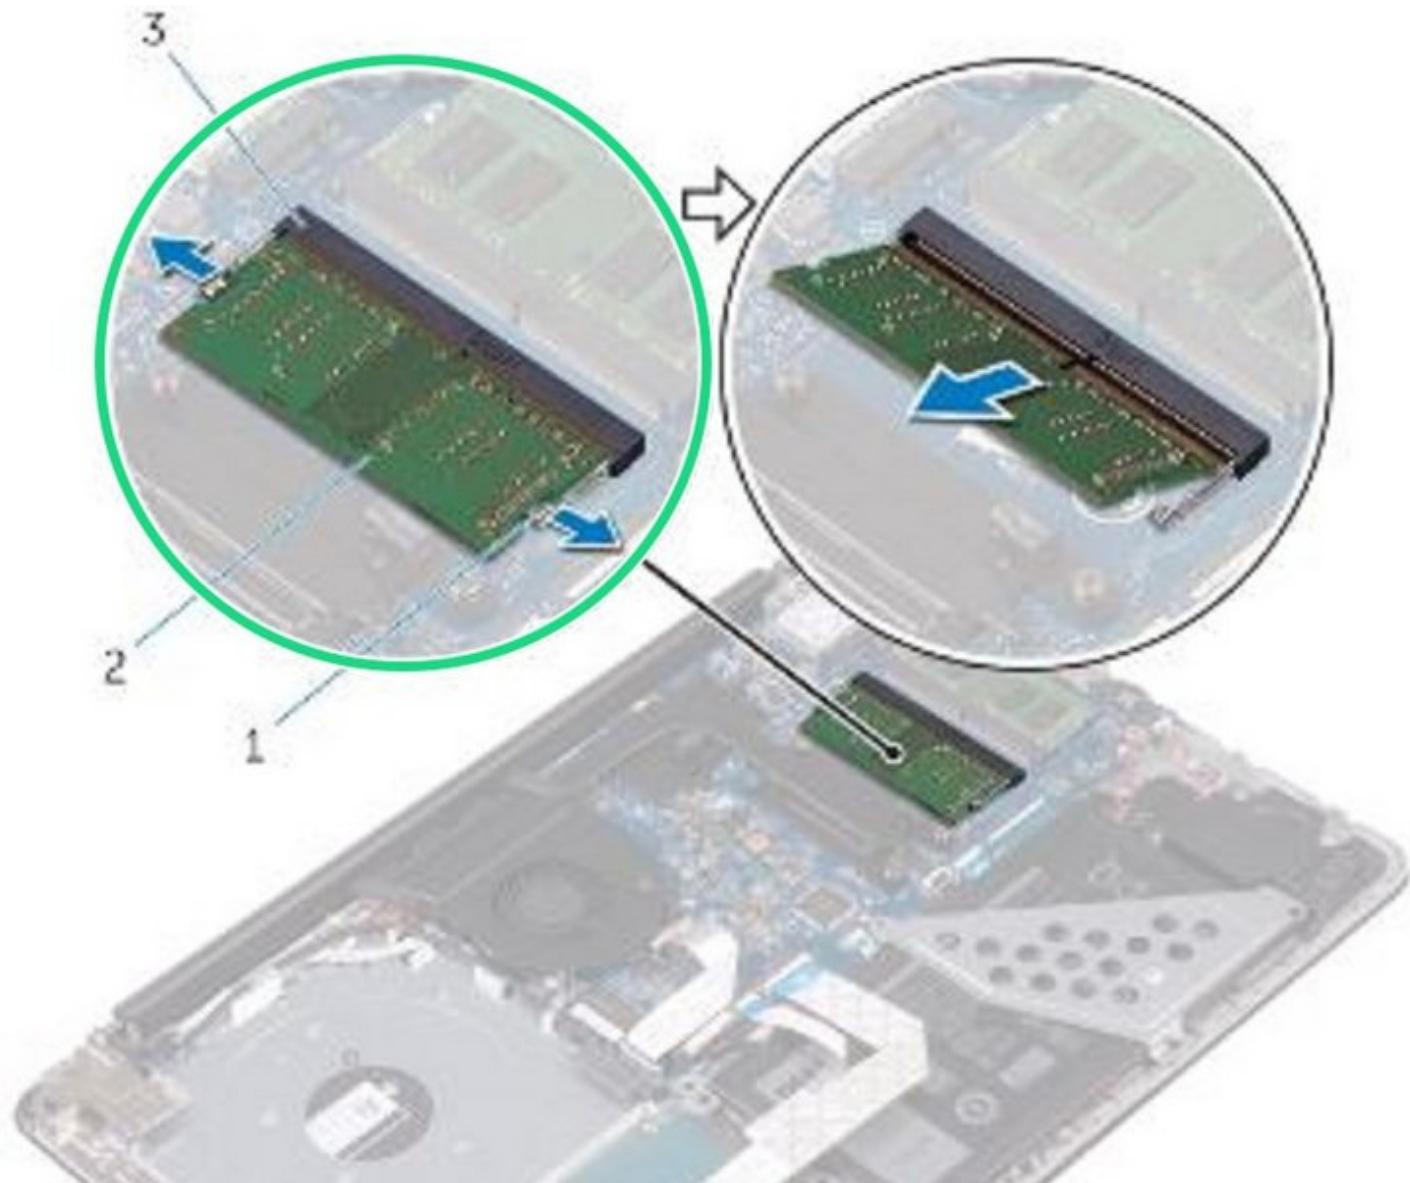

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Modules.


Step 1 — Popping up the Memory Module

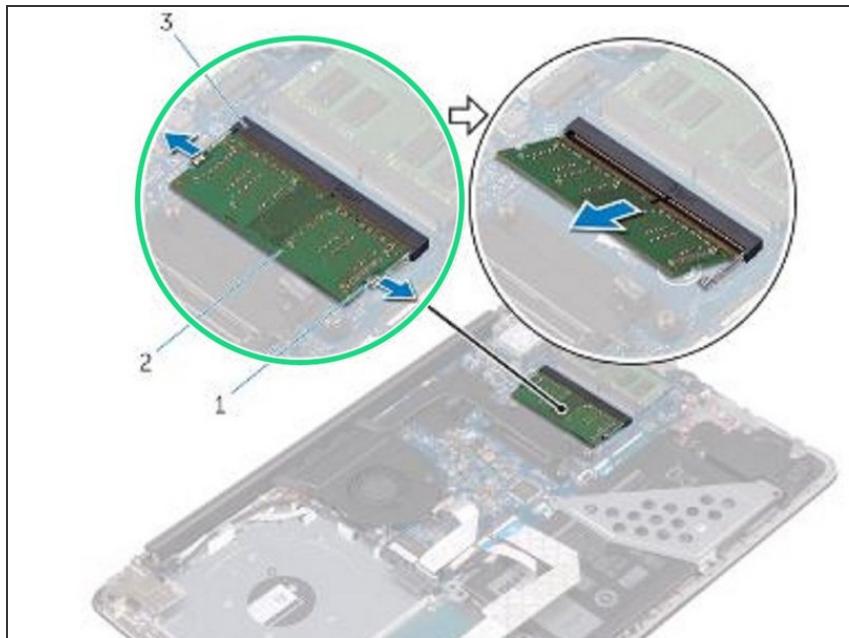

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.

Step 2 — Remove the Memory Module

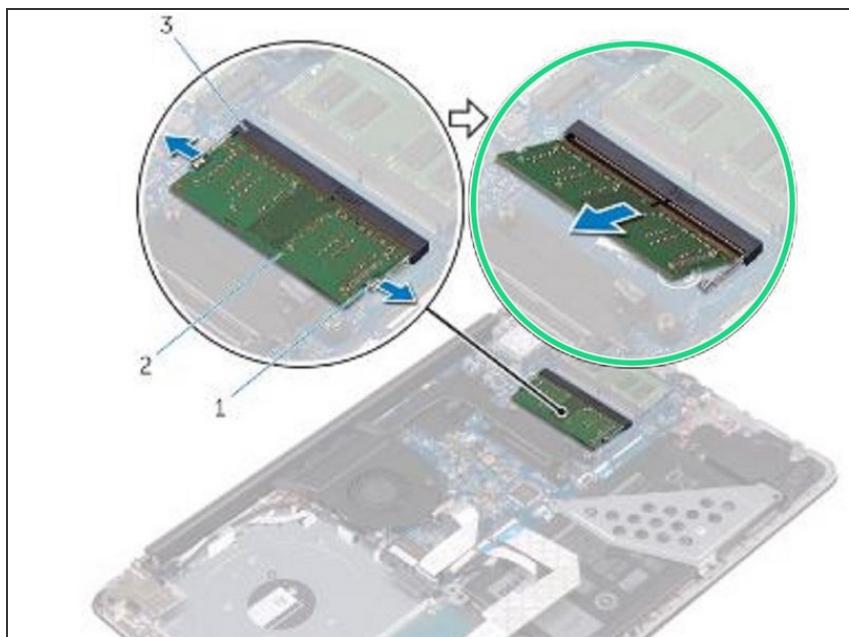


- Remove the memory module from the memory-module slot.

Step 3 — Align the Notch

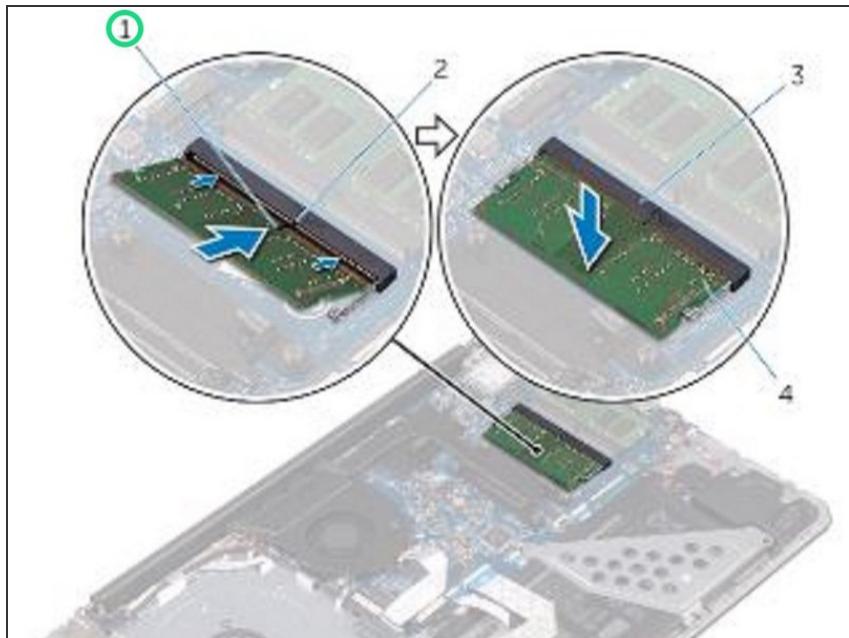

- Align the notch on the **NEW** memory module with the tab on the memory-module slot.

Step 4 — Sliding the Memory Module

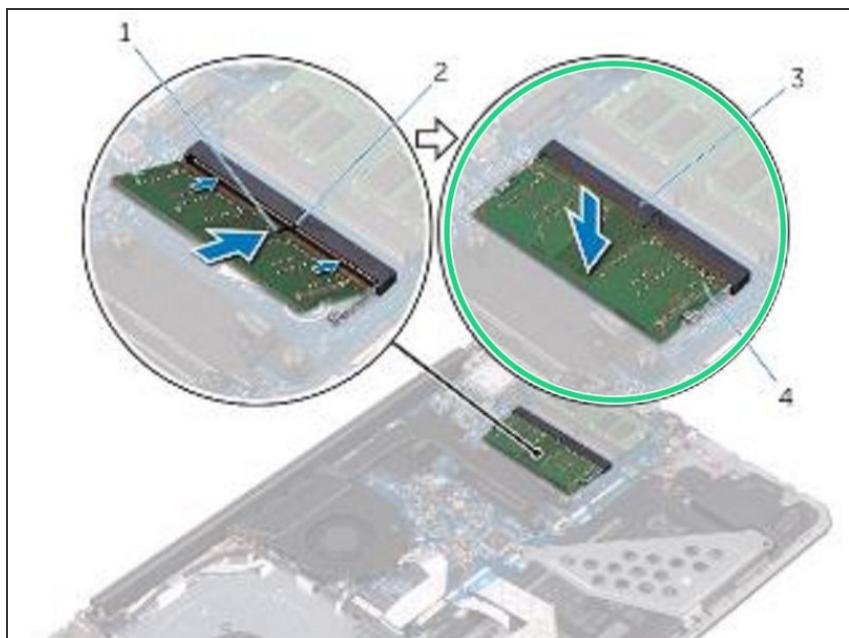

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

(i) NOTE: If you do not hear the click, remove the memory module and reinstall it.