




# Dell Inspiron 15-7537 RAM Replacement

This guide shows you how to remove and replace the RAM.

Written By: Jean Whitmore

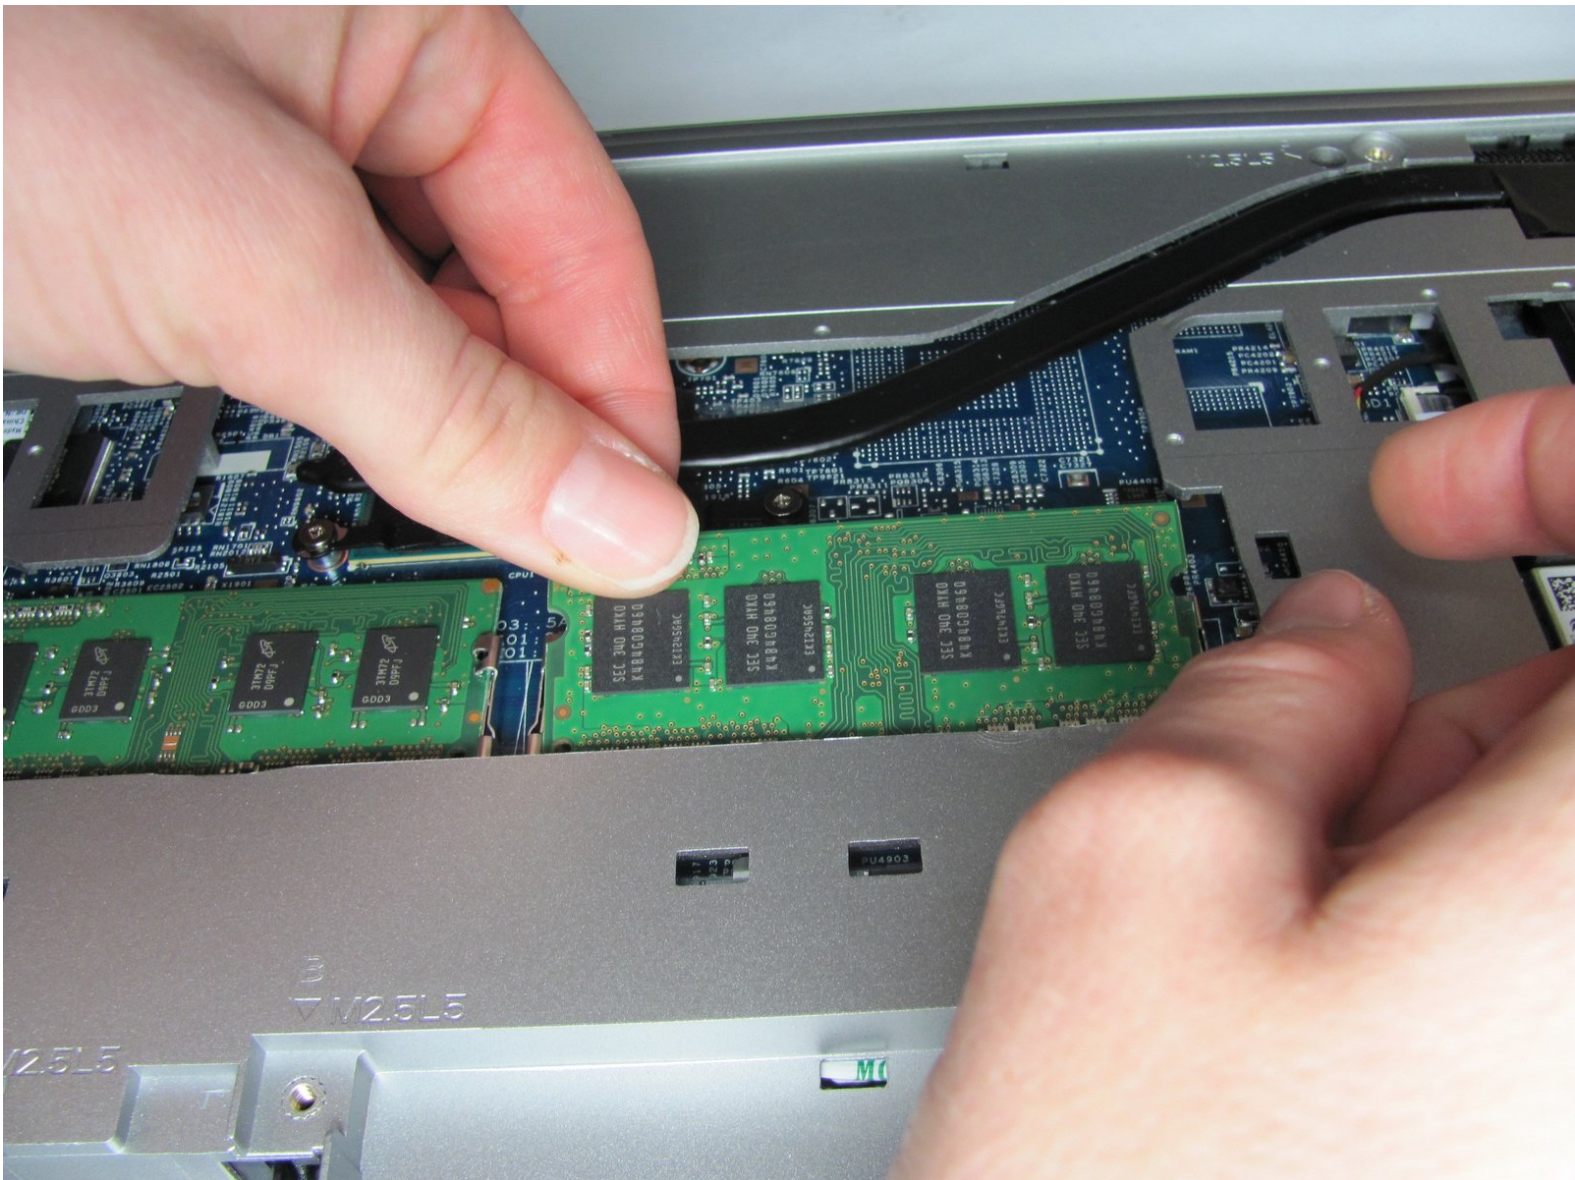

---

## INTRODUCTION

Use this guide to replace the RAM if you would like to upgrade the RAM, or replace it if there is damage.

---



### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Bottom Case



- Make sure the display is closed. Then, flip the computer over so that you can see the bottom cover.
- Loosen the two 5 mm Phillips #0 on the upper edge of the cover.
- ⓘ These screws will stay captive to the case.



## Step 2





- Remove the two 5 mm interior screws that connect the cover to the assembly using the same Philips head screwdriver from the previous step.

## Step 3




- Use a spudger to remove the base cover from the rest of bottom cover.

## Step 4 — RAM

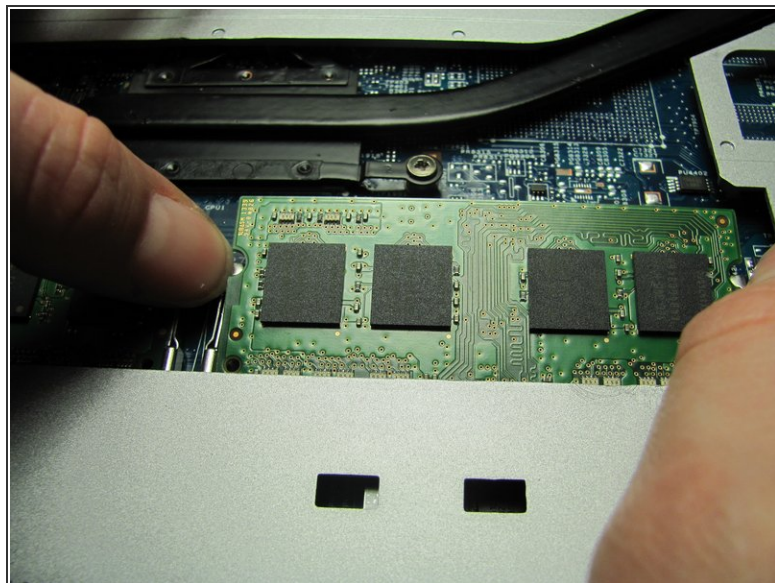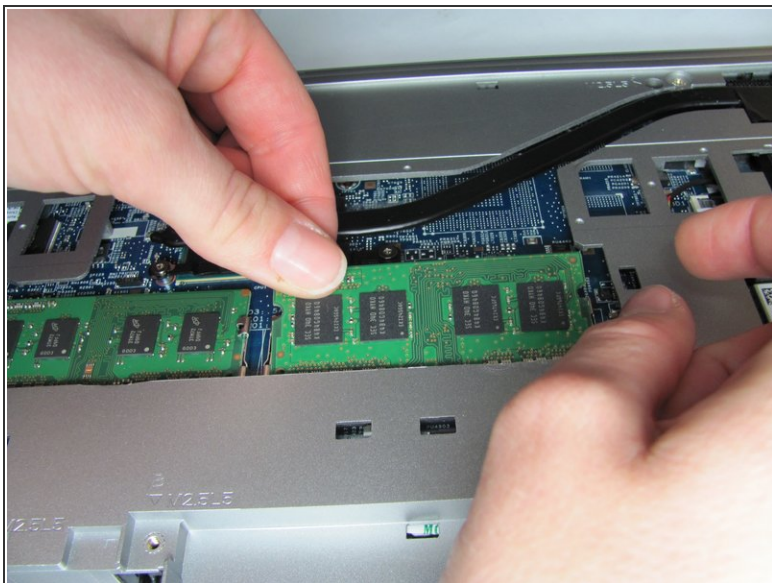

- Gently pull apart clips on the ends of the memory module until the memory module pops up.

## Step 5

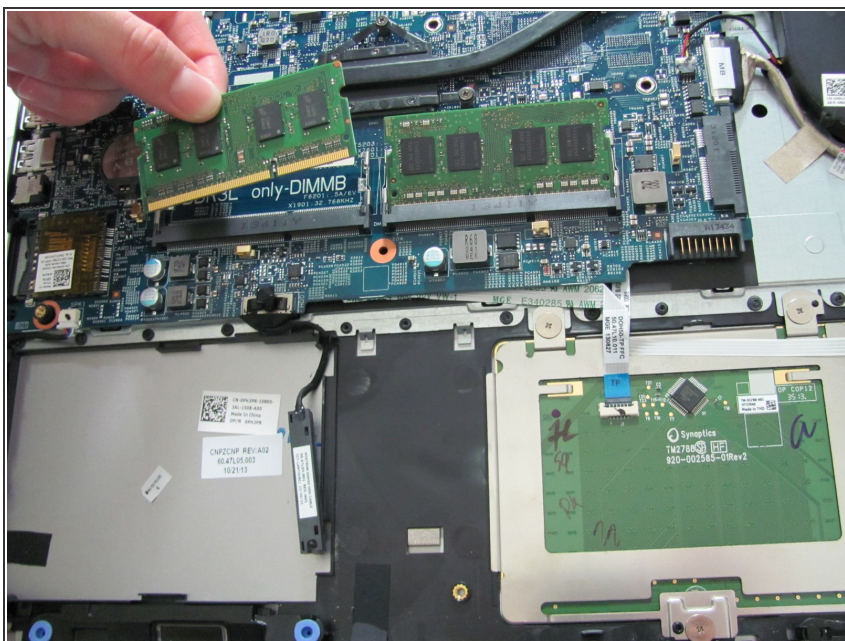

- Pull the RAM out at a 45 degree angle.

To reassemble your device, follow these instructions in reverse order.