



Dell Inspiron 15-7547 Battery Replacement

Replacing a dying battery can allow it to hold a charge better.

Written By: Claro



INTRODUCTION

The battery provides the power needed to run your laptop. This guide shows how to unscrew and disconnect your Dell Inspiron 15-7547's battery.

TOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)

PARTS:

- [Dell Inspiron 15-7547 Replacement Laptop Battery \(1\)](#)

Step 1 — Bottom Cover




- Close the display and flip the laptop on its back.
- Loosen the ten 5.0 mm-long Phillips #0 screws.
- The four screws marked with orange will remain captive to the cover.

Step 2



- Pry the cover open with a plastic spudger and remove it.

Step 3 — Battery

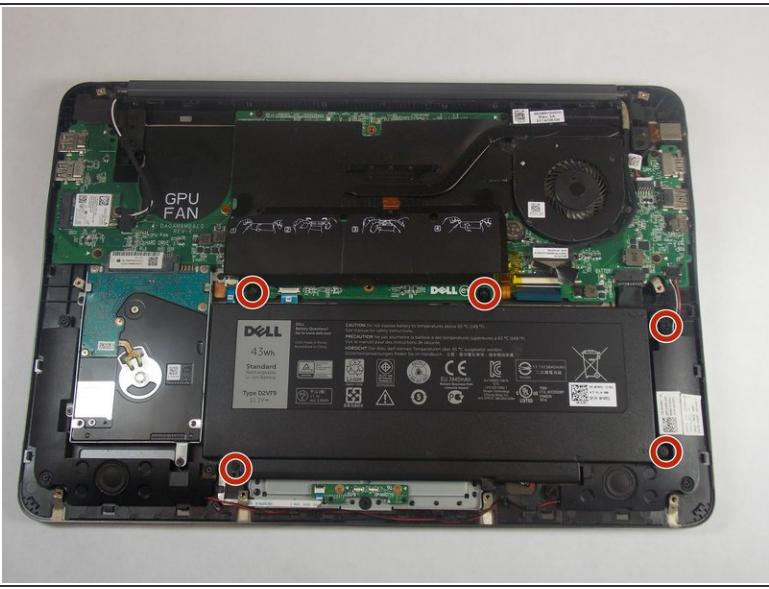

- Remove the five 5.0 mm-long Philips #0 screws that connect the battery to the case.

Step 4



- Lift the battery out of the case.

Step 5



- Disconnect the battery using the pull tab to pull towards the front of the chassis.
- ⓘ Most of the cable is attached to the case with adhesive, which may cause slight resistance.

To reassemble your device, follow these instructions in reverse order.