



# Dell Inspiron 15-7547 LCD Assembly Replacement

If your laptop is experiencing issues regarding the display, it may need to be replaced. This guide will show you how.

Written By: Kevin Smith



## INTRODUCTION

This guide shows how to remove the LCD assembly from a Dell Inspiron 15-7547

### TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

## Step 1 — Bottom Cover




- Close the display and flip the laptop on its back.
- Loosen the ten 5.0 mm-long Phillips #0 screws.
- The four screws marked with orange will remain captive to the cover.

## Step 2




- Pry the cover open with a plastic spudger and remove it.

## Step 3 — WiFi Card

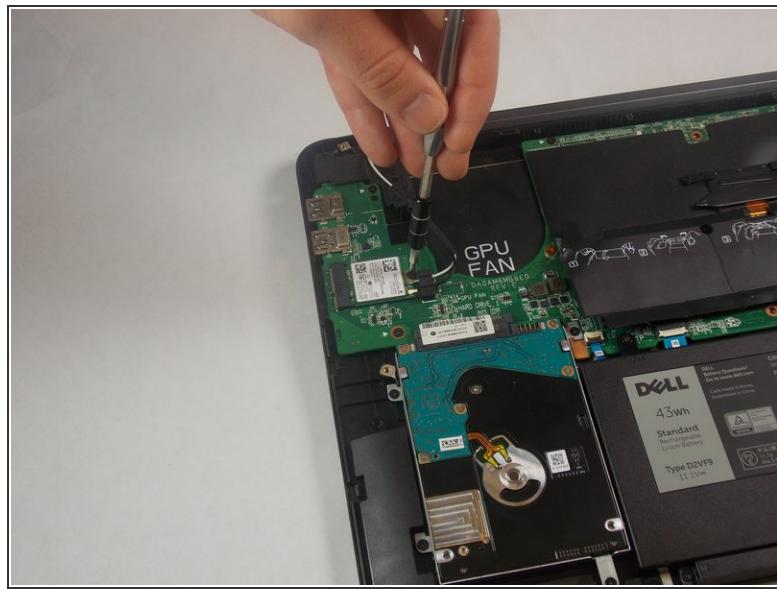


- Remove the 3.0 mm-long Philips #0 screw at the end of the WiFi-Card

## Step 4

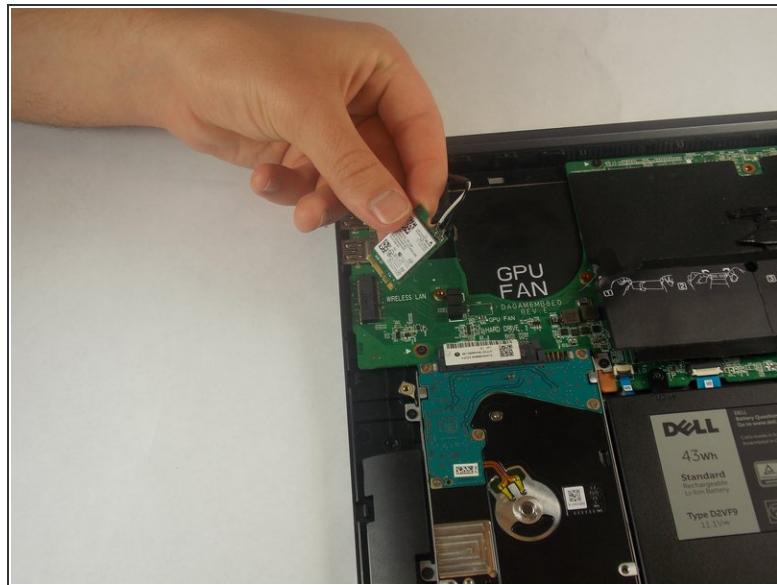


- Remove the WiFi-Card from its socket by pulling away and up from the connector.

## Step 5

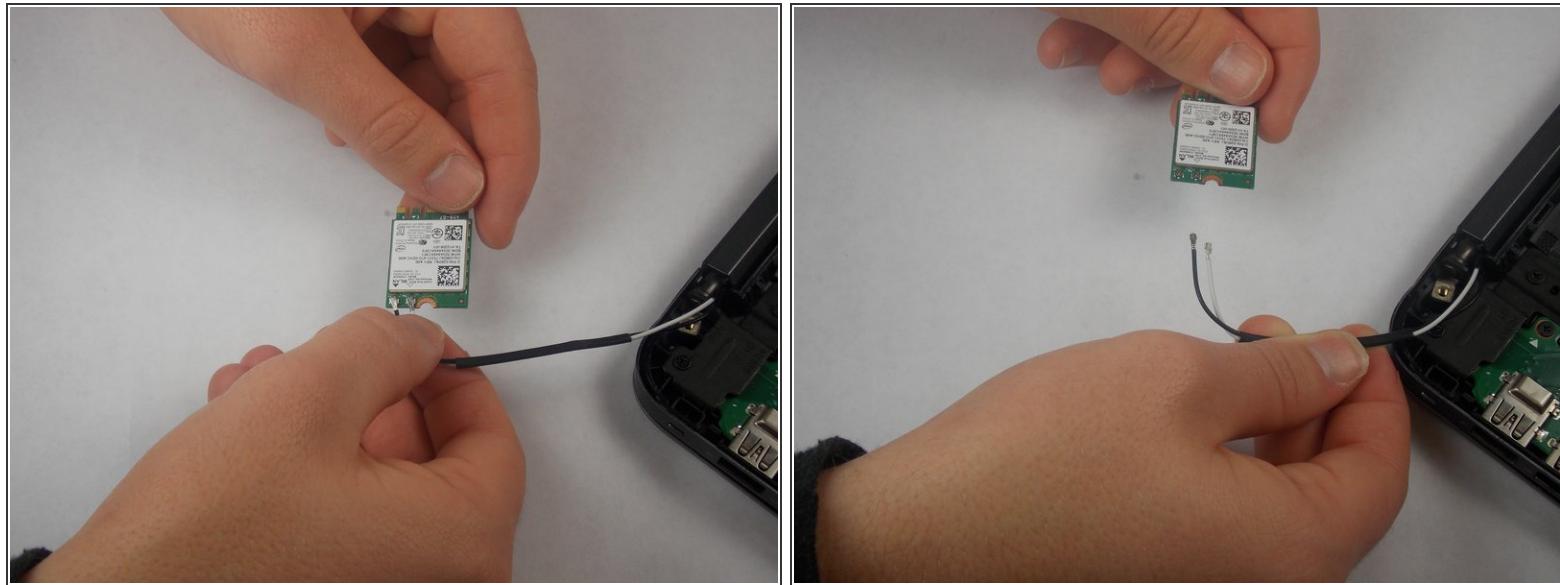

- Disconnect the white and black cables from the WiFi-Card.
- *(i)* Make a note of which wire goes where for reconnecting them to the replacement card.

## Step 6 — LCD Assembly

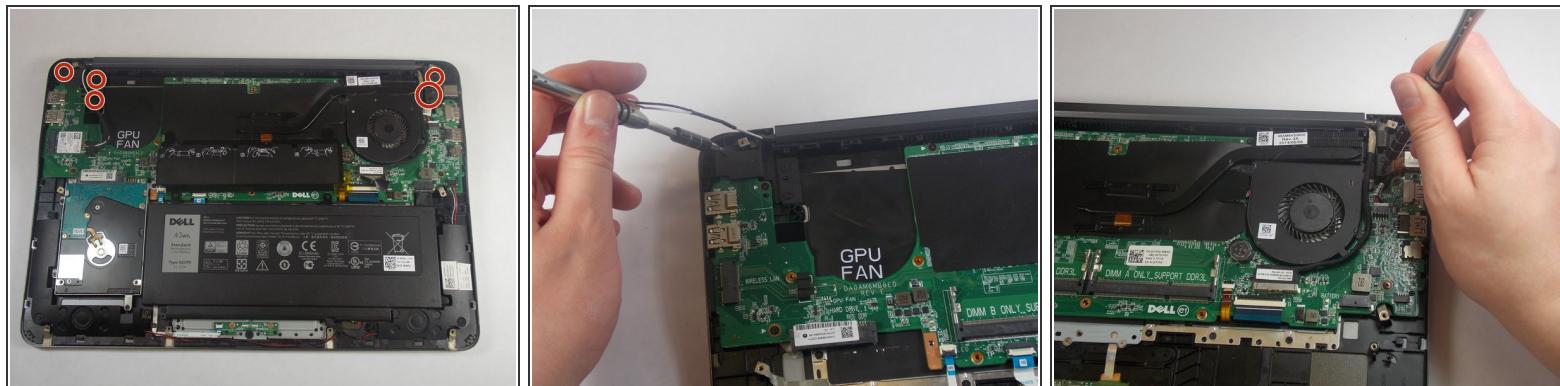

- Remove the six 7.0 mm-long Philips #0 screws that mount the hinges.


## Step 7



- Use a spudger to unlatch and unplug the display cable.

*(i)* There will be a notch on the side of the connector.

## Step 8

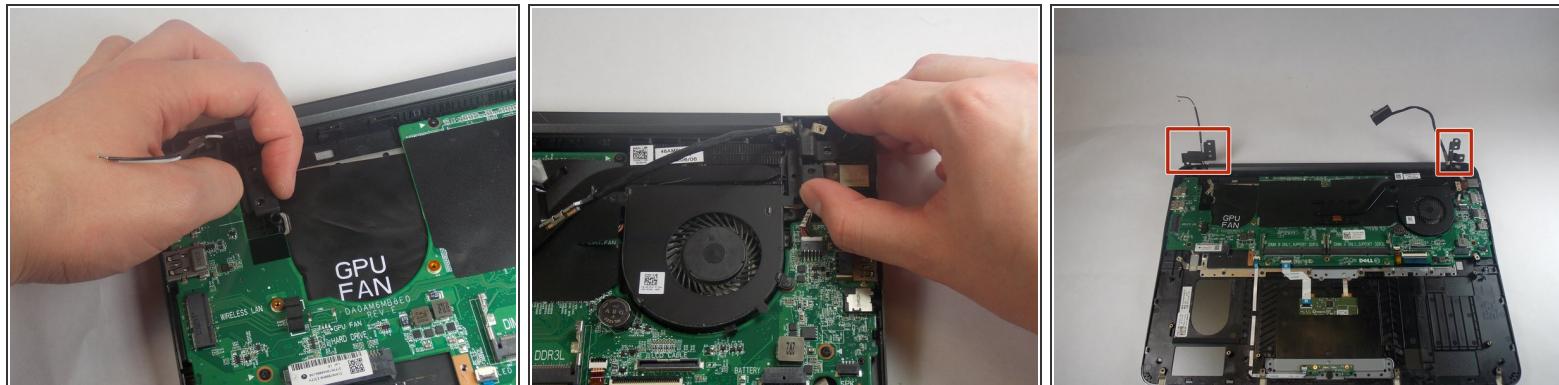

- Raise the left and right hinges.

## Step 9



- Remove the LCD display assembly from the laptop.

To reassemble your device, follow these instructions in reverse order.