



Dell Inspiron 15-7547 RAM Replacement

Replacing or upgrading the size of your computer's RAM can increase it's life span and speed.

Written By: Claro



INTRODUCTION

The guide shows the process of removing the RAM from the Dell Inspiron 15-7547.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Bottom Cover




- Close the display and flip the laptop on its back.
- Loosen the ten 5.0 mm-long Phillips #0 screws.
- The four screws marked with orange will remain captive to the cover.

Step 2



- Pry the cover open with a plastic spudger and remove it.

Step 3 — RAM

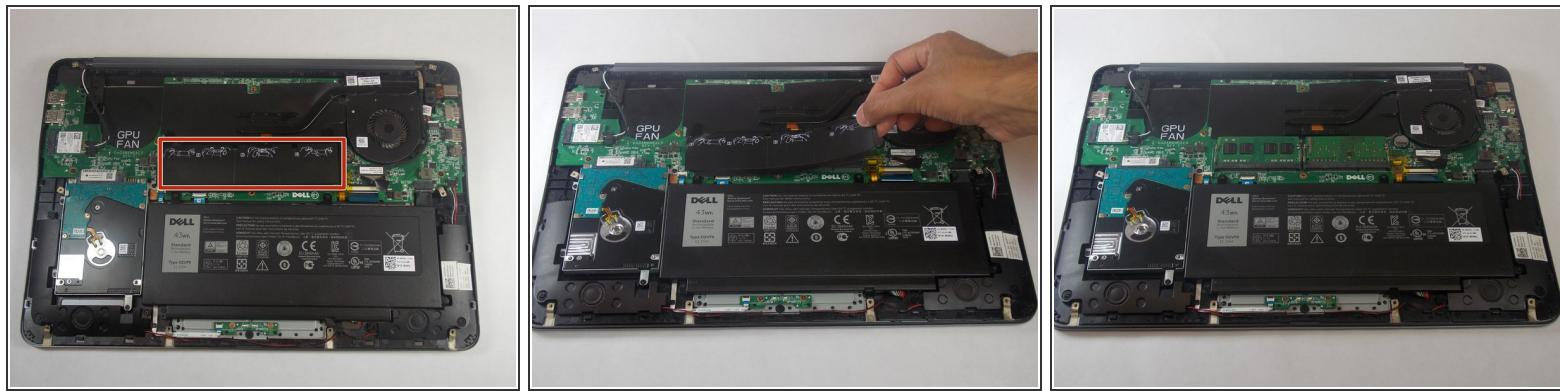

- Remove the plastic heat spreader that covers the RAM sticks.

Step 4



- Release the clamps on each side of the RAM sticks by pushing away from the center.
- When done properly the RAM stick should pop up.

Step 5



- Pull the RAM stick in a straight line out of the socket.

To reassemble your device, follow these instructions in reverse order.