


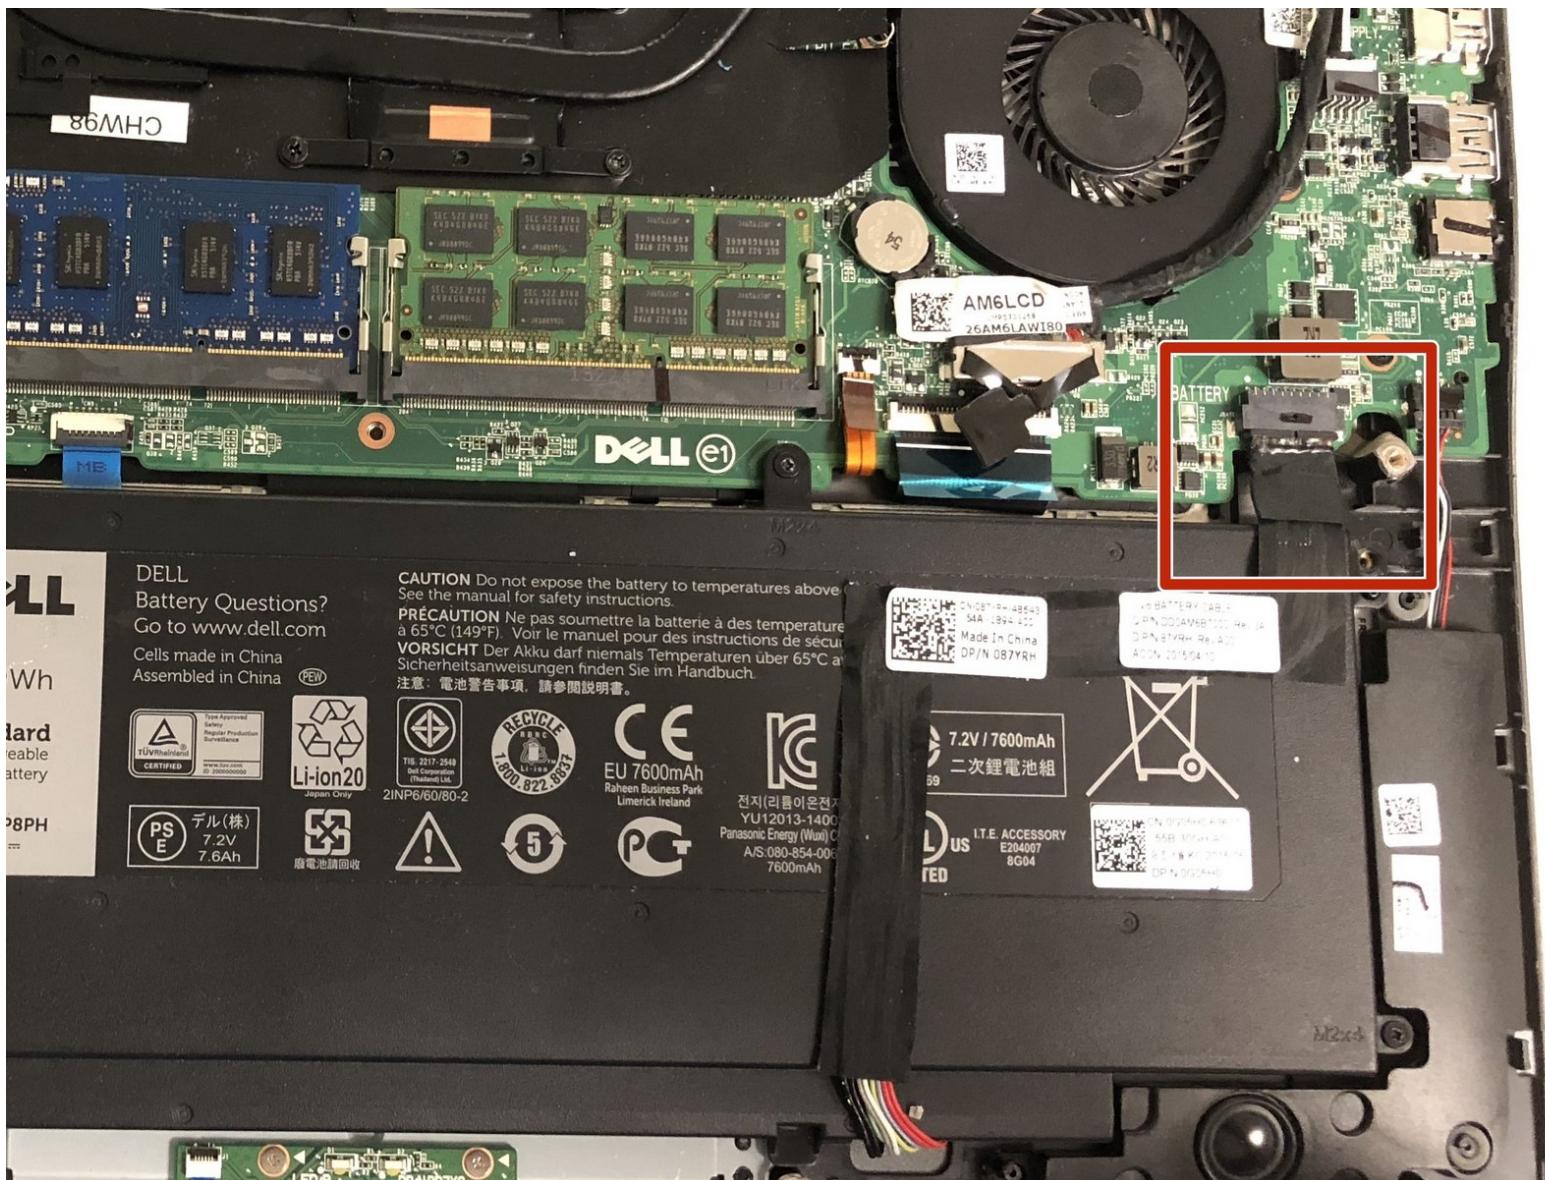

# Dell Inspiron 15-7548 Battery Replacement

Use this guide to replace the battery in your Dell inspiron 15-7548.

Written By: Christopher Fisher





## INTRODUCTION

This guide will walk you through the process of replacing a dead or damaged battery in your Dell Inspiron 15-7548.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Back Panel

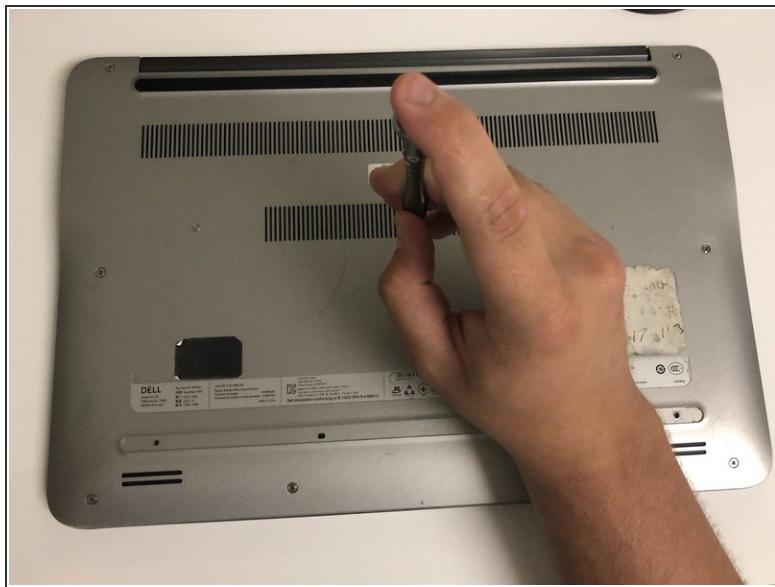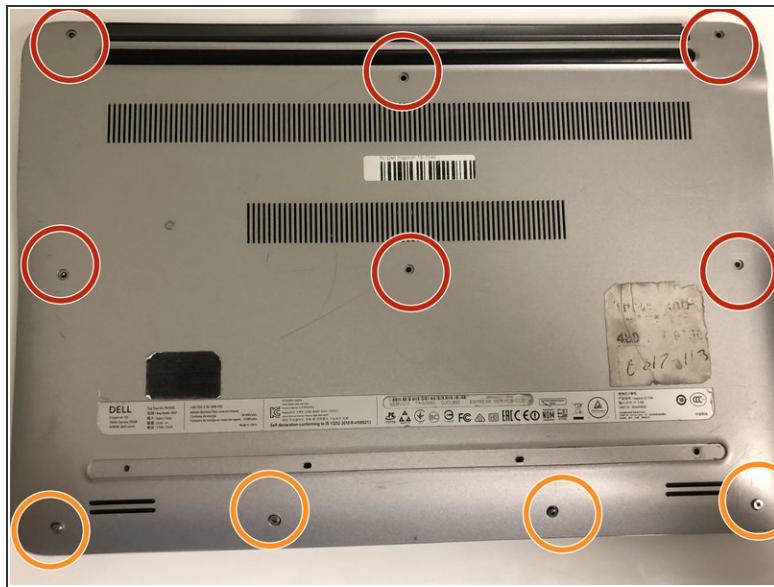

- Unscrew the six 2.5x6mm screws and remove them using a Phillips #1 screwdriver.
- Loosen the four 2x3mm captive screws at the bottom.

ⓘ The four screws on the bottom are captive screws and cannot be removed.



## Step 2



- Using the flat head side of the spudger separate the the back panel from the rest of the laptop.



When separating the bottom and right side of the case do not insert the spudger more than half an inch.

## Step 3 — Battery

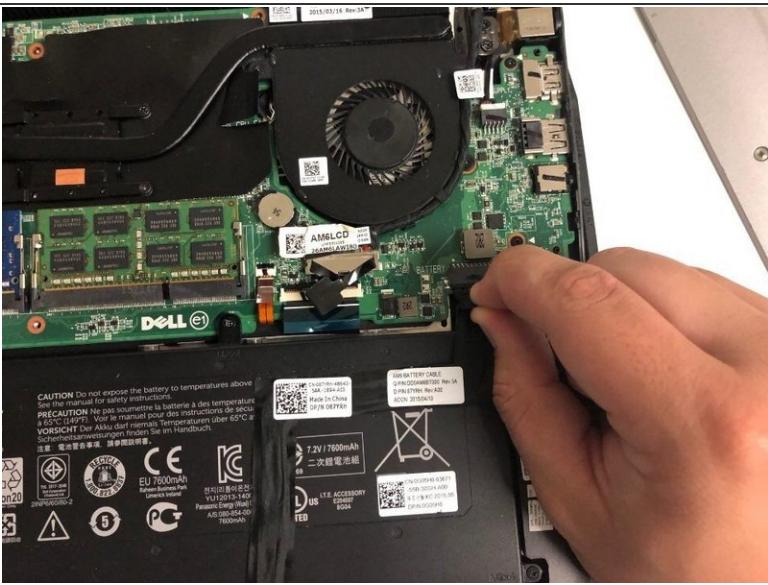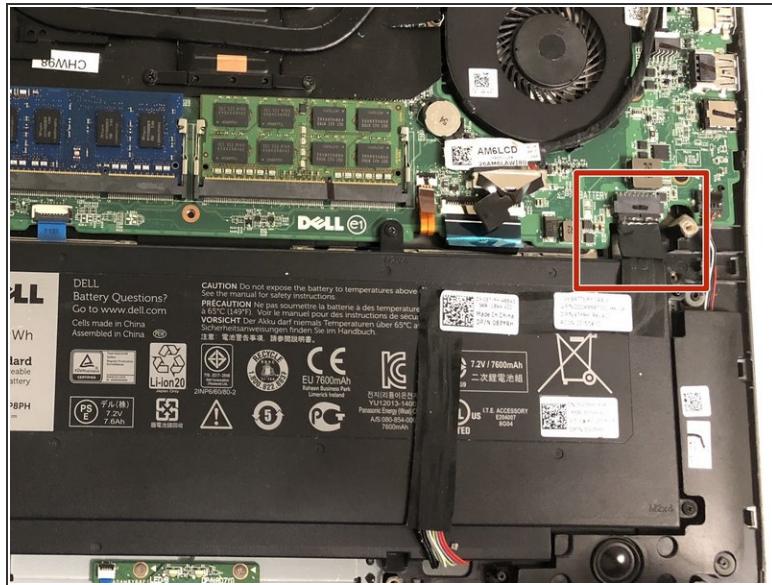

- Disconnect the battery from the motherboard by pulling the black tab attached to the cable.

## Step 4

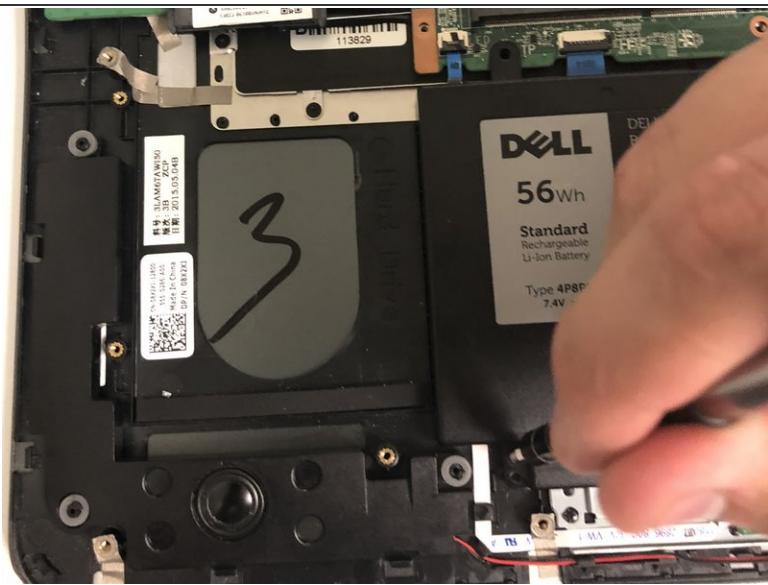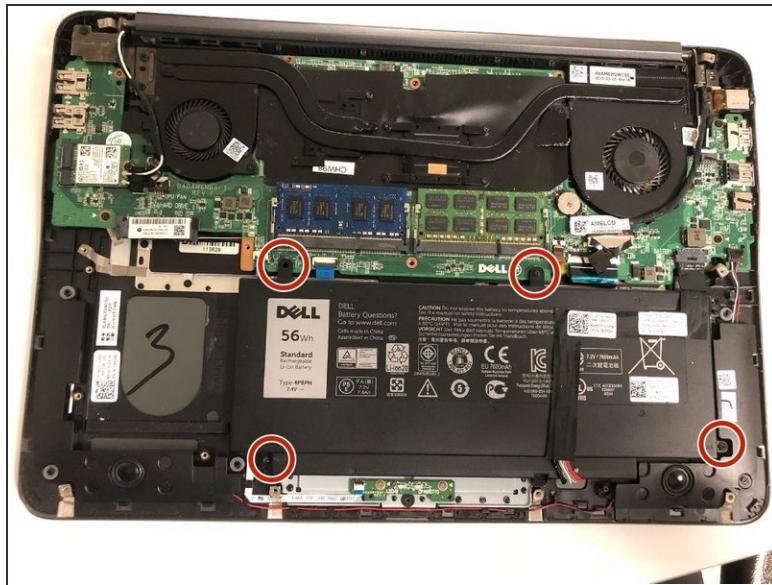

- Remove the four 2.5x6mm screws using a Phillips #1 screwdriver.

To reassemble your device, follow these instructions in reverse order.