



# Dell Inspiron 15-7567 RAM Replacement

By following this guide you will be able to take out the RAM if you want to upgrade it or have a bad RAM.

Written By: James Bedortha



## INTRODUCTION

This is an easy component to replace and only need a screwdriver to complete. This may be replaced if you get a blue screen before the laptop starts.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [T8 Torx Screwdriver](#) (1)

## Step 1 — Battery



 Turn off laptop before beginning.

- Place the laptop upside down on a flat, stable surface.

## Step 2





- Remove the 3mm screw in the location shown, using a Phillips #1 screwdriver.

## Step 3





- Remove the panel from the sides and pull it out at an angle towards you.

## Step 4

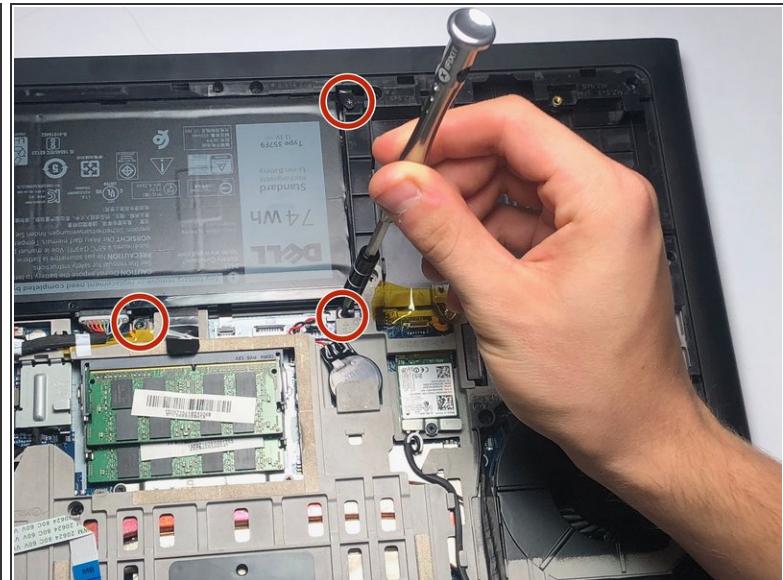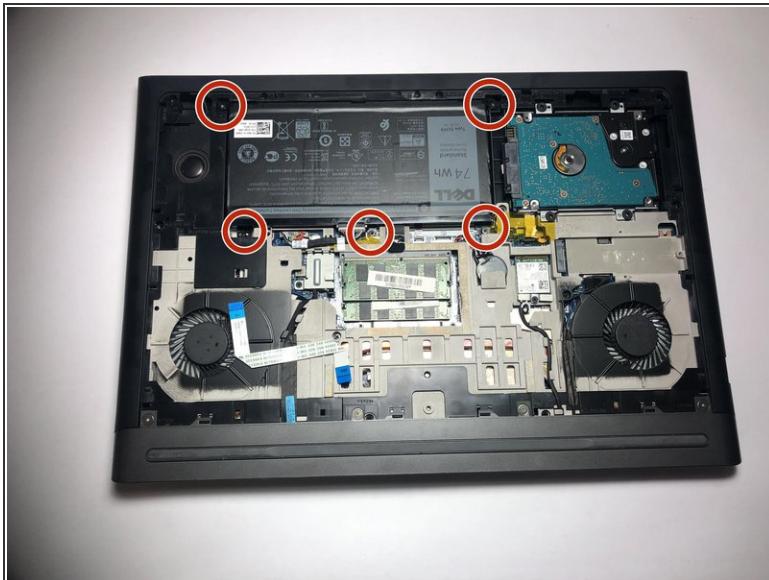


- Remove the five 3mm screws on the battery with a Torx (T8) screwdriver in the locations shown.

## Step 5

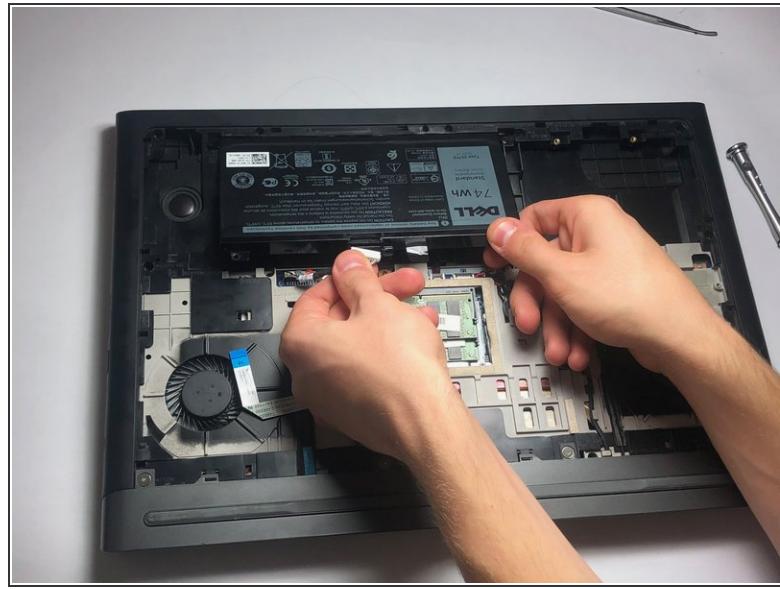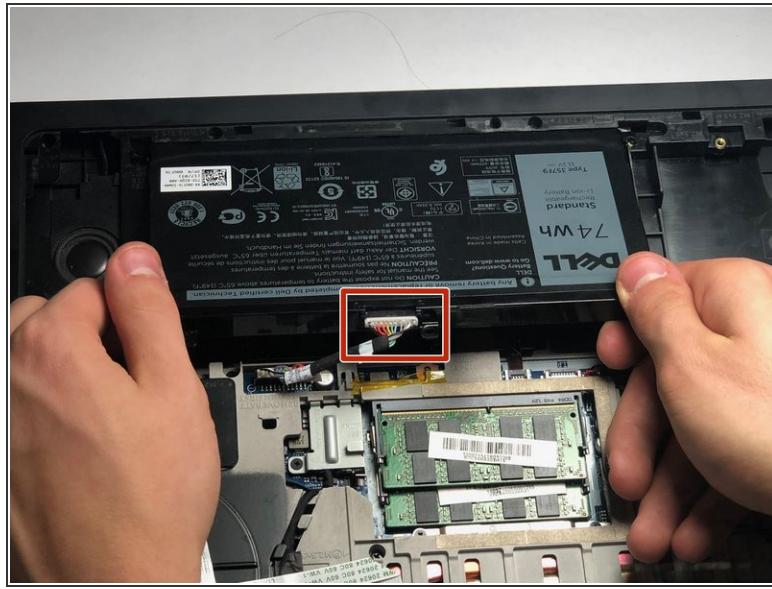

- Disconnect the power cord from the battery by using a pair of tweezers, your fingers, or the opening tools from the iFixit pro tech tool kit.
- Pinch the clips on the left and right side while pulling on the cord at the same time.

## Step 6

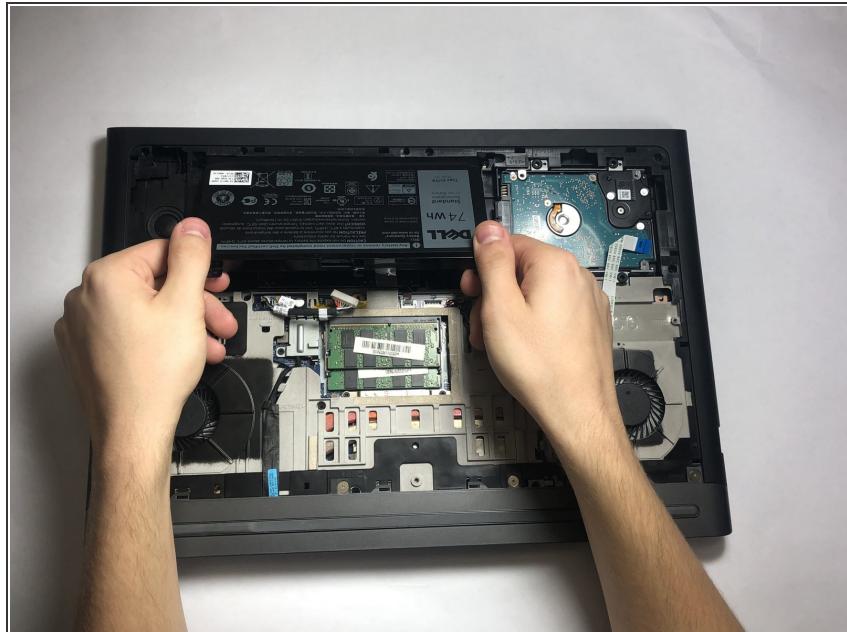

- Pull the battery towards you.
- Make sure to pull at an upward angle.

## Step 7 — RAM




- Remove the 3mm screw on the back using a Phillips #1 screwdriver.

## Step 8



- Remove the panel by lifting up the side towards you

## Step 9

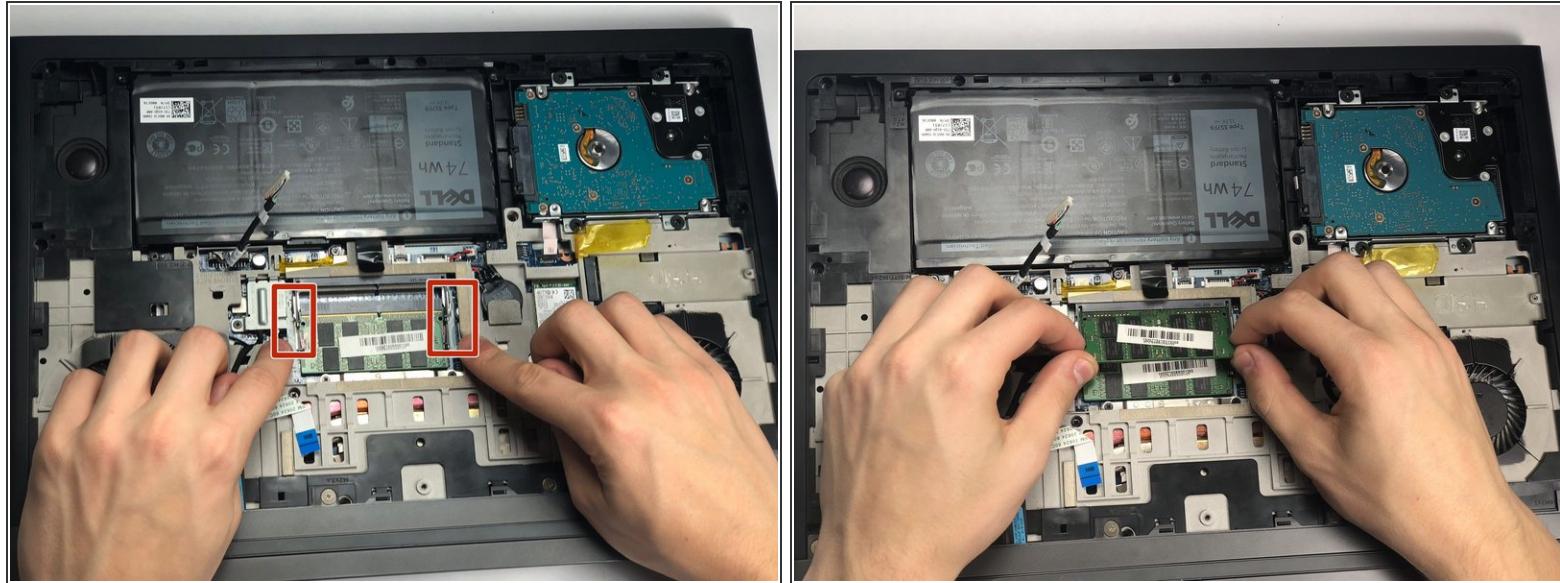

- Release the two clips on the left and right side, by pushing outward on the side towards you.
- The RAM strip will extend out. Pull towards you at a slight angle.

To reassemble your device, follow these instructions in reverse order.