



Dell Inspiron 15-7569 Display Replacement

This guide will help you remove your device's display.

Written By: Matthew Clements



INTRODUCTION

If your display has stopped working or has been cracked, follow this guide to replace it.

TOOLS:

- Phillips #0 Screwdriver (1)
- Metal Spudger (1)

PARTS:


- Dell Inspiron 15 (7569) 15.6" TouchScreen LCD Display (1)

Step 1 — Back Cover



- Remove the (10) P58F black screws on the back cover using the Phillips #0 screwdriver.
- After removing the screws, remove the back cover using a plastic or metal spudger.

Step 2 — Display

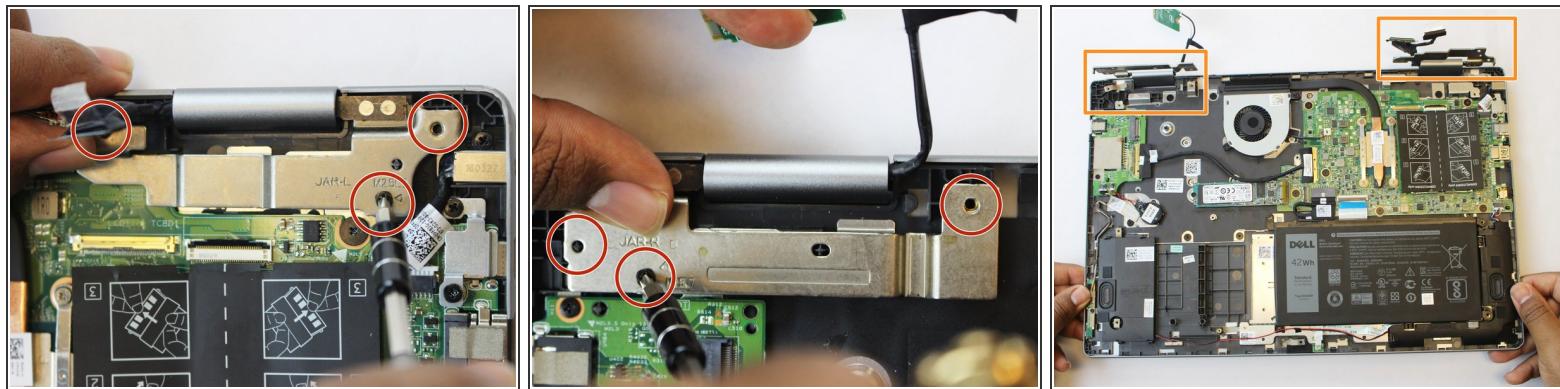

- Unscrew screws on gray clamps. One screw is located near the fan, one is located near the RAM.
- Remove all parts connected to the hinges.
- Snap off the hinges.

To reassemble your device, follow these instructions in reverse order.