




Dell Inspiron 1501 RAM Replacement

How to replace Dell Inspiron 1501 RAM.

Written By: Ravon Williams

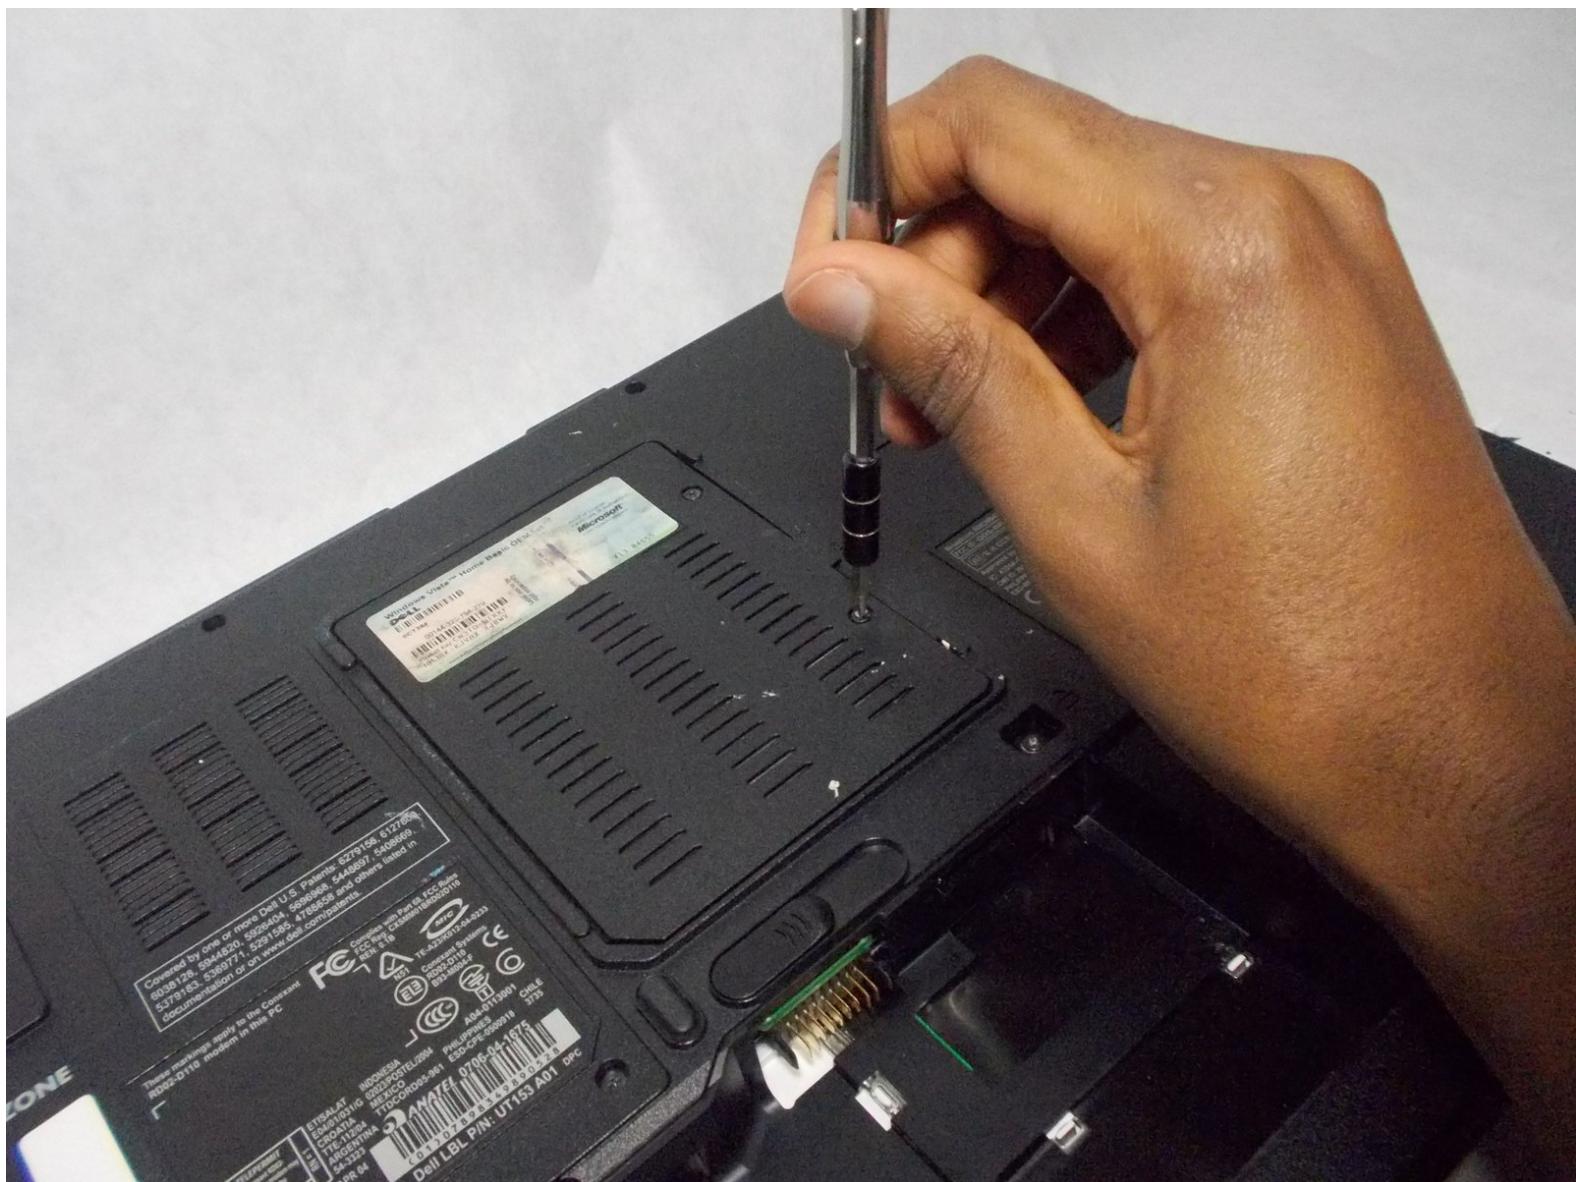

INTRODUCTION

This guide will show you how to remove the memory from your device.

TOOLS:

- [JIS #1 \(1\)](#)

Step 1 — Battery




- Place the laptop facedown with the battery facing you.
- Push the switch above the battery to the right and hold it in that position.
- Lift the battery using the grip on the top and remove it from its socket.

Step 2 — RAM



- Loosen the two JIS #1 8mm screws on the cover.
- Lift and remove the cover.

Step 3

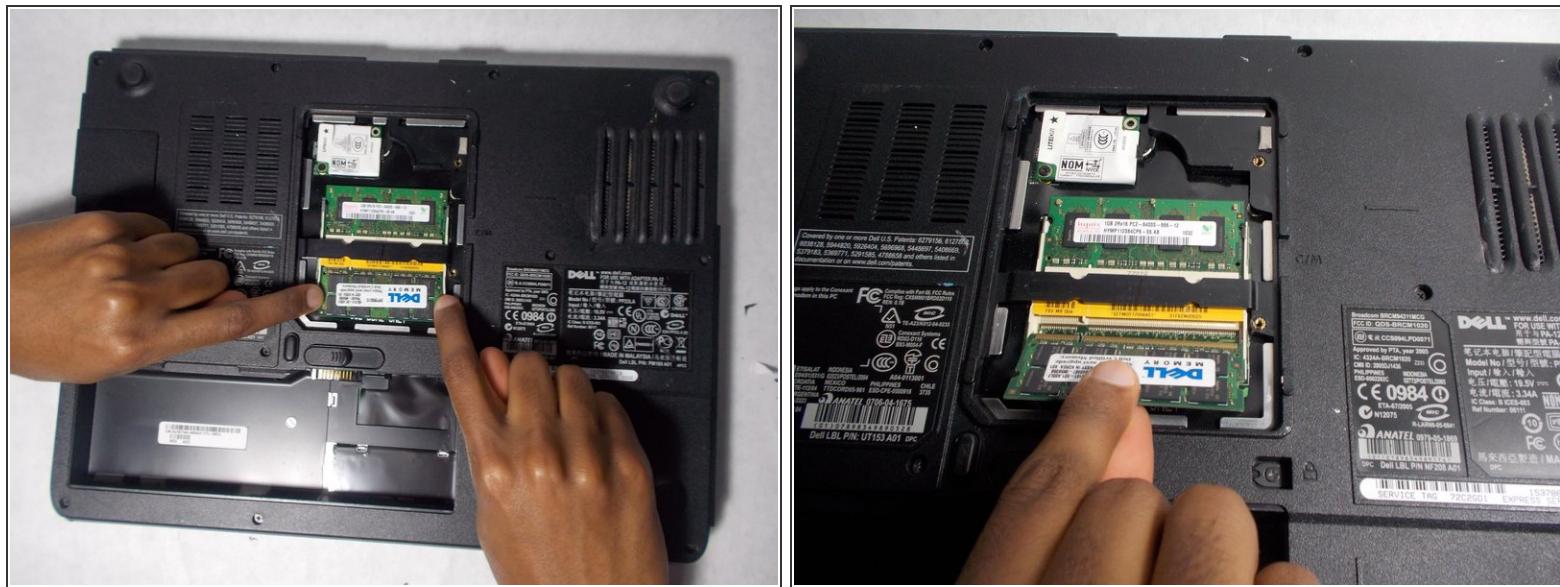

- Pull the two metal clips holding down the card apart.
- Lift and pull out the card.

To reassemble your device, follow these instructions in reverse order.