



Dell Inspiron 1521 DVD Drive Replacement

The DVD drive is the component of a computer that uses lasers and optics to read data from and write data to optical discs such as CDs.

Written By: Rogelio Ordonez



This document was generated on 2019-10-13 07:00:03 AM (MST).

INTRODUCTION

This guide will show how to access your DVD drive.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery




- Rotate the laptop so its bottom is facing up.

Step 2



- Identify the lock mechanisms holding the battery in place.
- Slide each button outward with your fingers to disengage the battery.
- Pull the battery off with your hand to separate it from the laptop.

Step 3 — DVD Drive

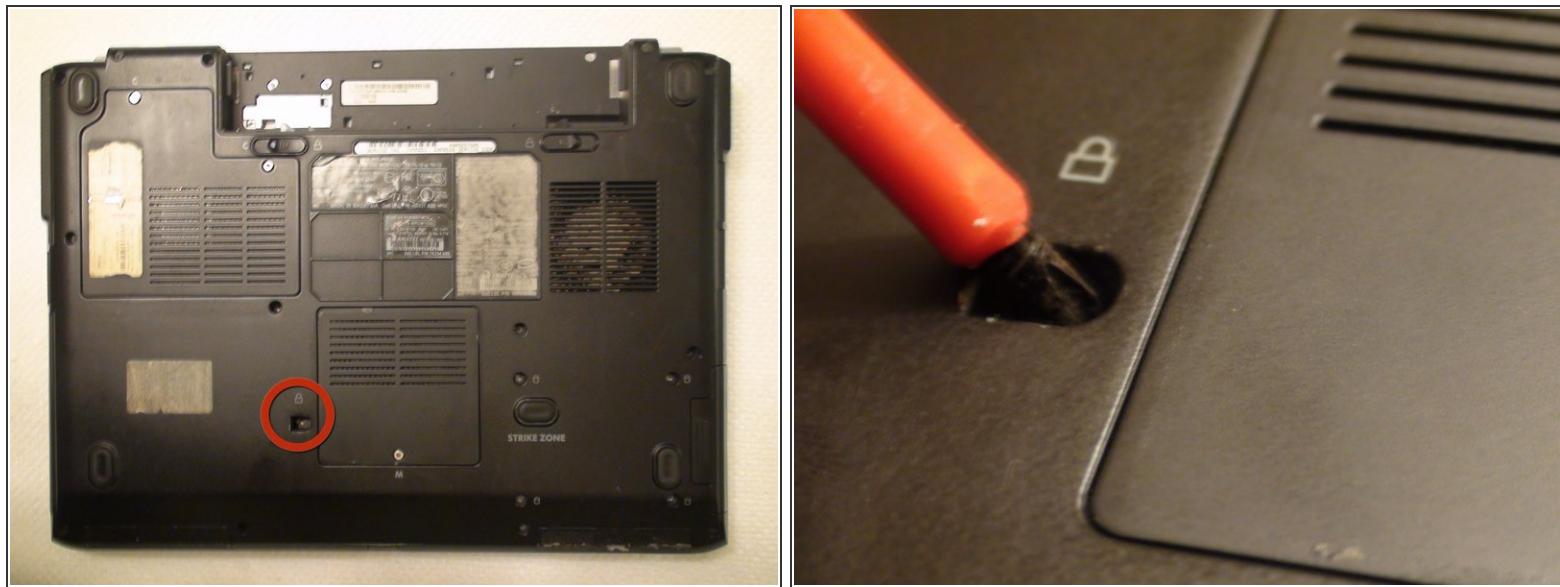

- Locate the 4 mm Phillips #1 screw next to the white padlock image that holds the DVD drive in place.
- Remove this screw with a Phillips #1 screwdriver.

Step 4



- Use a plastic opener tool to carefully pry the DVD drive out of its pocket on the side of the laptop.
- Once sticking out, pull the DVD drive the rest of the way out with your hand.

To reassemble your device, follow these instructions in reverse order.