



# Dell Inspiron 1525 RAM Replacement

Replace the RAM in a Dell Inspiron 1525

Written By: Miroslav Djuric



## INTRODUCTION

Use this guide to help you replace the RAM in a Dell Inspiron 1525.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Battery



- Locate the battery release switch on the bottom of the laptop.

## Step 2



- Slide the battery release switch away from the lock symbol until you hear the battery click.
- Slide the battery towards the back of the laptop until it comes free.

## Step 3 — Bottom Cover




- Remove/loosen the eight 4.80 mm Phillips #1 screws securing the bottom panel.
  - The screws may only need to be loosened, as they are generally retained by plastic washers.
- Remove the bottom panel.

## Step 4 — RAM



- Push the white tabs on either side of the RAM chip outward. The chip should pop up a little.
- Carefully remove the RAM chip by pulling it out at a slight vertical angle.

## Step 5

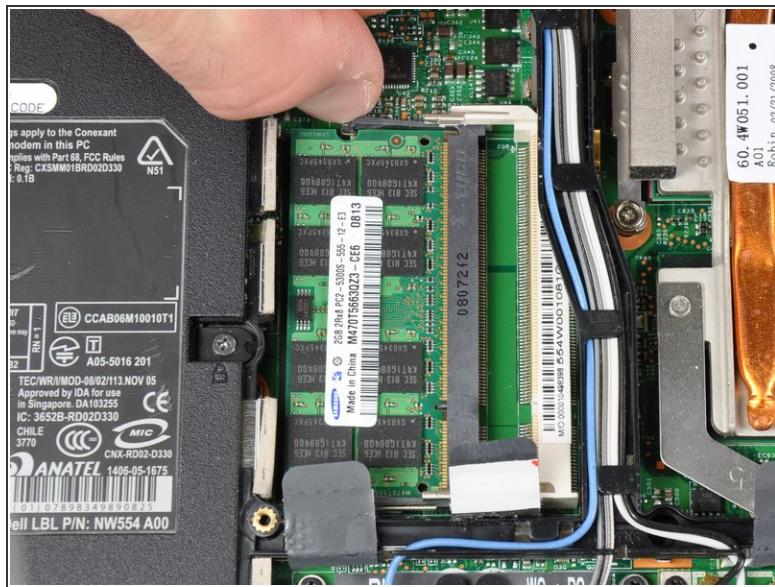

- Remove the lower RAM chip in the same fashion as the upper one.

To reassemble your device, follow these instructions in reverse order.