



Dell Inspiron 1545 Battery Replacement

This guide will cover removing the battery from the laptop.

Written By: Nathan Lemay



INTRODUCTION

The battery removal serves as a prerequisite for many of the more advanced guides and thus is a necessary step for all replacement guides.



PARTS:

- Dell Inspiron 1545, 1525, 1526 Replacement Battery (312-0625) (1)

Step 1 — Battery



- Before attempting to remove the battery ensure that the laptop is disconnected from all power sources and turned off.
- Turn the laptop over to its back.

Step 2



- Slide the release latch while simultaneously pulling backwards on the battery.

Step 3



- Slide the battery out of the battery bay.

To reassemble your device, follow these instructions in reverse order.