



Dell Inspiron 1545 RAM Replacement

This guide will cover the removal of RAM from your laptop.

Written By: Nathan Lemay



INTRODUCTION

This guide will most likely be utilized if one of the RAM modules becomes corrupted or you wish to upgrade to a higher amount of RAM if applicable.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



- Before attempting to remove the battery ensure that the laptop is disconnected from all power sources and turned off.
- Turn the laptop over to its back.

Step 2



- Slide the release latch while simultaneously pulling backwards on the battery.

Step 3



- Slide the battery out of the battery bay.

Step 4 — Base Cover



- Unscrew the four screws (3mm Phillips #1) that hold the base cover in place.
- *(i)* The screws are connected to the base cover by a washer and do not remove from the base cover.

Step 5



- Carefully lift the base cover vertically away from the laptop.

Step 6 — RAM



- Spread apart the securing clips on each end of the memory stick until the memory stick pops up.
- Remove the memory stick from the laptop.
- Repeat these steps to remove the second memory stick.

To reassemble your device, follow these instructions in reverse order.