



Dell Inspiron 1564 CD Drive Replacement

Accessing and removing the old CD Drive to replace it with a new one.

Written By: Megan Nelson



INTRODUCTION

This guide explains how to remove the Dell Inspiron 1564 CD Drive and install a new CD drive.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — CD Drive



- Place the laptop on a flat surface with the bottom side facing upwards.

Step 2



- Using a Phillips #0 screw driver, remove the screw on the bottom of the device.

Step 3



- Using the plastic opening tool, insert the tool in the gap separating the CD Drive and the body.
- Slowly and gently pry the CD drive from the device.

To reassemble your device, follow these instructions in reverse order.