



# Dell Inspiron 15R 5520 Display Replacement

An easy guide on how to replace the display

Written By: zAj



## INTRODUCTION

This replacement guide will demonstrate how to safely remove and replace the Inspiron 15R 5520 display screen.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



! We are removing the battery to avoid the possibility of an electrical discharge when working with this system.

- Flip device on its back displaying the battery.

## Step 2



- Place a finger on both latches and push outwards.
- Grab by the lip and pull upwards to remove battery.

## Step 3 — Display



- Lay the device as shown on table.
- Use the plastic opening tool to separate the plastic casing on all sides.

## Step 4



- Remove casing for screen.

## Step 5




- Locate and remove the top two 4mm screws.

## Step 6




- Locate and remove the three 3mm left hand side screws.

## Step 7

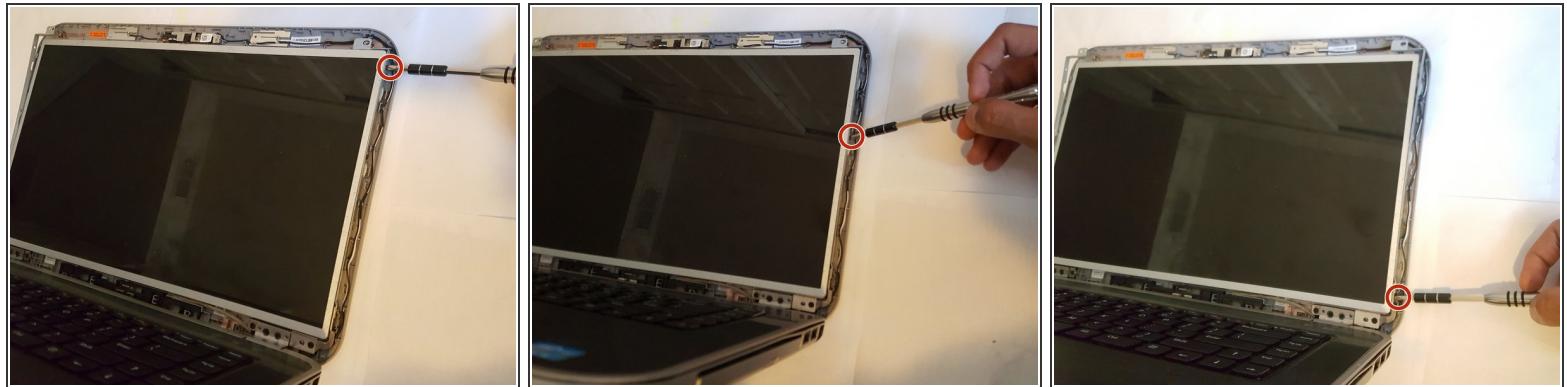

- Locate and remove the three 3mm right hand side screws.

## Step 8

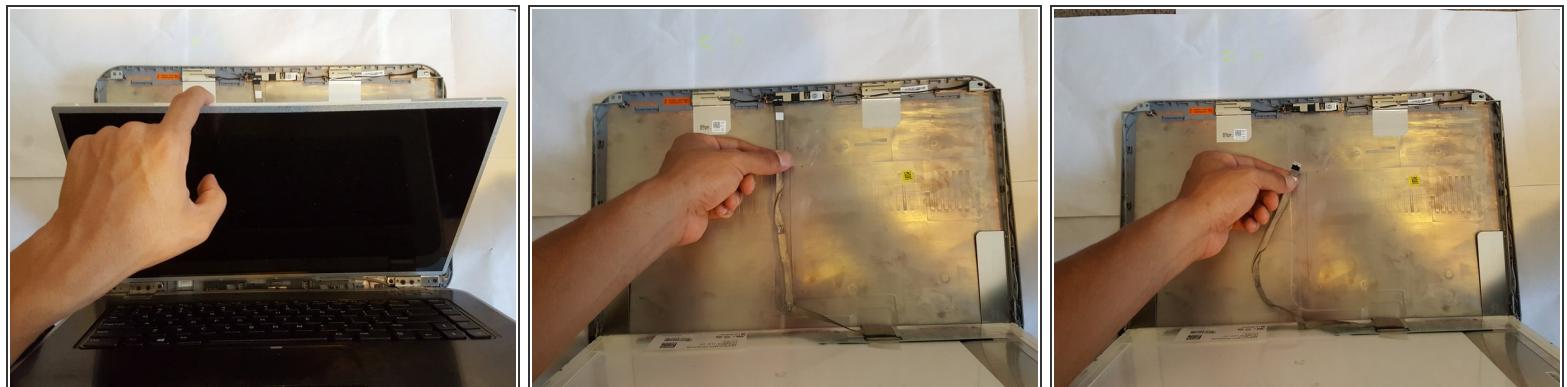

- Lift the display up to reveal the cable behind it.
- Pull the cable straight down.

## Step 9



- Sit the device upright and lay the display down on the keyboard.
- Locate the cable on the base of the display.
- Pull gently away from yourself.

## Step 10



- Remove screen.

To reassemble your device, follow these instructions in reverse order.