



# Dell Inspiron 15R 5520 RAM Replacement

Replacement guide for RAM

Written By: Joseph Simplicio



## INTRODUCTION

This replacement guide will demonstrate how a user can replace the memory card of a Dell Inspiron 15R 5520 laptop.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)


## Step 1 — Battery



! We are removing the battery to avoid the possibility of an electrical discharge when working with this system.

- Flip device on its back displaying the battery.

## Step 2

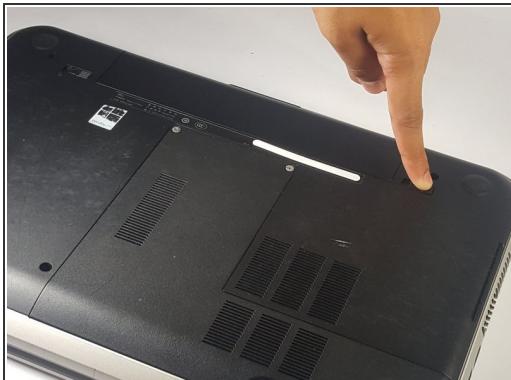

- Place a finger on both latches and push outwards.
- Grab by the lip and pull upwards to remove battery.

## Step 3 — RAM




- Locate RAM compartment on device and corresponding screws.

## Step 4



- Take your screwdriver and loosen the three 4mm screws to remove the cover.

## Step 5

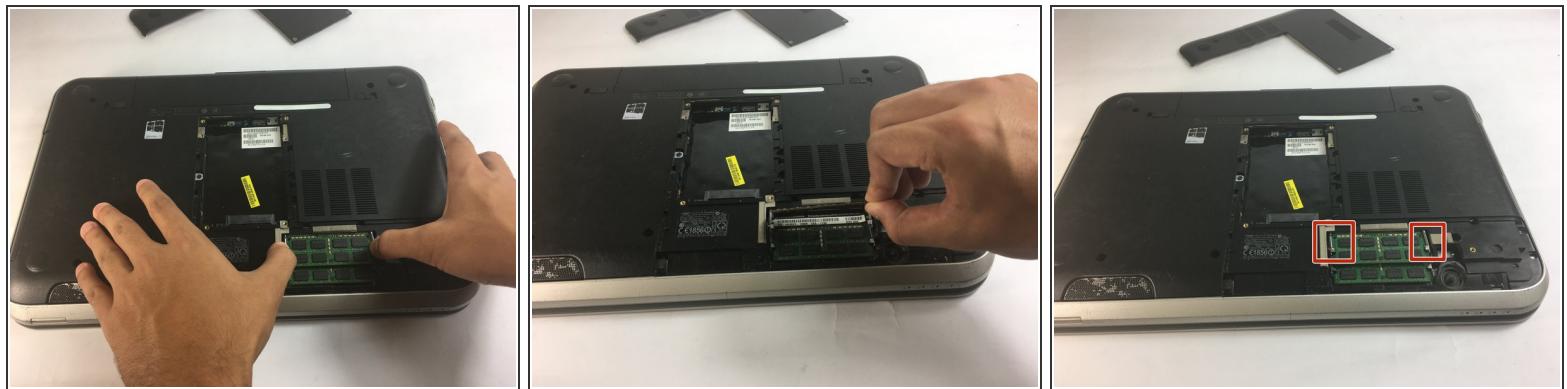


- Place both thumbs on the latches and push outward. The RAM card will pop up.

## Step 6



- Carefully hold RAM card from the sides and pull away.

## Step 7

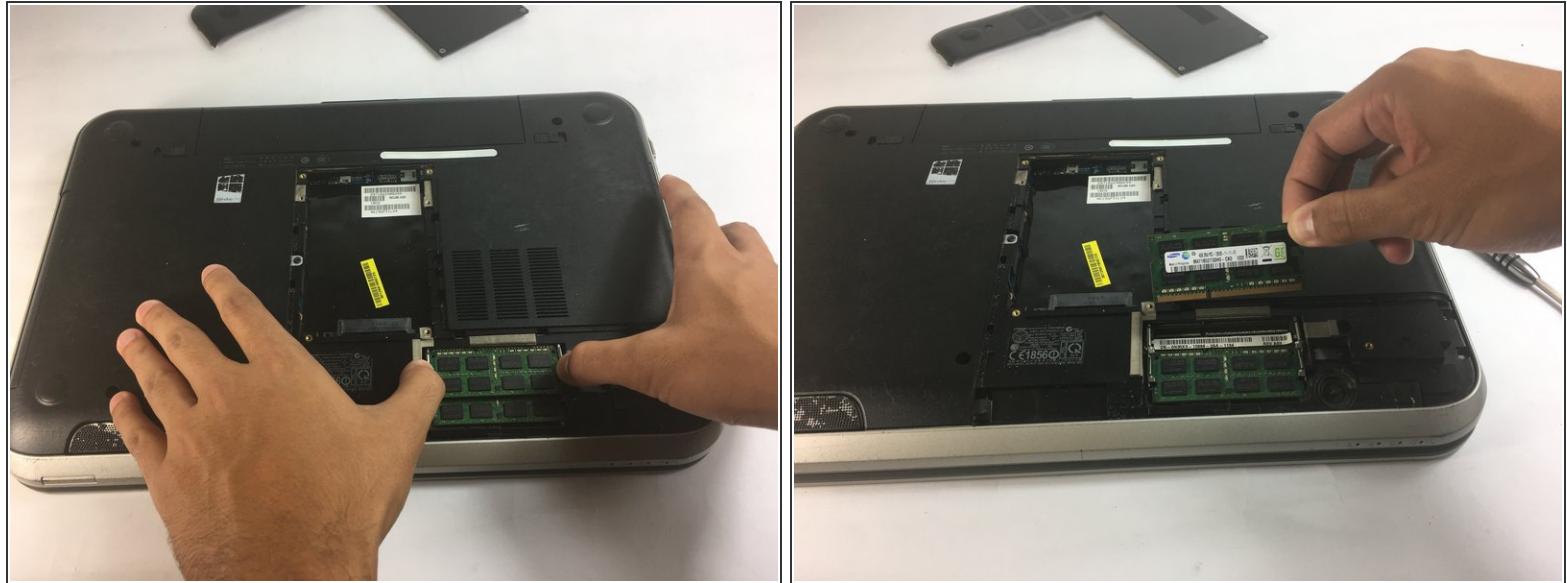

- Repeats steps 6 and 7 for the second RAM card.

To reassemble your device, follow these instructions in reverse order.