



# Dell Inspiron 15R N5110 Memory Module Replacement

Written By: Terrence15



## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.

### TOOLS:

- Anti-Static Wrist Strap (1)
- Essential Electronics Toolkit (1)

## Step 1 — Loosen the Screw



**⚠️ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).


- Loosen the captive screw that secures the memory-module cover to the computer base.

## Step 2 — Lifting the Memory Module Cover




- Using your fingertips, lift the memory-module cover out of the slots on the computer base.

## Step 3 — Popping up the Memory Module

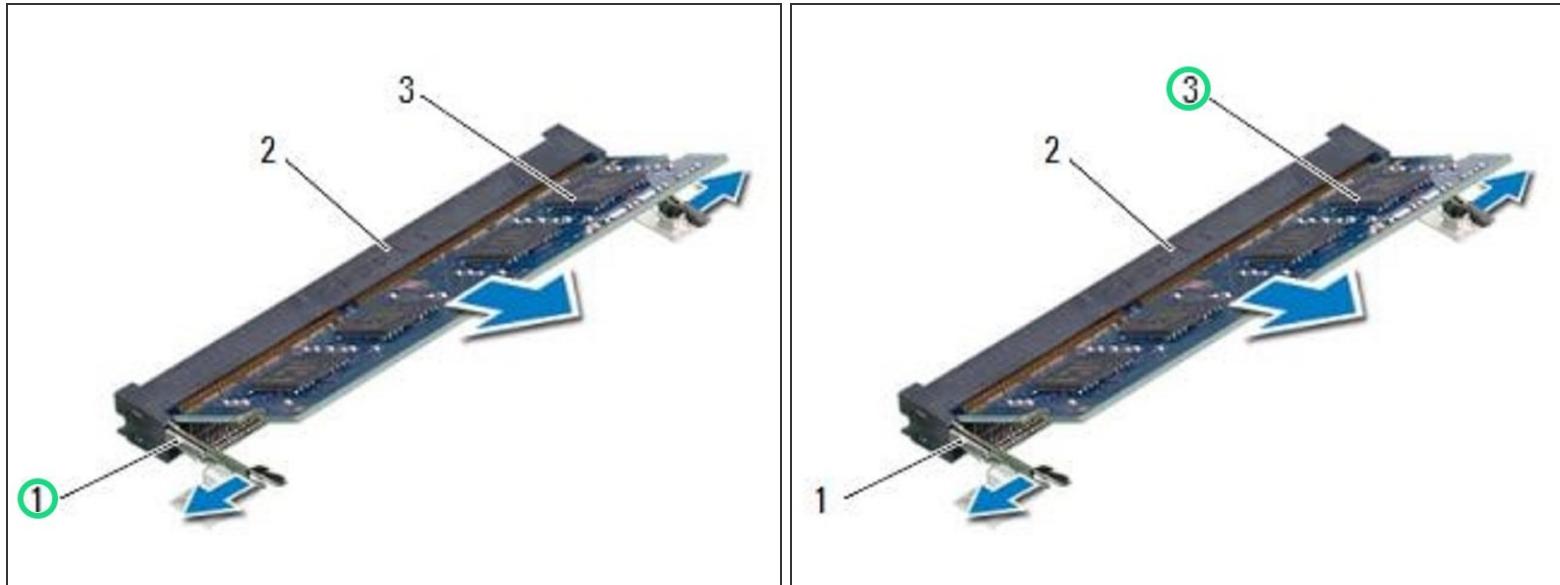

- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the memory module pops up.

## Step 4 — Remove the Memory Module

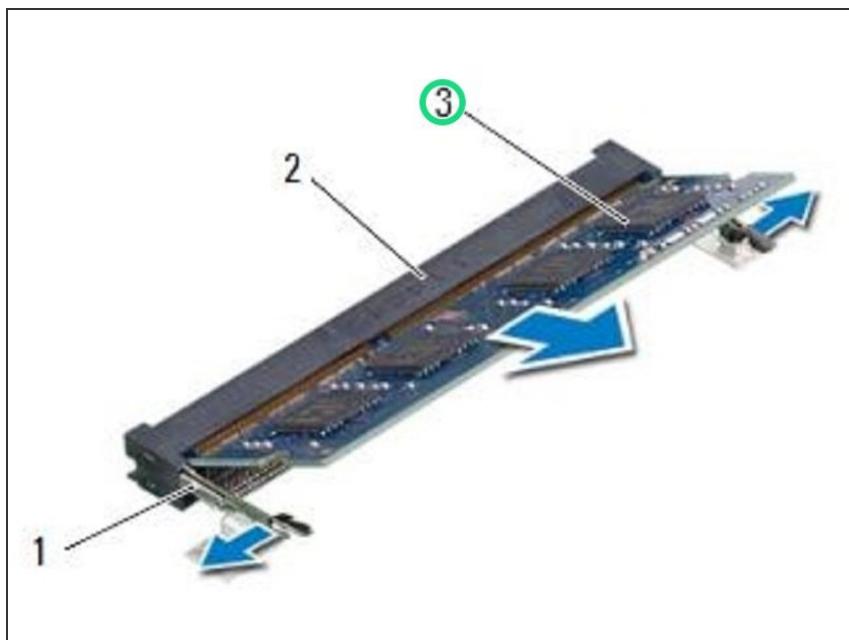


- Remove the memory module from the memory-module connector.

## Step 5 — Align the Notch



- Align the notch on the **NEW** memory module with the tab on the memory-module connector.

## Step 6 — Sliding the Memory Module

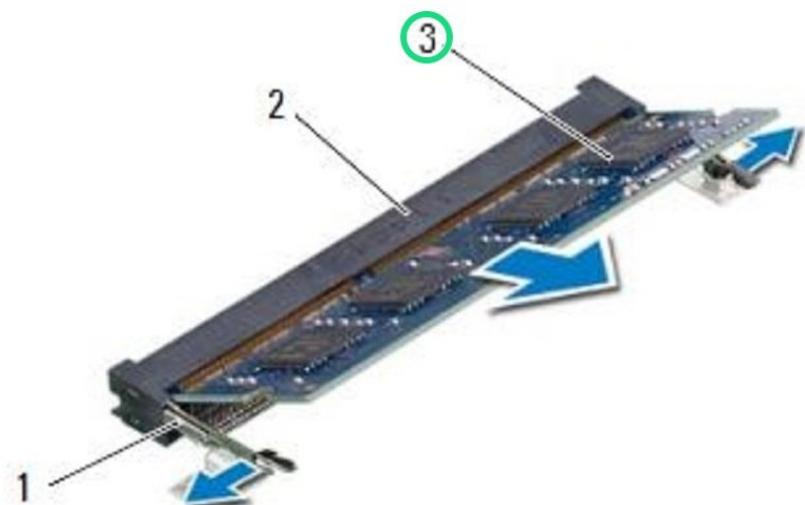

- Slide the memory module firmly into the connector at a 45-degree angle and press the memory module down until it clicks into place.

**NOTE:** If you do not hear the click, remove the memory module and reinstall it.

## Step 7 — Slide the Tabs



- Slide the tabs on the memory-module cover into the slots on the computer base and snap the memory-module cover into place.

## Step 8 — Tighten the Screw



- Tighten the captive screw that secures the memory-module cover to the computer base.