



Dell Inspiron 15R RAM Replacement

If your laptop is running slow this guide will demonstrate how a user can replace the memory.

Written By: Trixie Gonzalez



INTRODUCTION

The Dell Inspiron is expandable up to 8GB. If the device is running slowly, you can purchase its maximum memory capacity.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Battery



- Turn the device over and locate the battery.

Step 2



- Place thumbs on each latch and push outwards.

Step 3



- Push and slide the battery away from you.

Step 4 — RAM



- Locate the RAM compartment on the device and locate the screw on the right hand side.

Step 5



- Take your screwdriver and loosen the screw. Then remove the cover.

Step 6



- Place both thumbs on the latches and push outward. The RAM card will pop up.

Step 7



- Carefully hold RAM card from the sides and pull away.

Step 8



- Repeats steps 6 and 7 for the second RAM card.

To reassemble your device, follow these instructions in reverse order.