




# Dell Inspiron 15R SE 7520 Battery Replacement


Written By: Terrence15

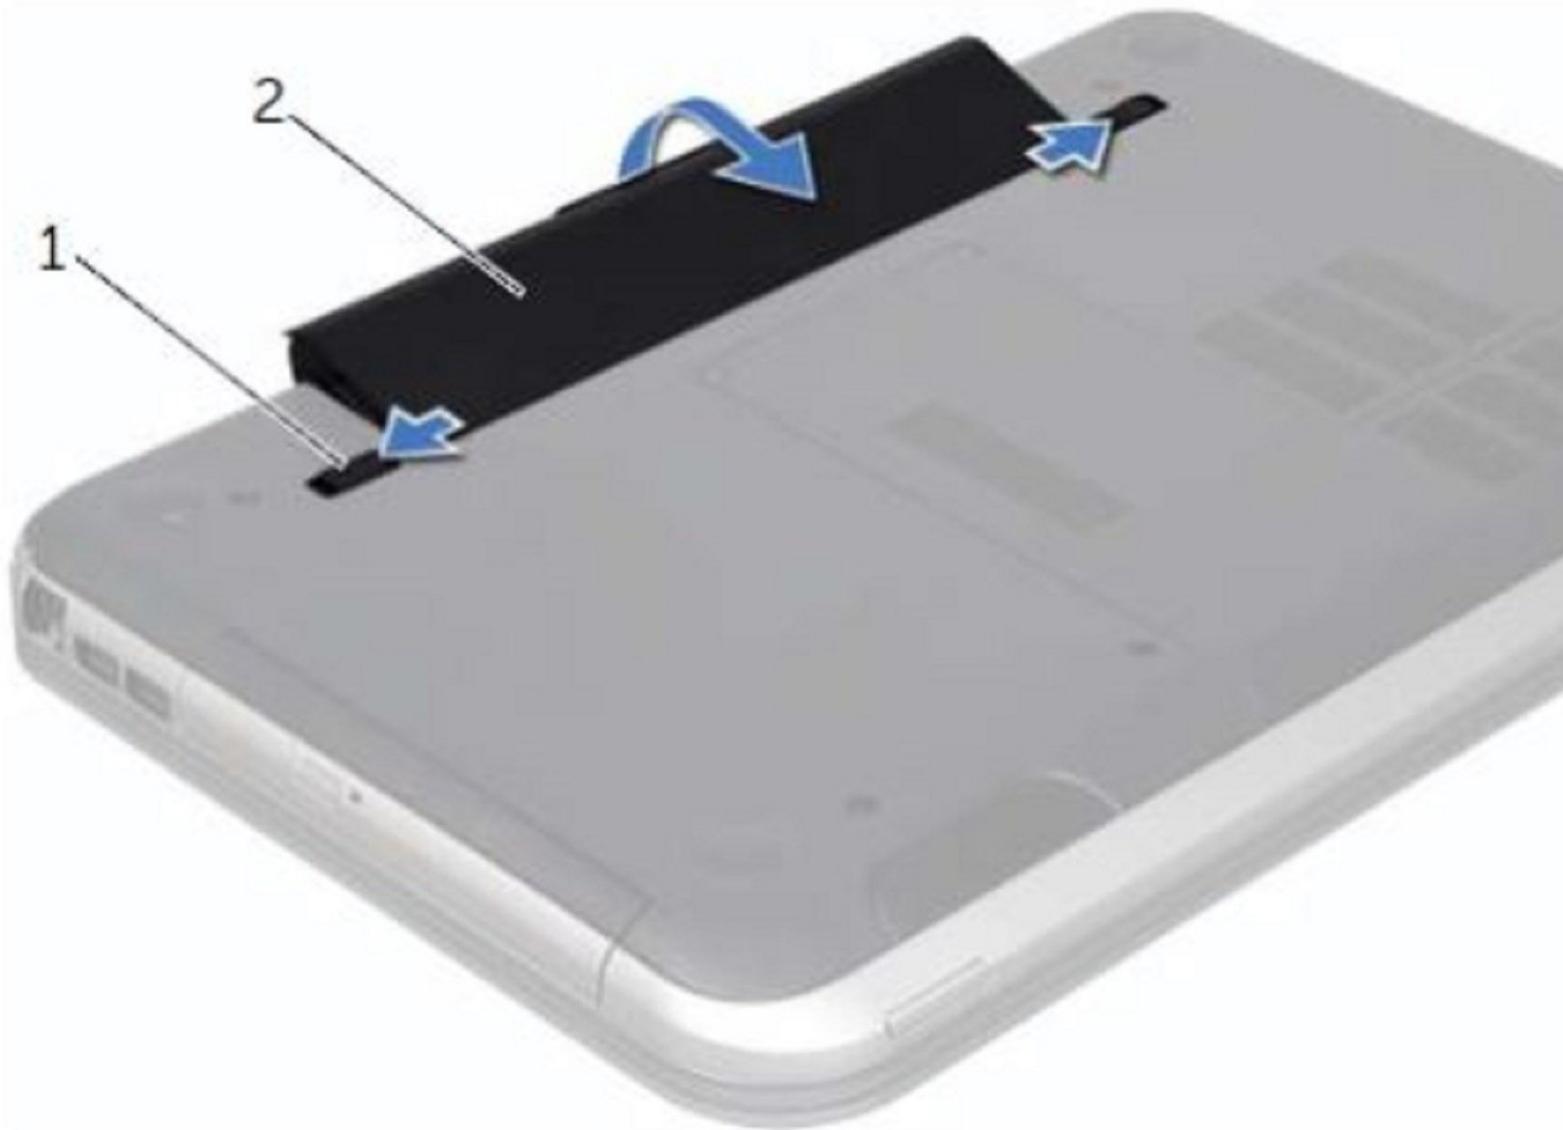

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.


## Step 1 — Close the Display

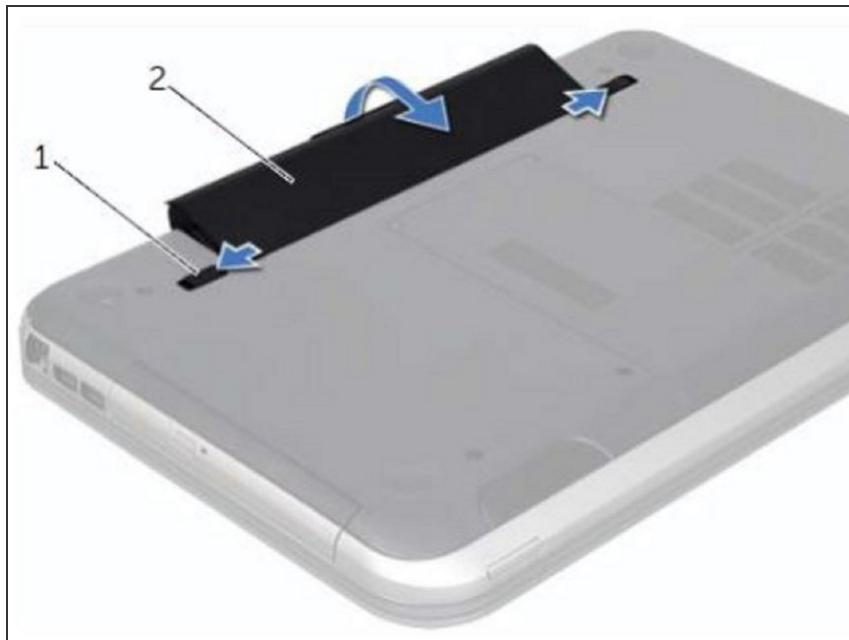

⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Close the display and turn the computer over.

## Step 2 — Sliding the Battery Latches

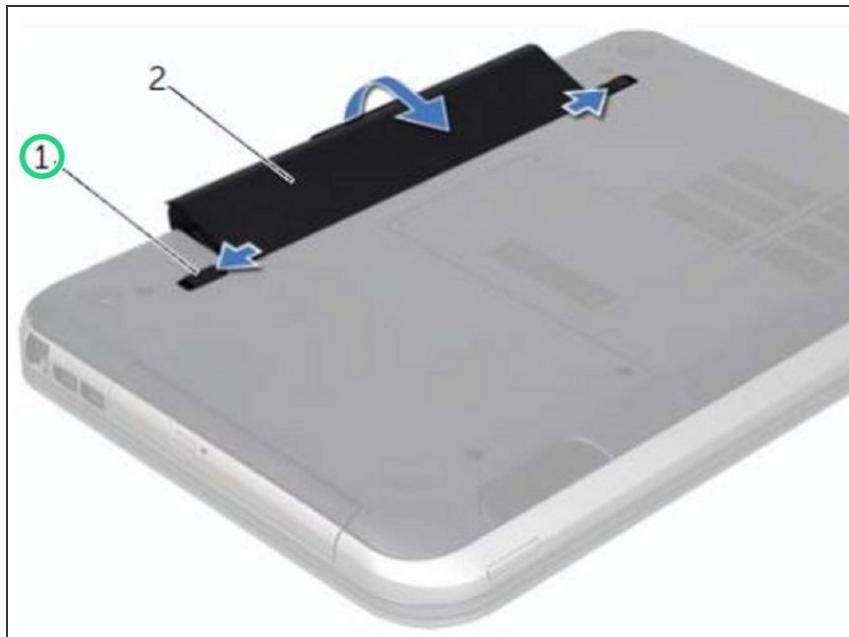


- Slide the battery release latches to the unlock position.

## Step 3 — Lifting the Battery



- Lift the battery out of the battery bay.

## Step 4 — Align the Tabs

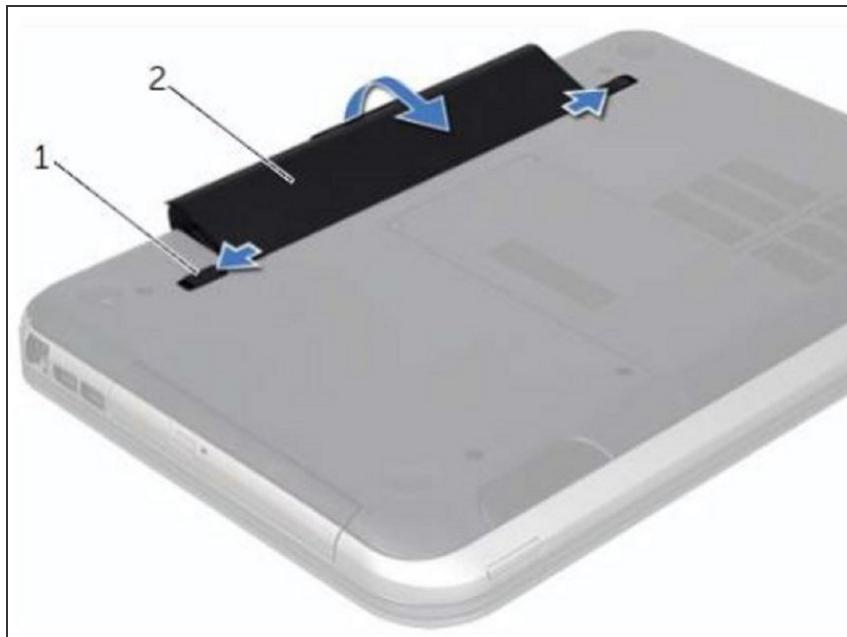

- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery until it clicks into place.