




# Dell Inspiron 15R SE 7520 Hard Drive Replacement

Written By: Terrence15

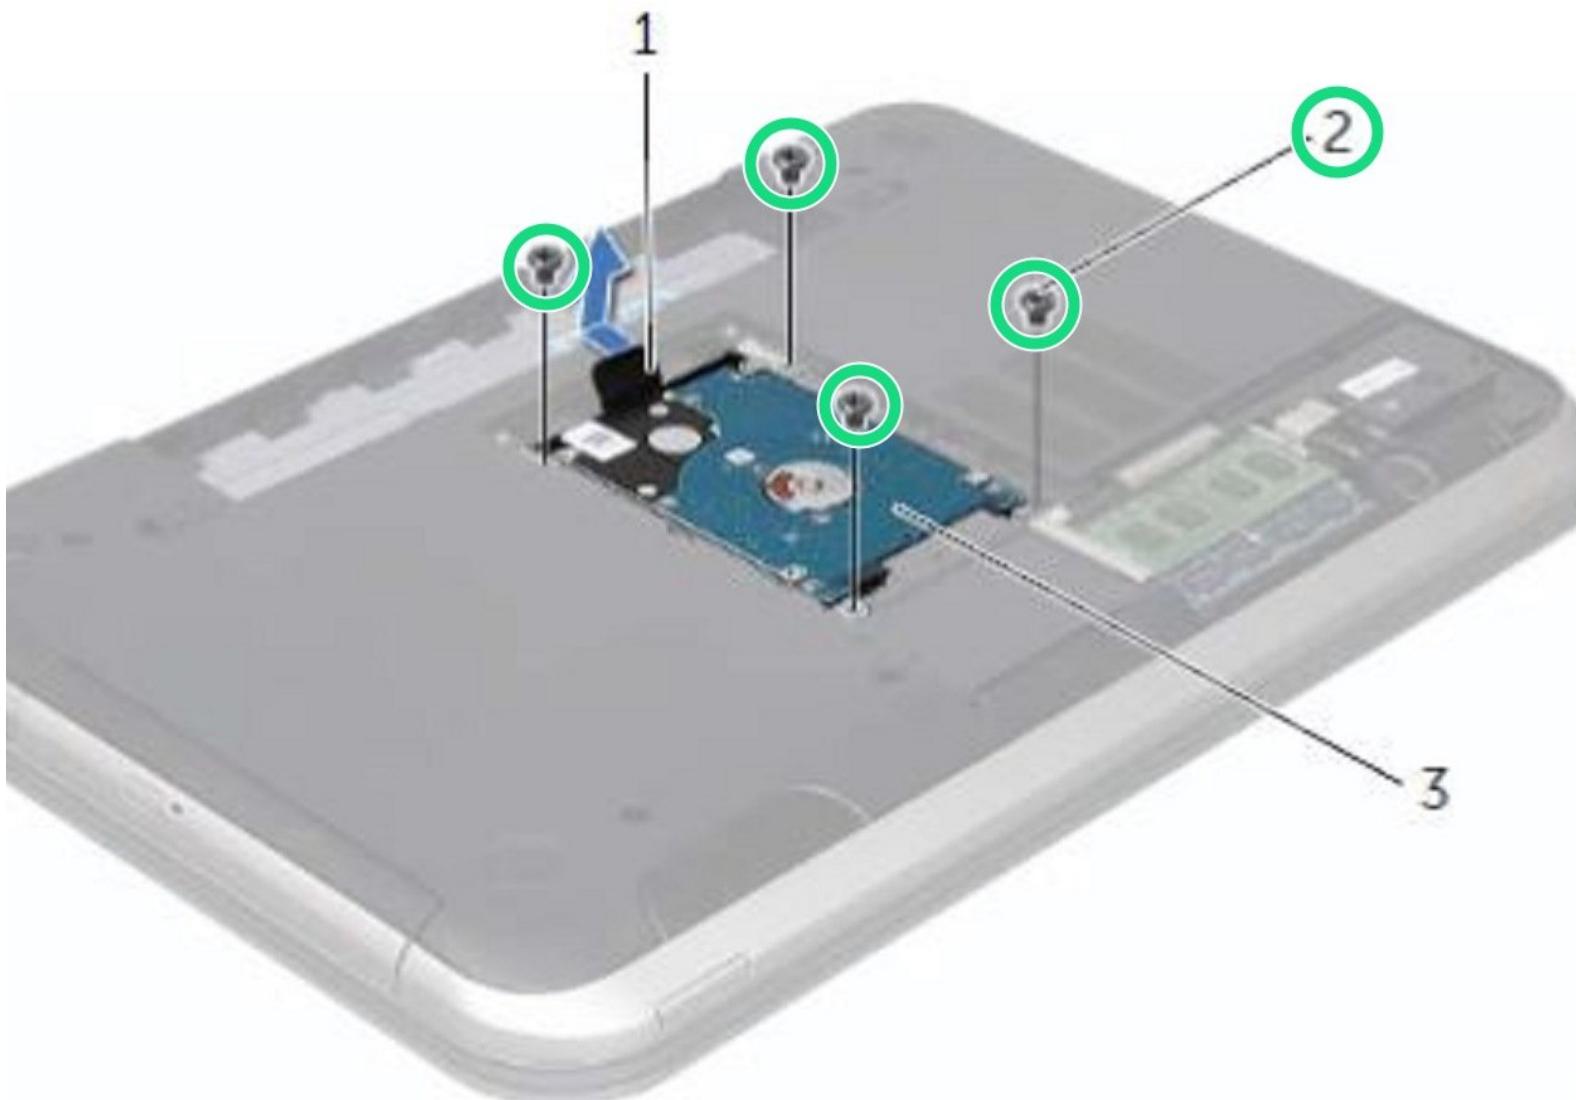


## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.

### TOOLS:

- **Phillips #0 Screwdriver (1)**


## Step 1 — Remove the Screws

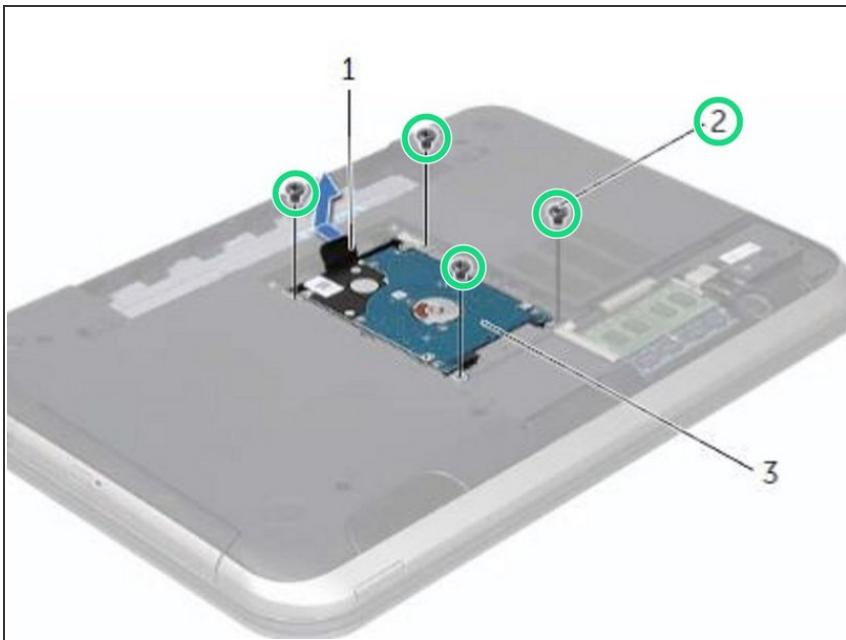

**⚠️ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Remove the screws that secure the hard-drive assembly to the computer base.


## Step 2 — Sliding the Hard Drive

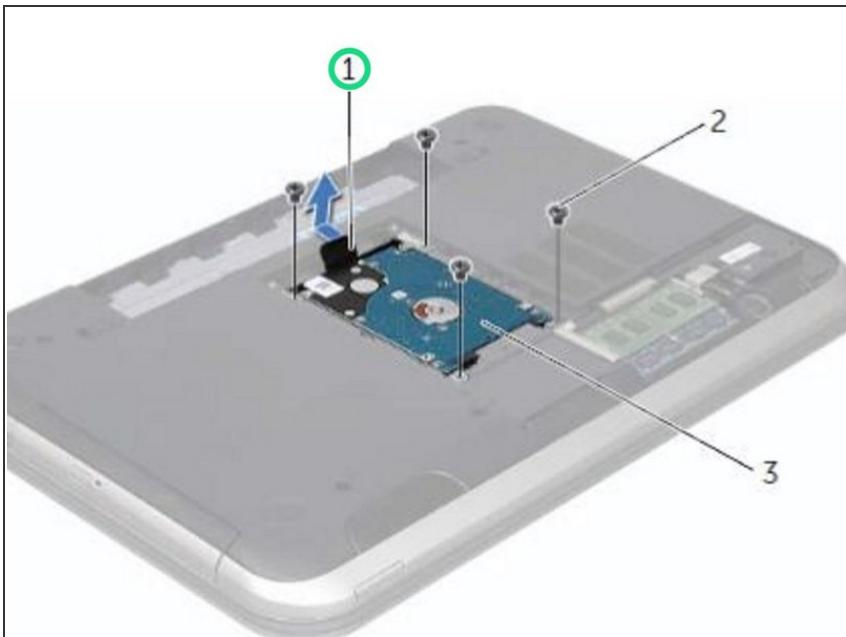

- Using the pull-tab, slide the hard-drive assembly toward the back of the computer to disconnect the hard-


drive assembly from the connector on the system board.

### Step 3 — Lifting the Hard-Drive Assembly

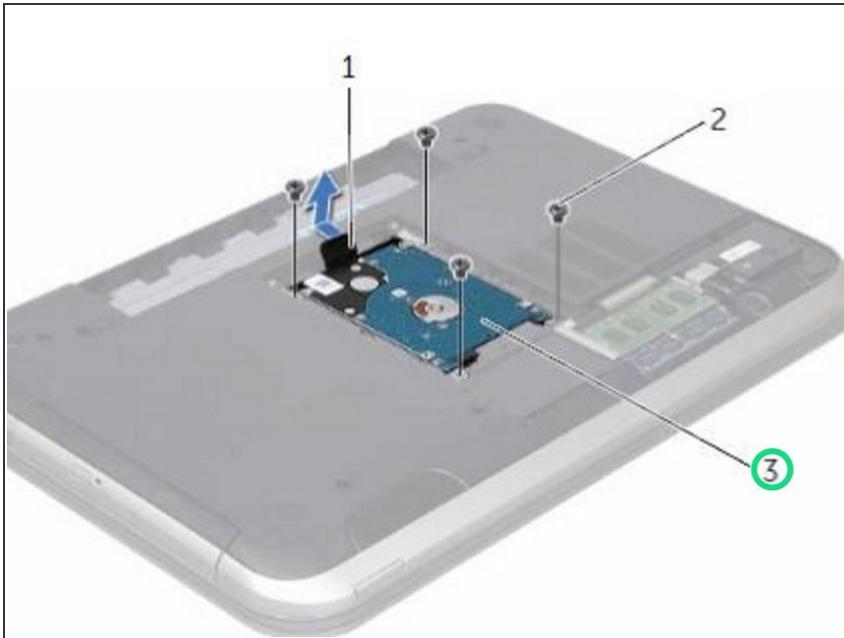


- Lift the hard-drive assembly out of the computer base.

### Step 4 — Remove the Screws

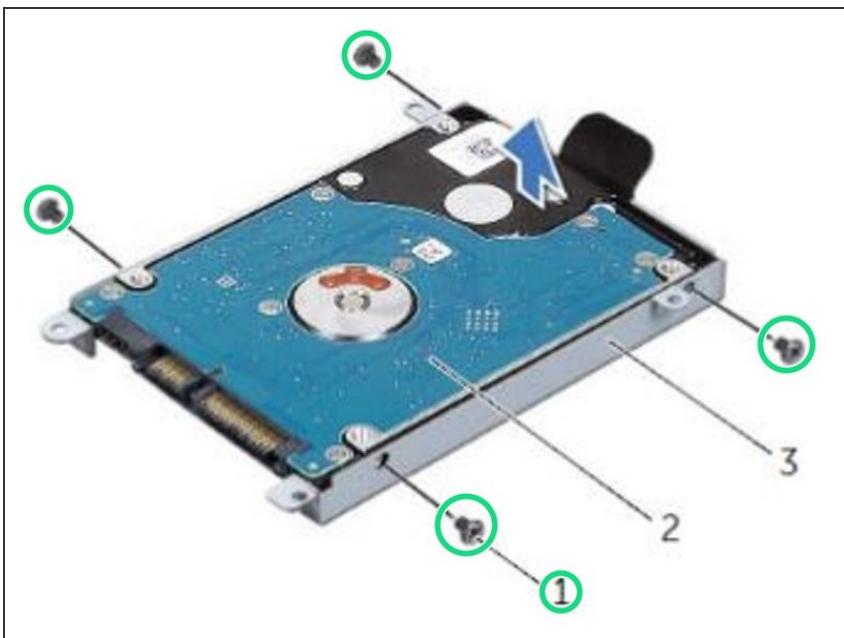


- Remove the screws that secure the hard-drive bracket to the hard drive.

## Step 5 — Lifting the Hard Drive

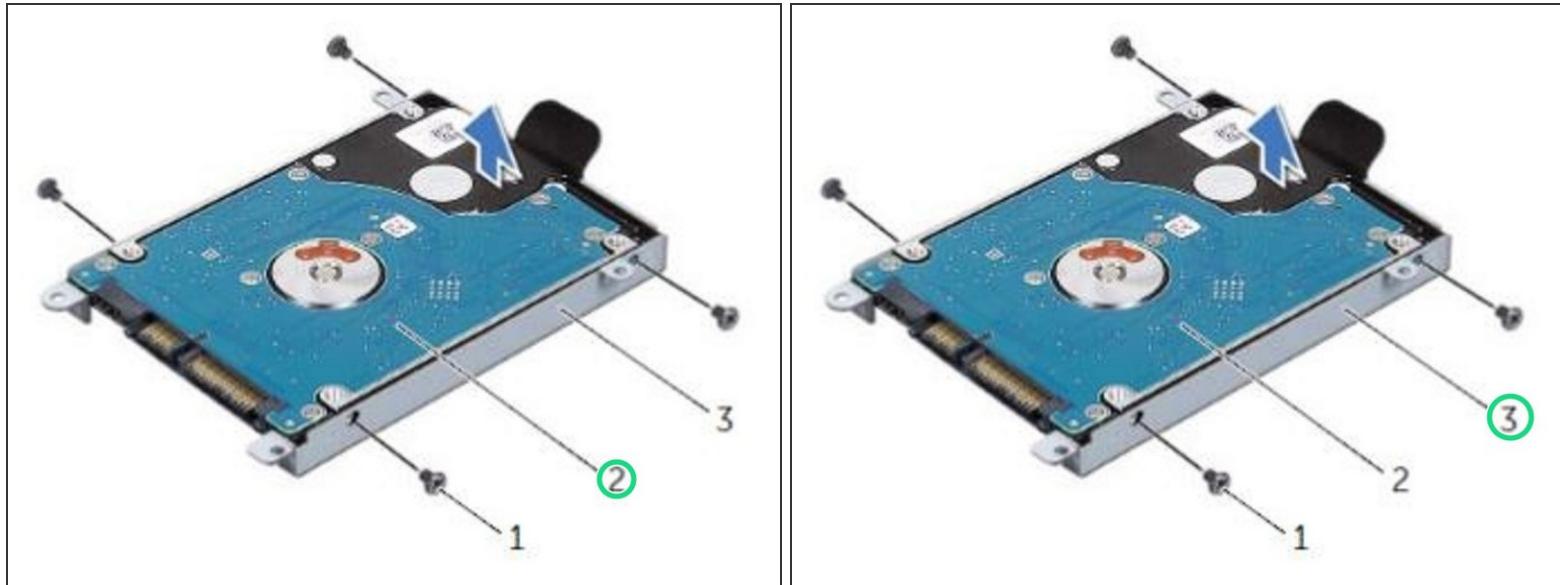


- Lift the hard drive off the hard-drive bracket.

## Step 6 — Align the Screw Holes

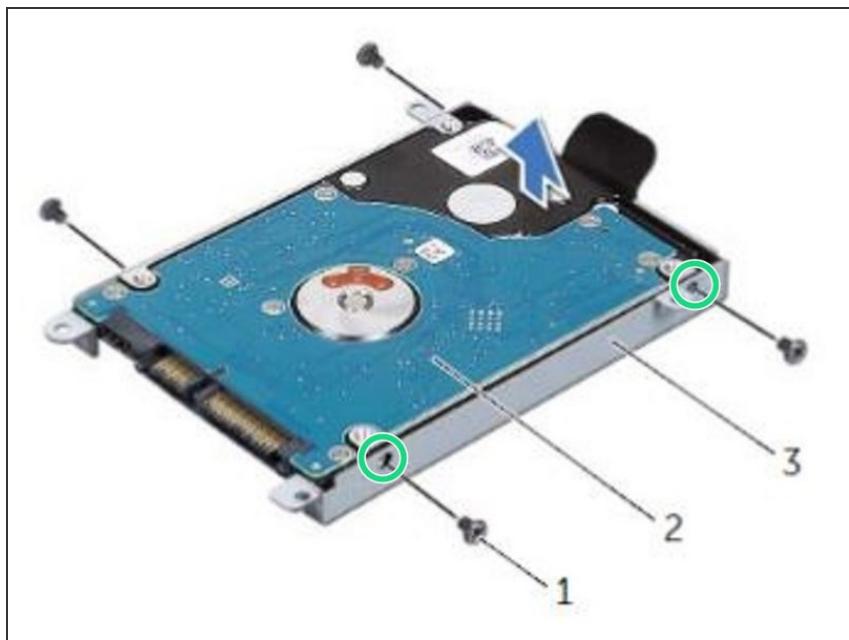


- Align the screw holes on the hard drive-bracket with the screw holes on the **NEW** hard drive.

## Step 7 — Replace the Screws

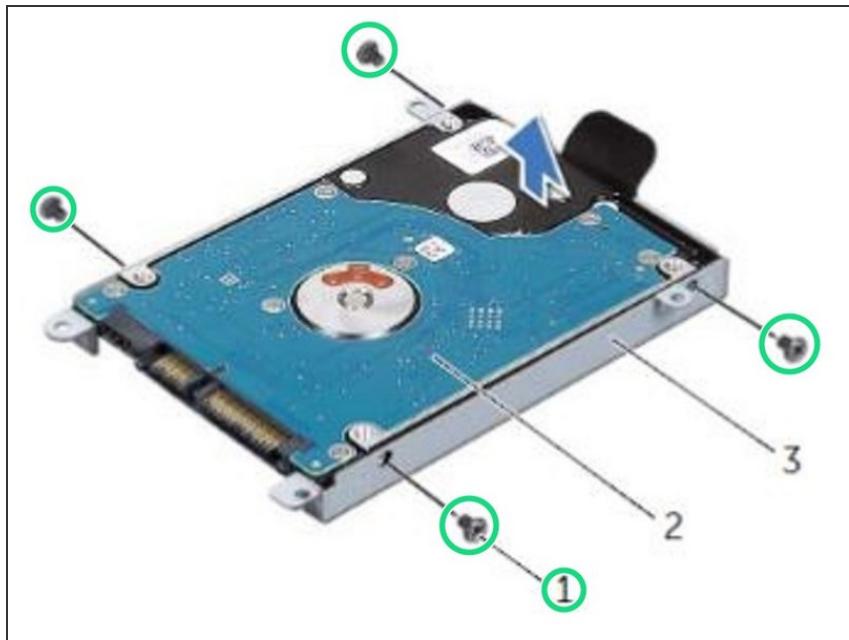


- Replace the screws that secure the hard-drive bracket to the hard drive.

## Step 8 — Place the Hard-Drive Assembly

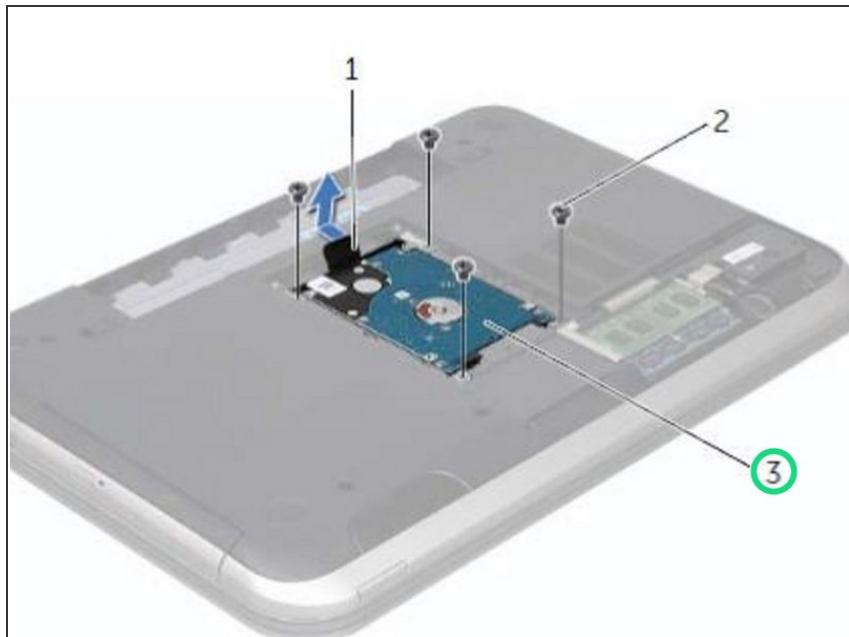


- Place the hard-drive assembly on the computer base.

## Step 9 — Sliding the Hard Drive Assembly

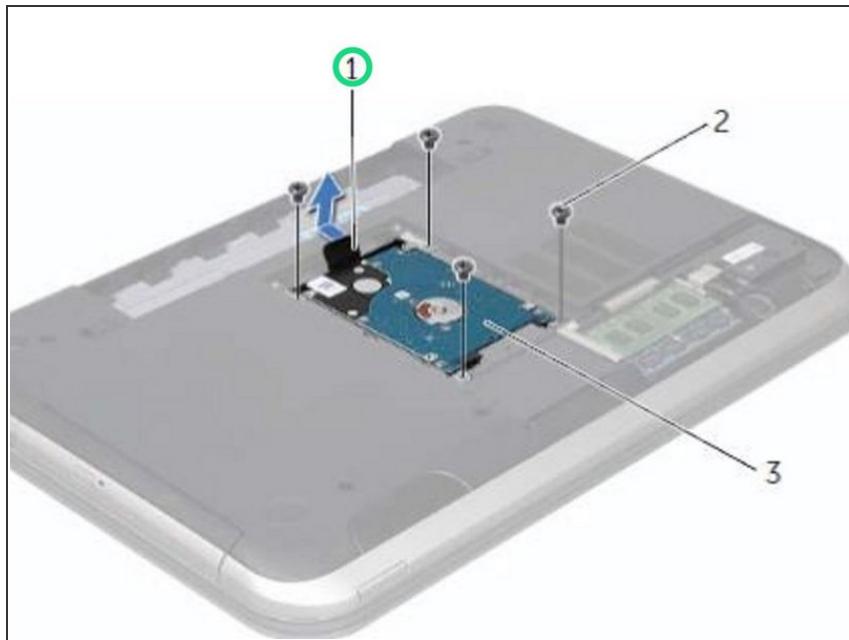

- Using the pull-tab, slide the hard-drive assembly toward the front of the computer, to connect the hard-drive assembly to the connector on the system board.

## Step 10 — Replace the Screws

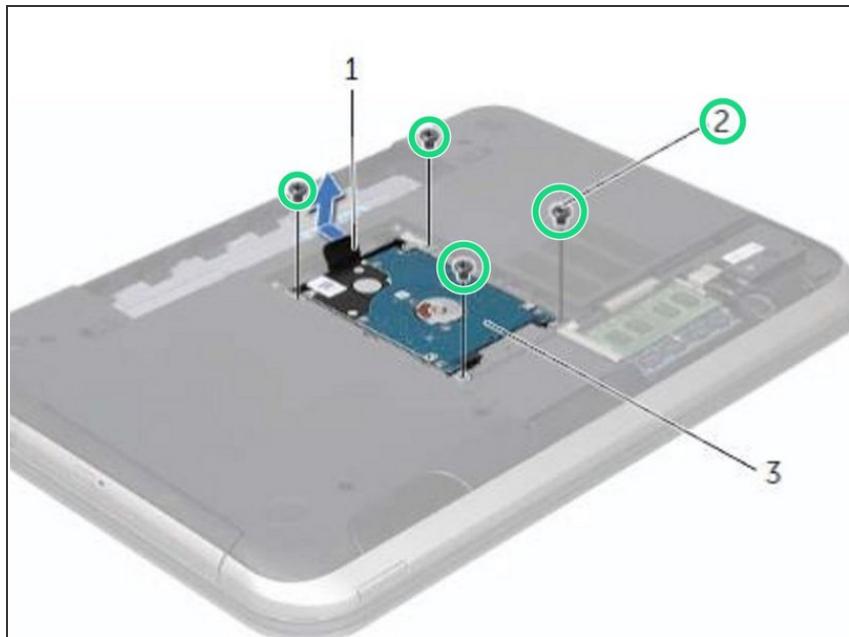

- Replace the screws that secure the hard-drive assembly to the computer base.