



Dell Inspiron 15z 1570 Display Assembly Replacement

Written By: Terrence15




INTRODUCTION

In this guide, we will be showing you how to remove and replace the Display Assembly.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws

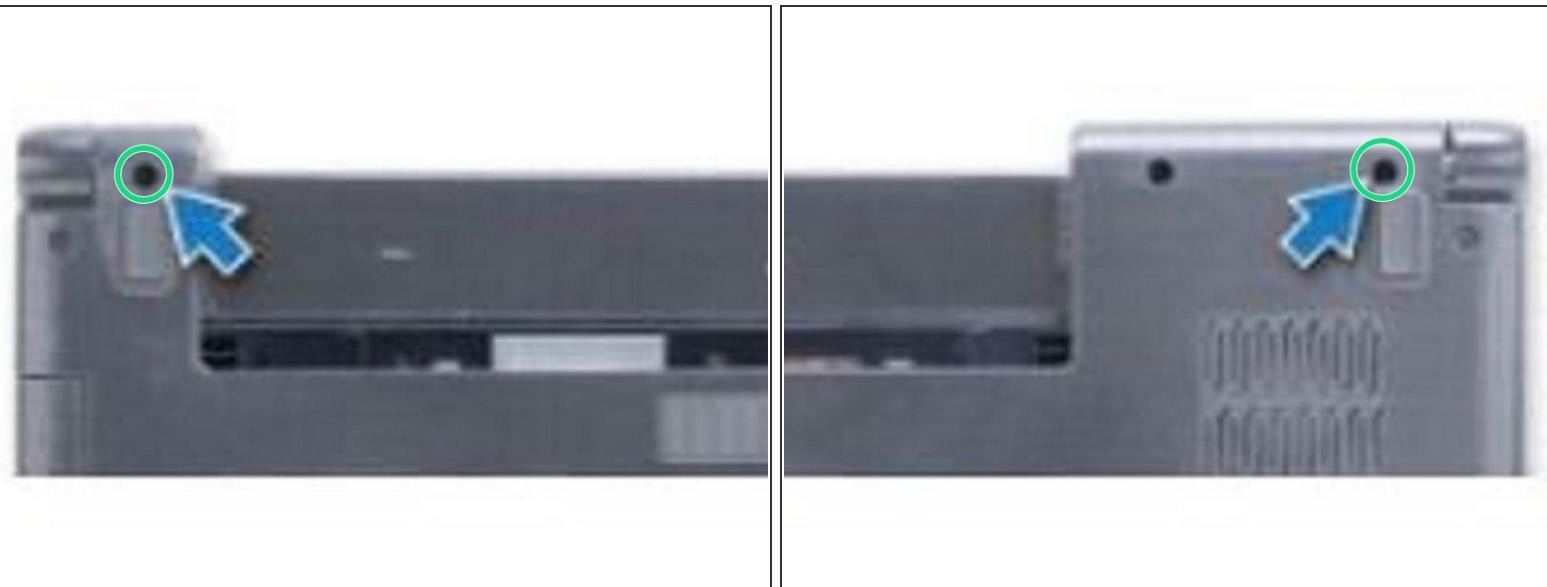


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface.


- Remove the two screws on the base of the computer that secure the display assembly to the computer base.

Step 2 — Disconnect the Display Cable

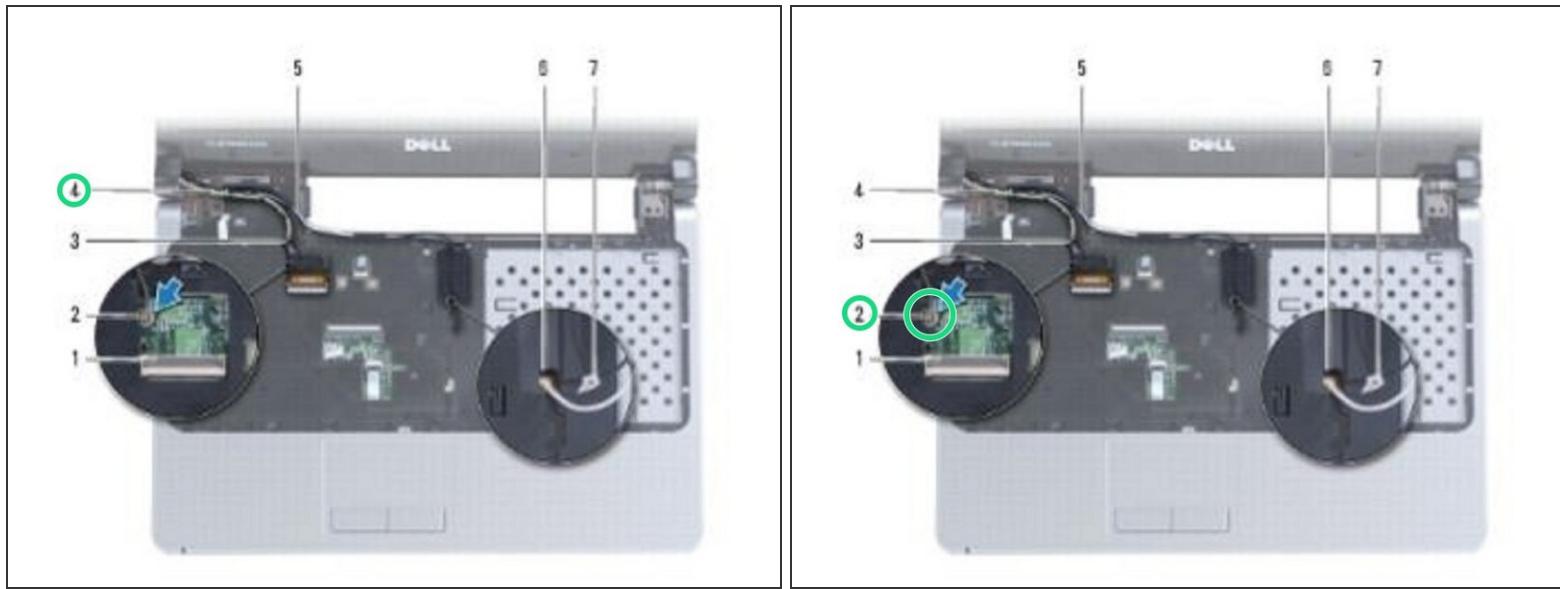


- Disconnect the display cable and remove the screw from the system board.

Step 3 — Pull the Antenna Cables

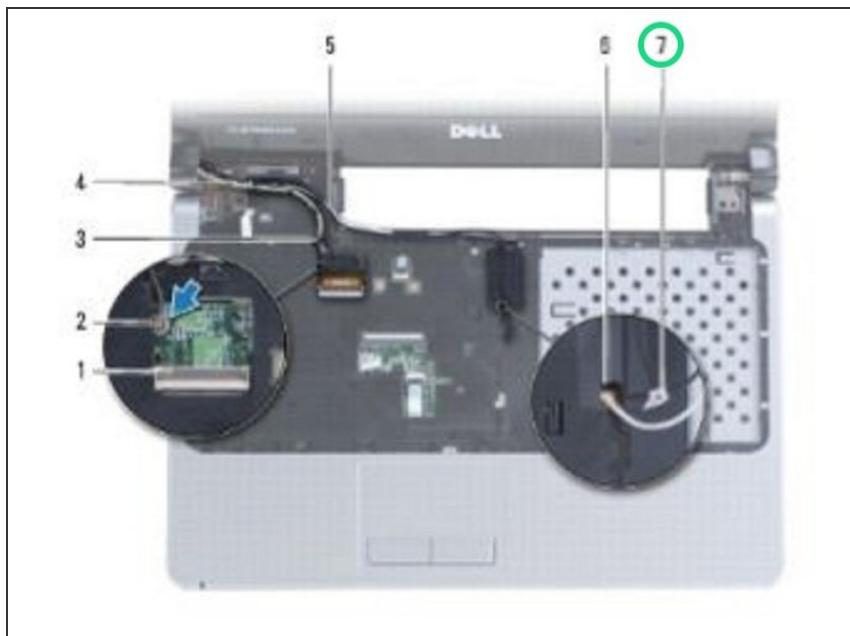

- Pull the Mini-Card antenna cables up through the slot in the computer base.

Step 4 — Note the Routing

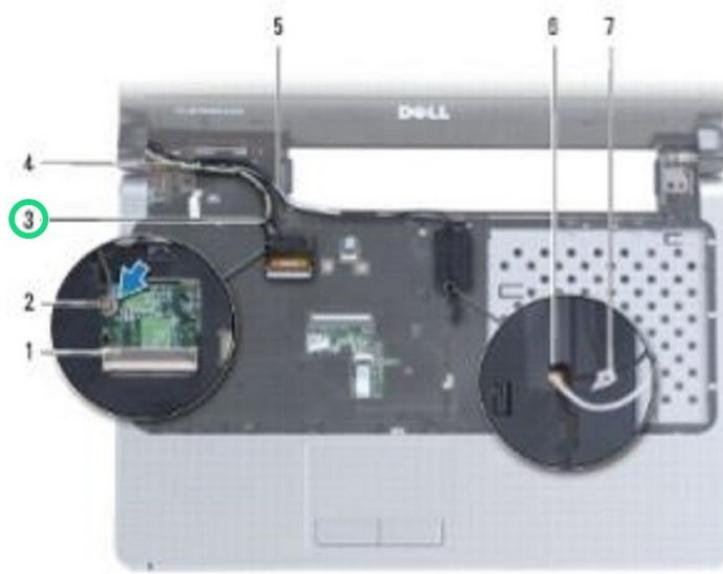

- Note the routing of all the cables and remove them from their routing guides.

Step 5 — Hold the Display



- Hold the display while you remove the three screws that secure the display assembly to the computer base.

Step 6 — Removing the Display Assembly




- Lift and remove the display assembly from the computer base.

Step 7 — Placing the Display Assembly



- Using the alignment posts, place the display assembly in position and replace the three screws that secure the display assembly to the computer base.


Step 8 — Routing the Cables

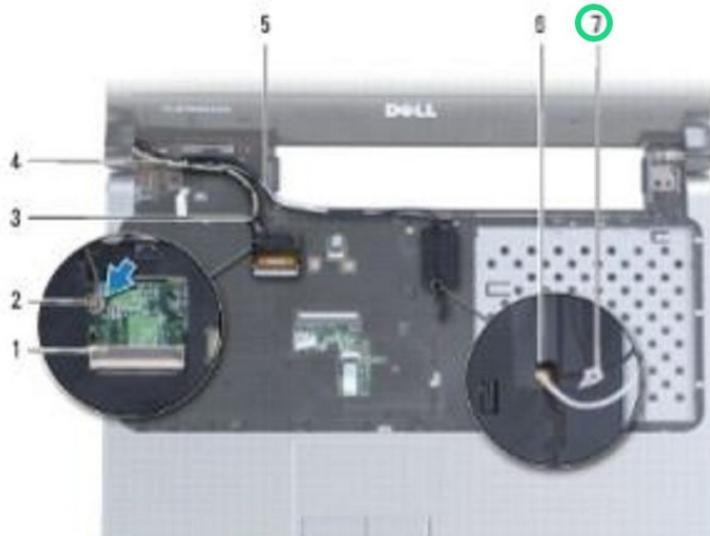

- Route the Mini-Card antenna cables and display cable through their routing guides.

Step 9 — Routing the Cables

- Route the antenna cables through the slot in the computer base.

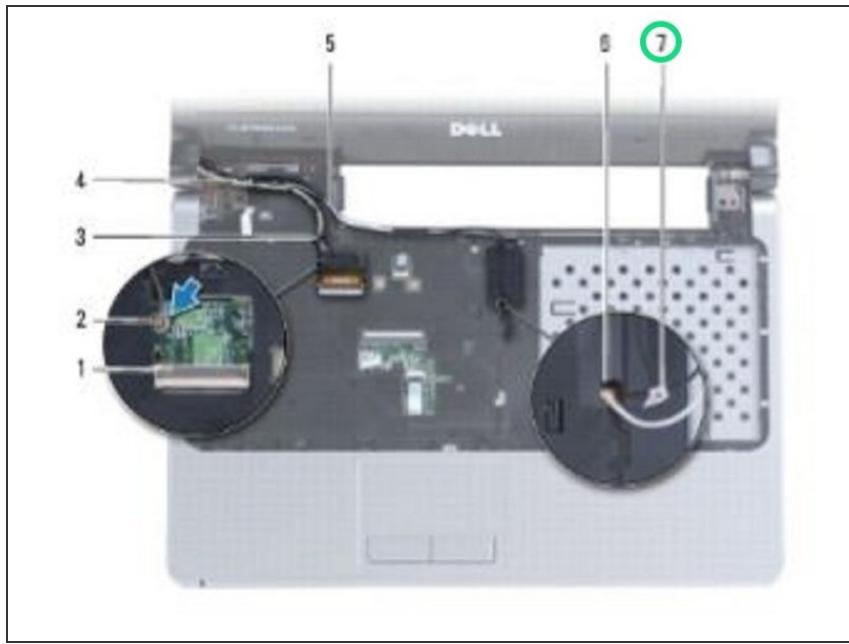

Step 10 — Replace the Screw

- Replace the screw and connect the display cable.

