




# Dell Inspiron 15z 5523 Display Assembly Replacement

Written By: Terrence15

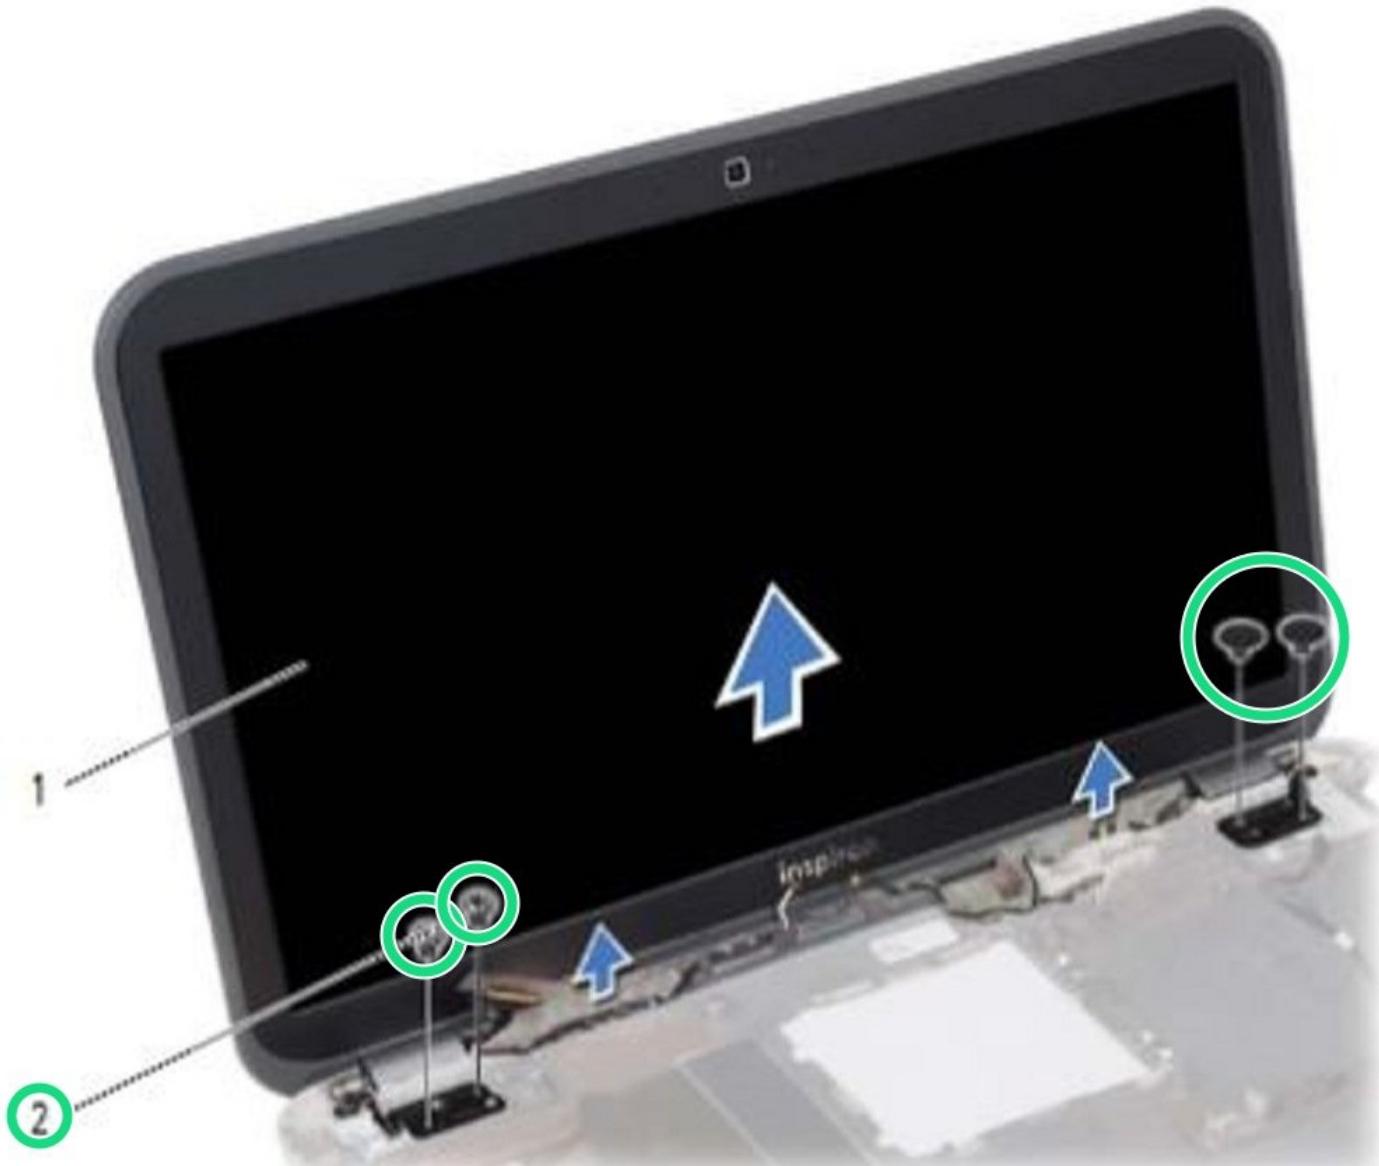


## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Display Assembly.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Remove the Screws

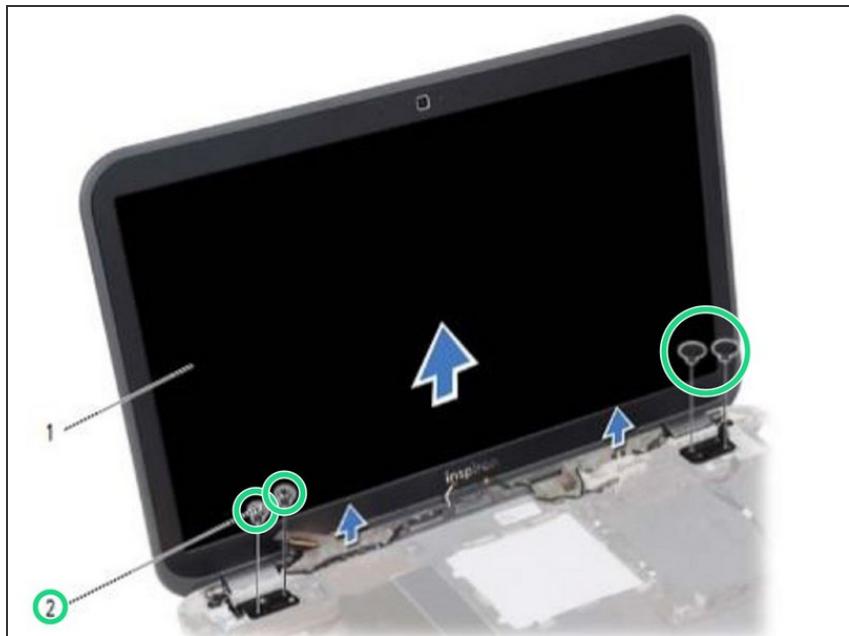

**⚠️** **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Remove the screws that secure the display assembly to the computer base.

## Step 2 — Lifting the Display Assembly




- Lift the display assembly off the computer base.

## Step 3 — Placing the Display Assembly



- Place the **NEW** display assembly on the computer base and align the screw holes on the display assembly with the screw holes on the computer base.

## Step 4 — Replace the Screws

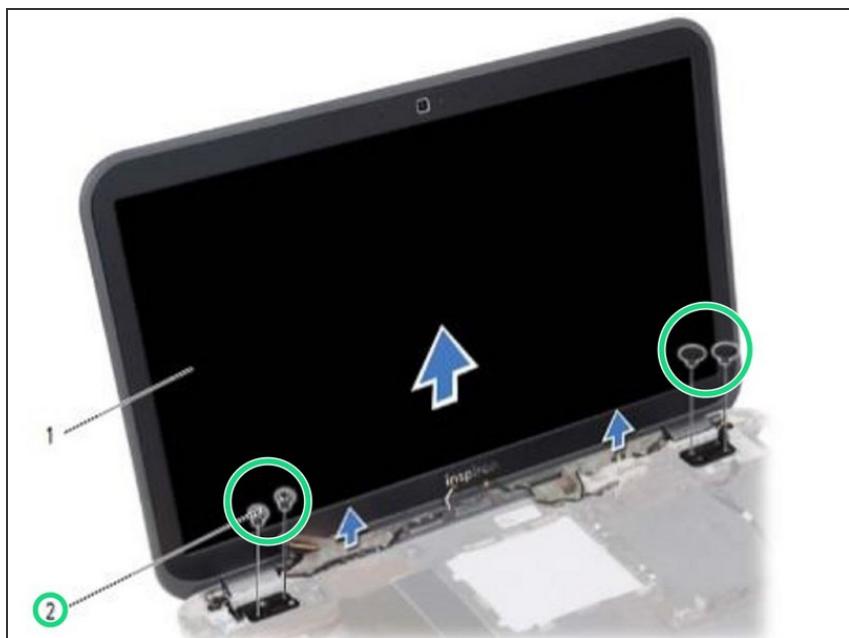

- Replace the screws that secure the display assembly to the computer base.