



Dell Inspiron 17-3721 CMOS Battery Replacement

The CMOS Battery stores a charge on the laptop while it is off to retain settings. It may die and need to be replaced, or can be removed to reset the BIOS.

Written By: Christopher Meninno



This document was generated on 2019-12-28 03:06:29 PM (MST).

INTRODUCTION

Over time, a laptop's CMOS battery will stop holding it's charge and eventually die out. This guide will show how to remove and replace the CMOS battery of the device.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — CMOS Battery



- Remove the two 6.5 mm PH1 Philips head screws on the back panel.
- Lift up the small panel from the top, using the plastic opening tools if necessary.

Step 2



- Remove the CMOS battery with the plastic opening tools.

⚠ Be careful while prying it open, the battery holder can break if you use too much force.

⚠ Do not use metal tools when touching anything that can have an electric charge.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-12-28 03:06:29 PM (MST).

