



# Dell Inspiron 17-5755 Keyboard Replacement

This guide will instruct you on how to replace the keyboard for the Dell Inspiron 17-5755.

Written By: Gabriel Espinal




## INTRODUCTION

This guide will allow you to replace a broken keyboard for the Dell Inspiron 17-5755. Please ensure that the battery is removed before performing this replacement.

### TOOLS:



- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery

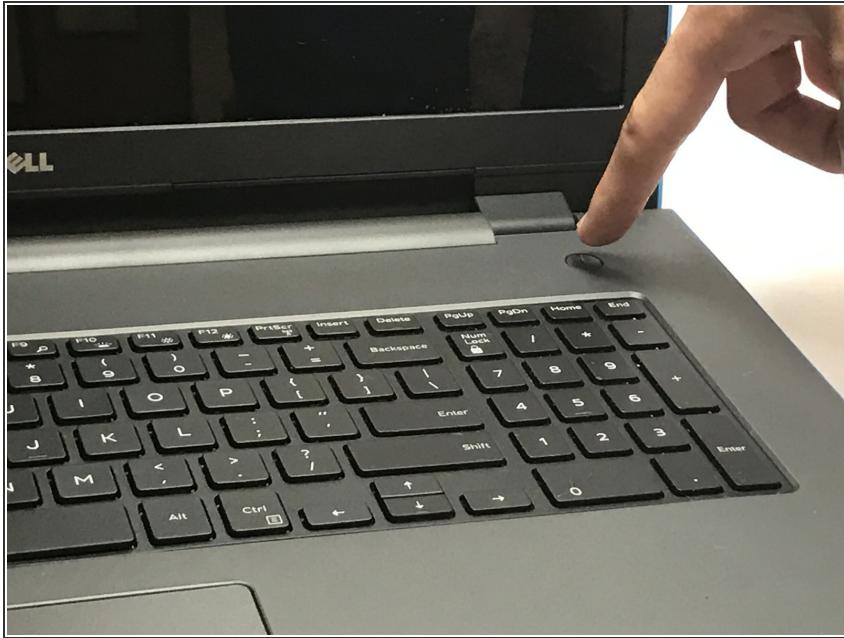

**⚠** Make sure the computer has been shut down, and isn't plugged into an outlet before attempting to remove the battery.

## Step 2

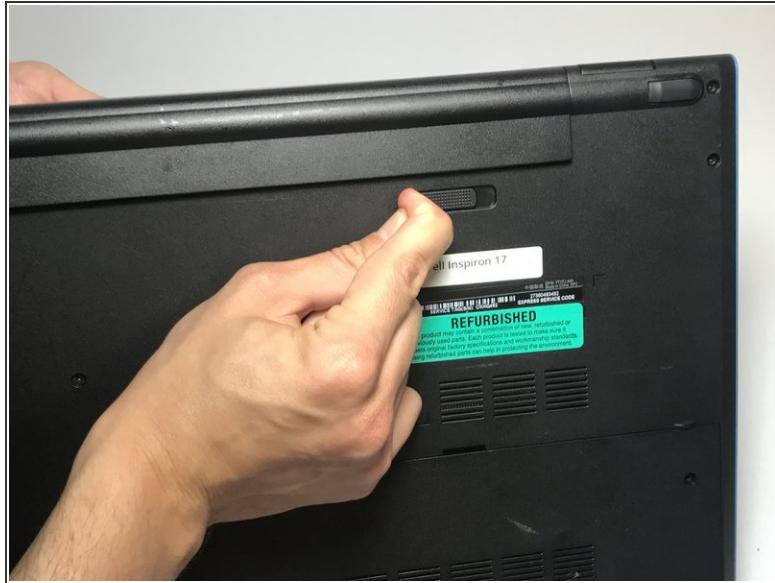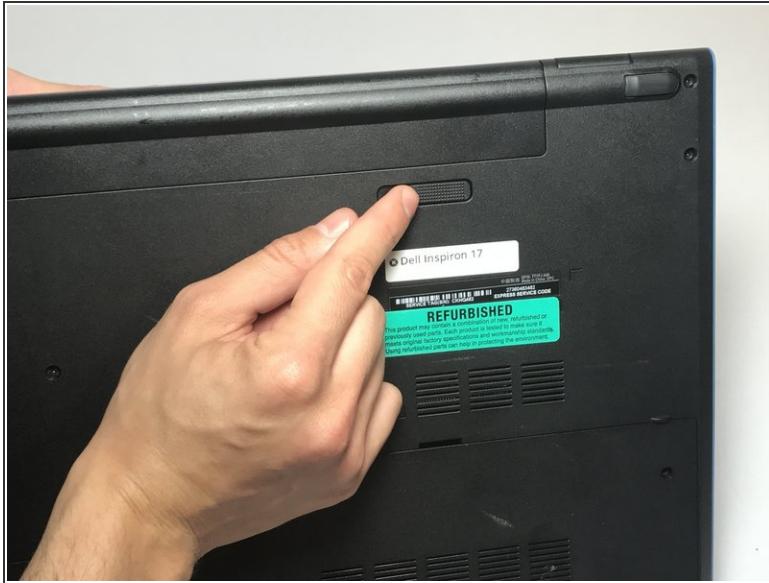


- Find the battery release latch on the bottom side of the computer.
- Slide the latch to the left until you hear a "click". This indicates that the battery has been released.

## Step 3



- Safely remove the battery from the laptop.

## Step 4 — Keyboard

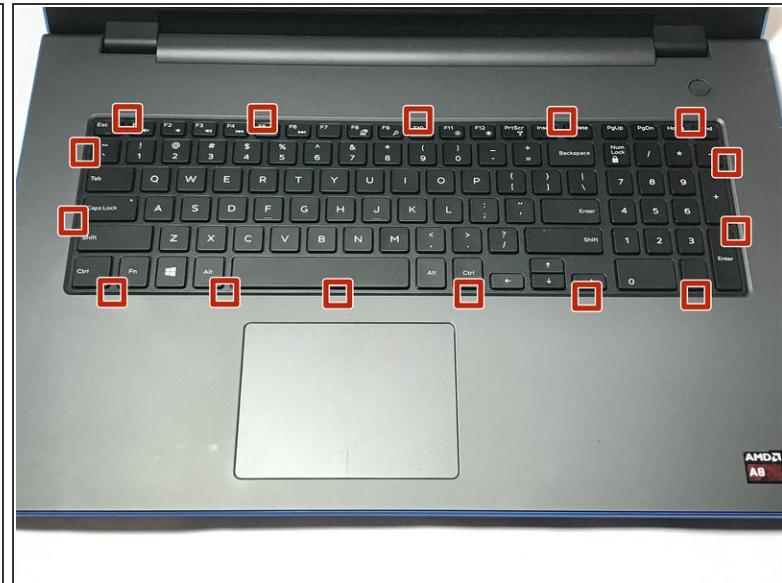


- Open the display of the laptop as far as possible, and locate the tabs which secure the keyboard to the laptop.

## Step 5




- Use a plastic opening tool to gently release the tabs that secure the keyboard to the laptop.

## Step 6

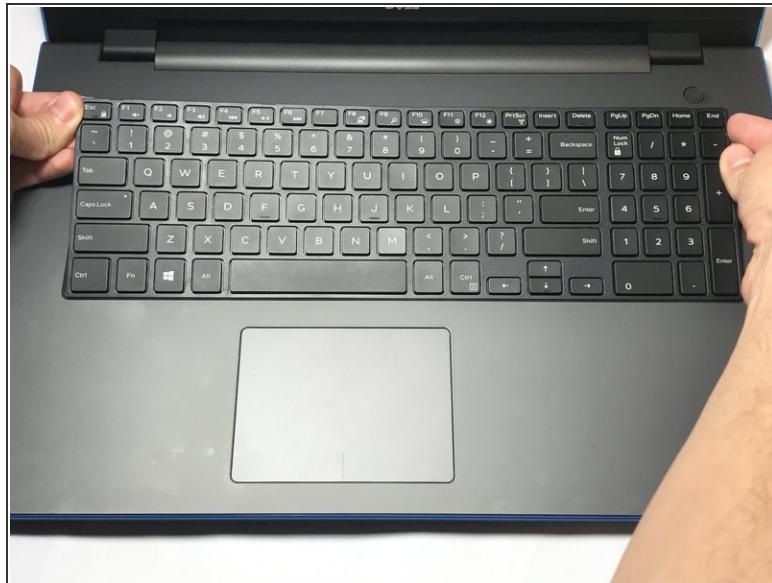

- Carefully lift the keyboard from the laptop, being mindful of any attachments that it may have.

## Step 7

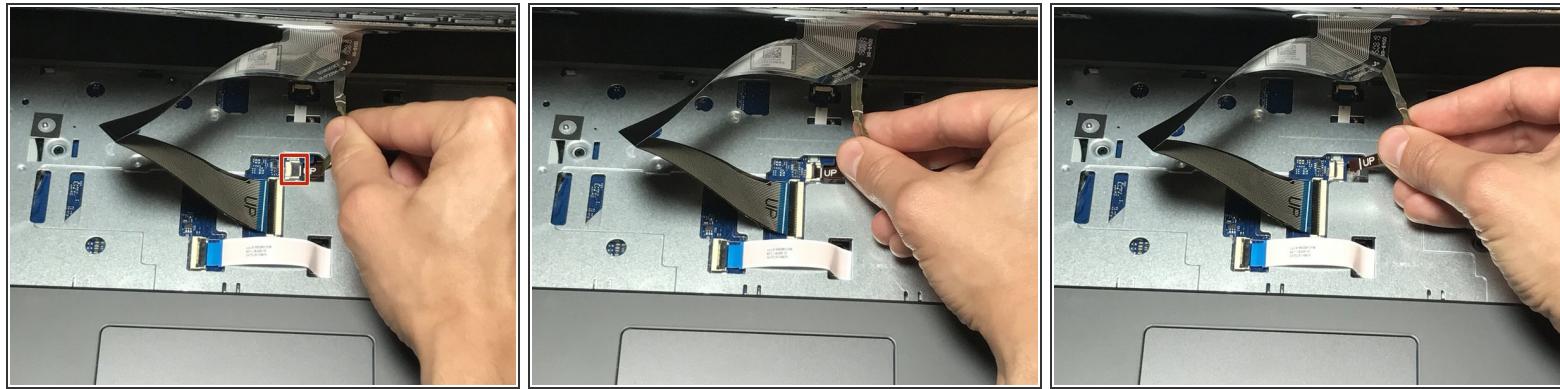

- Lift the zero insertion force (ZIF) tab that secures the keyboard back light ribbon cable
- Afterwards, carefully detach the backlight cable from the laptop.

## Step 8



- Gently release the ZIF tab that secures the keyboard ribbon cable to the laptop.
- Afterwards, carefully slide the cable out of its slot.

## Step 9



- Now that the keyboard is detached from the laptop, you may safely remove it.

To reassemble your device, follow these instructions in reverse order.