



Dell Inspiron 17R-5737 Optical Drive Replacement

The optical drive must be removed before removing the palmrest.

Written By: Mack Chabot



 **TOOLS:**

- JIS #00 Screwdriver (1)

Step 1 — Battery



 Make sure the laptop is off before attempting to remove the battery.

- Flip over your laptop so that the battery faces you.

Step 2



- Slide each latch away from the battery to unlock it.

Step 3



- Lift the battery upwards to remove it.
- *i* Continue holding the latches when removing the battery.

Step 4 — Optical Drive



- Remove one 4.8mm screw with a JIS #00 screwdriver.
- Remove the optical drive.

To reassemble your device, follow these instructions in reverse order.