



# Dell Inspiron 5100 PP07L Keyboard Replacement

How to replace a Dell Inspiron 5100 PP07L keyboard.

Written By: May Chauvin



## INTRODUCTION

You will be removing the keyboard to either replace or access various parts of the laptop.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Keyboard



- Remove battery
- Open screen so that it lies flat.

## Step 2




- Starting from the right side of the hinge cover, use the flat end of the spudger to pry up the hinge cover and gently remove it.

## Step 3



- Using a Phillips screwdriver remove the four M2 x 3-mm screws holding in the keyboard.

## Step 4

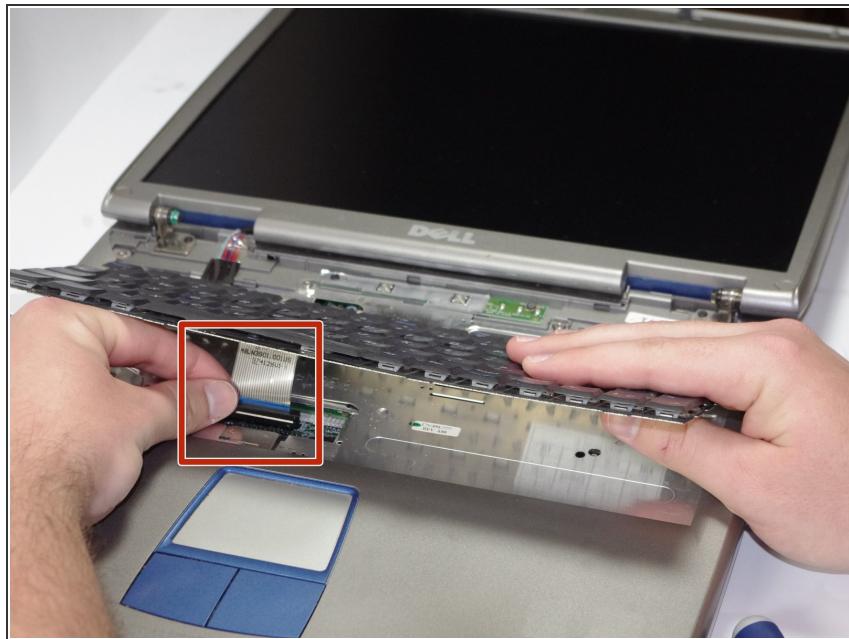

- Lift keyboard and detach the interface connector.
- Take extra care when removing and handling the keyboard. The key caps on the keyboard are fragile and easily come off.*

To reassemble your device, follow these instructions in reverse order.