



Dell Inspiron 5100 PP07L Screen Replacement

Your screen does not display anything, but you can hear your computer running. Your screen cable may be unplugged or damaged, and you need to replace it.

Written By: May Chauvin



INTRODUCTION

You will be able to access wires connecting your screen and replace it if needed.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Keyboard



- Remove battery
- Open screen so that it lies flat.

Step 2




- Starting from the right side of the hinge cover, use the flat end of the spudger to pry up the hinge cover and gently remove it.

Step 3



- Using a Phillips screwdriver remove the four M2 x 3-mm screws holding in the keyboard.

Step 4

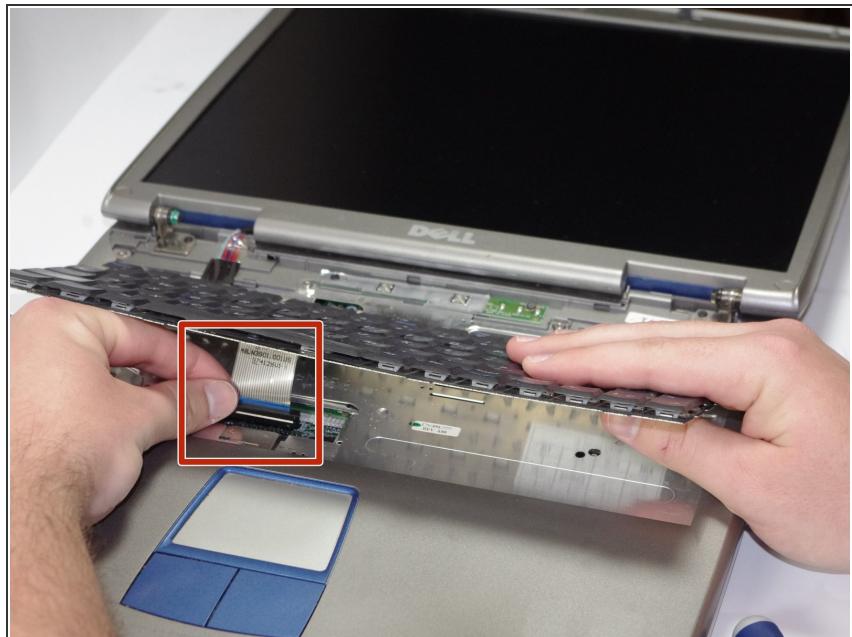

- Lift keyboard and detach the interface connector.
- Take extra care when removing and handling the keyboard. The key caps on the keyboard are fragile and easily come off.*

Step 5 — Screen



- Using a Phillips screwdriver remove the two screws (5.8mm) located at the rear of the laptop.

Step 6



- Detach the screen connector.

Step 7



- Using a Phillips screwdriver remove the four screws (5.8 mm) located at hinges of the screen.

Step 8



- Lift and remove display screen.

To reassemble your device, follow these instructions in reverse order.