




Dell Inspiron 530 DCMF Bios Battery Replacement

This will show you how to replace your computer's bios battery

Written By: Drew Cunningham

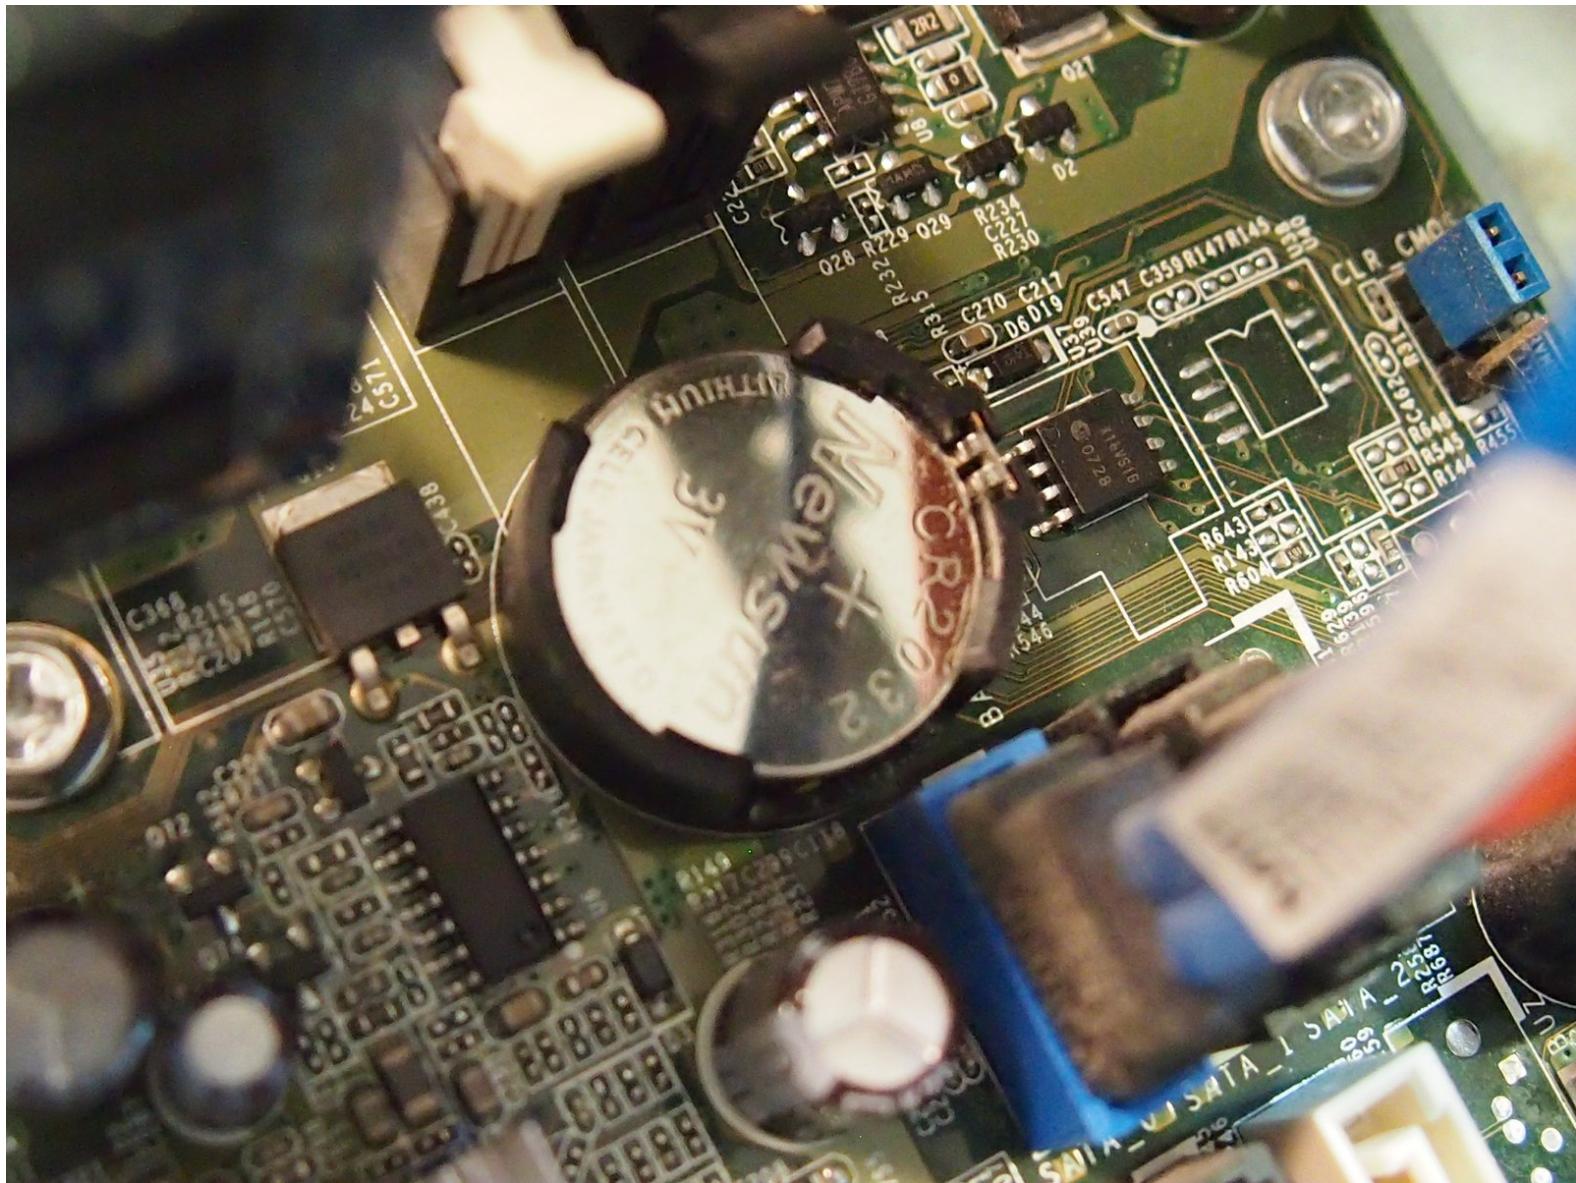

INTRODUCTION

Replacing the battery is easy, you pop out the old one and pop in the new one.

TOOLS:

- **Screwdriver** (1)
- **Spudger** (1)

Step 1 — Bios Battery



- Unscrew the two screws shown that are holding on the side panel. Then slide the side panel towards the back to remove it.

Step 2



- Locate the Bios battery as shown. Using you fingers or a spudger, pop it out from the side.

To reassemble your device, follow these instructions in reverse order.