



# Dell Inspiron 5758 DC Jack Replacement

A guide to demonstrate how to replace a broken, damaged, or worn-down DC Jack for the Dell Inspiron 5758.

Written By: Antonio Zuniga



## INTRODUCTION

This guide is to replace the DC Jack in a Dell Inspiron 5758 laptop. Ensure you have all replacement parts and tools needed for this step-by-step replacement guide.


### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [JIS #000 Screwdriver](#) (1)
- [JIS #00 Screwdriver](#) (1)

### PARTS:

- [Dell Inspiron 17 5758 4-cell Laptop Battery 40Wh](#) (1)
- [Dell Inspiron 17 5758 DC Power Input Jack with Cable](#) (1)

## Step 1 — Battery

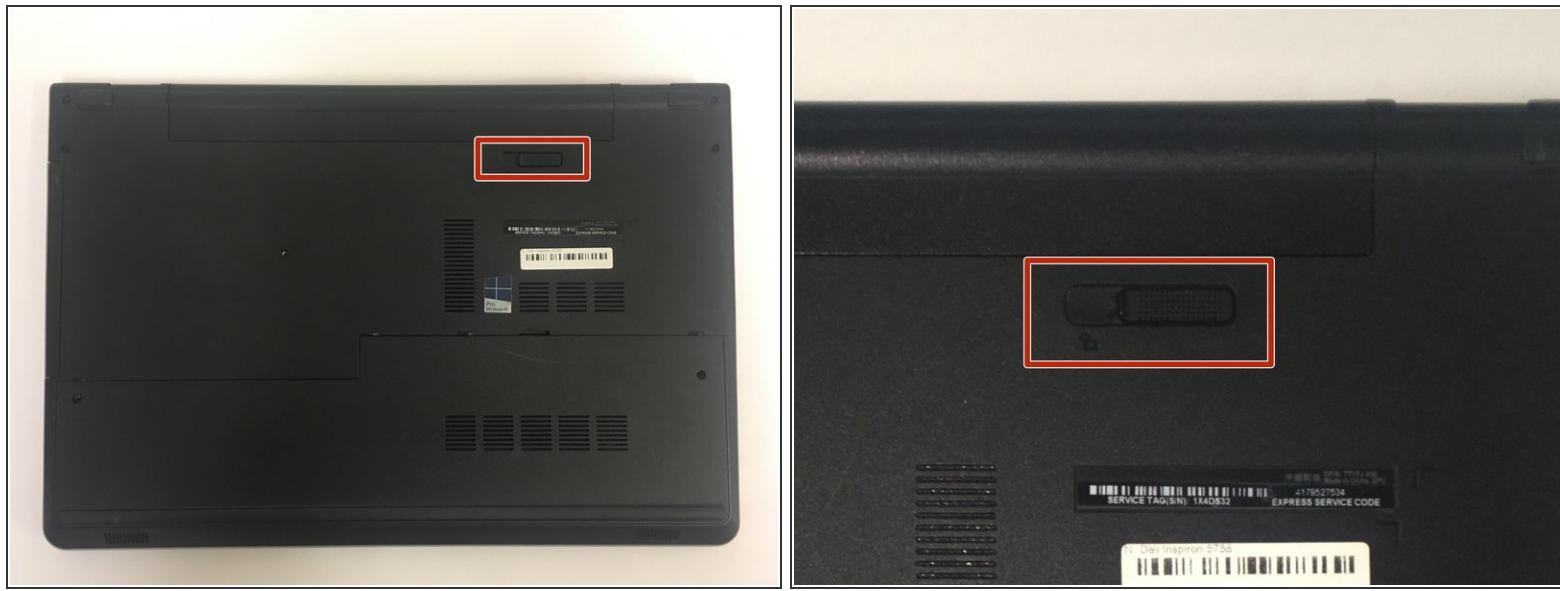

- Flip the laptop with the serial number facing up. You should be able to see the battery release switch.

## Step 2



- Slide the battery release switch towards the unlock icon.
- *(i)* You should hear a click.
- Lift and pull the ejected battery to remove it.

## Step 3 — DC Jack



- Remove the one 3mm optical drive screw.
- Remove the two 8 mm screws.
- Pry up and remove the access door.

## Step 4




- Remove the one 3 mm screw.
- Remove the bracket.

## Step 5




- Unplug the antenna cables.
- Remove the Wireless Card.

## Step 6

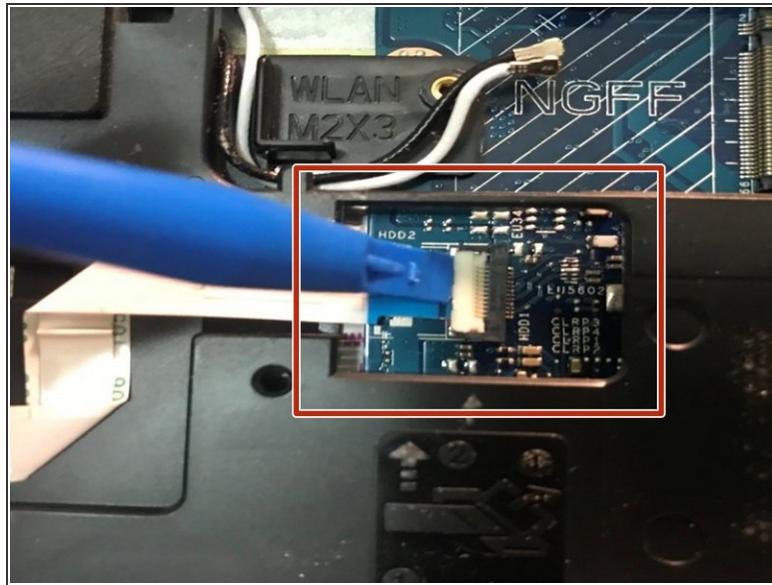


- Unplug the hard drive cable.
  - Use a plastic opening tool or your fingernail to pop the tab of the cable connector. Then you will be able to disconnect the cable.
- Remove the four 8 mm screws.
- Remove the hard drive.

## Step 7

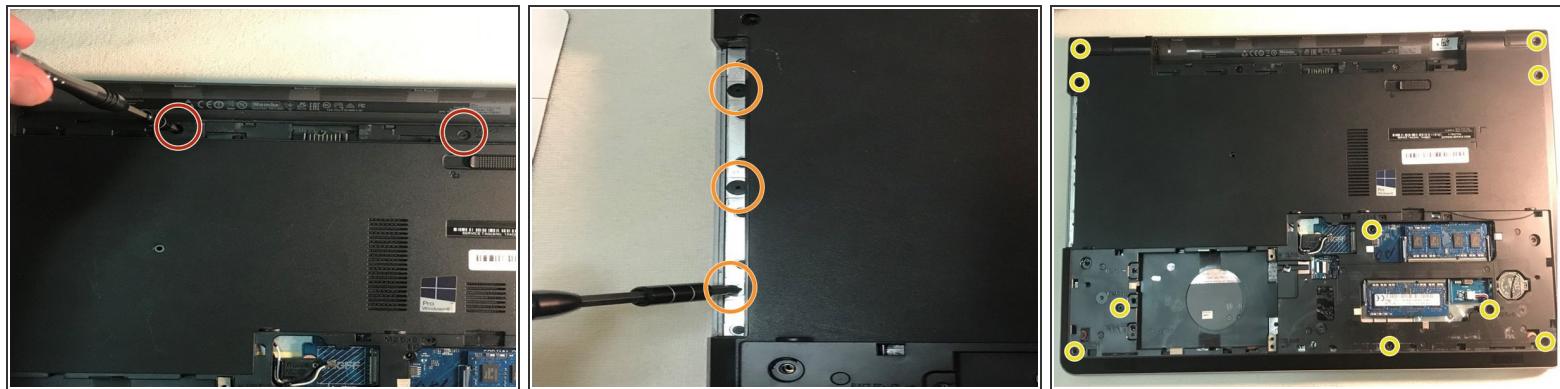



- Remove the two 3 mm screws under the battery.
- Remove the three 2 mm wafer screws under the optical drive.
- Remove the ten 8 mm base screws.

## Step 8

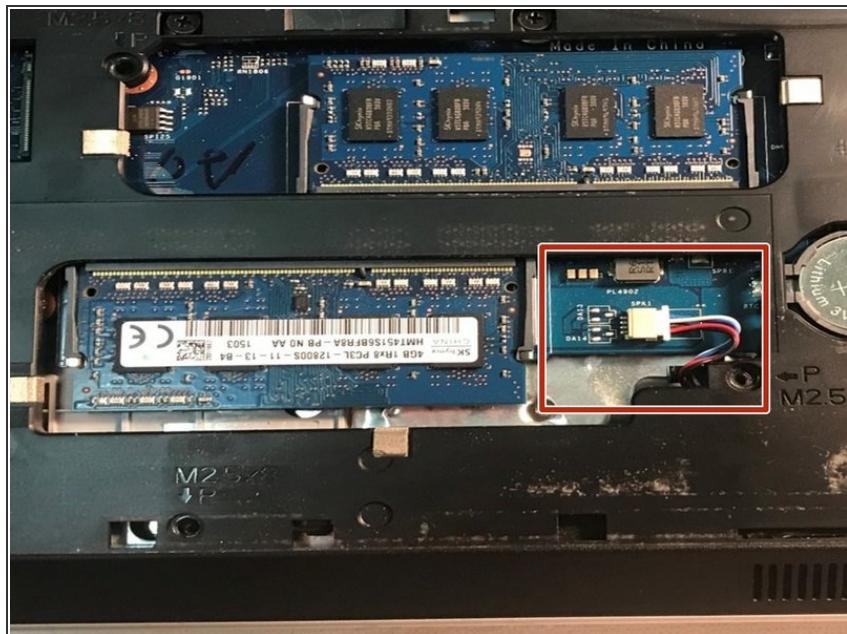


- Unplug the speaker cable by sliding to the right.

## Step 9

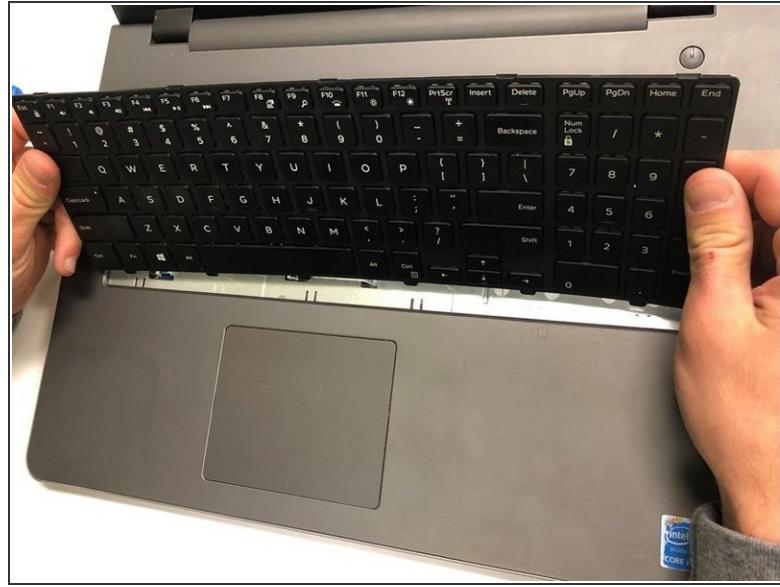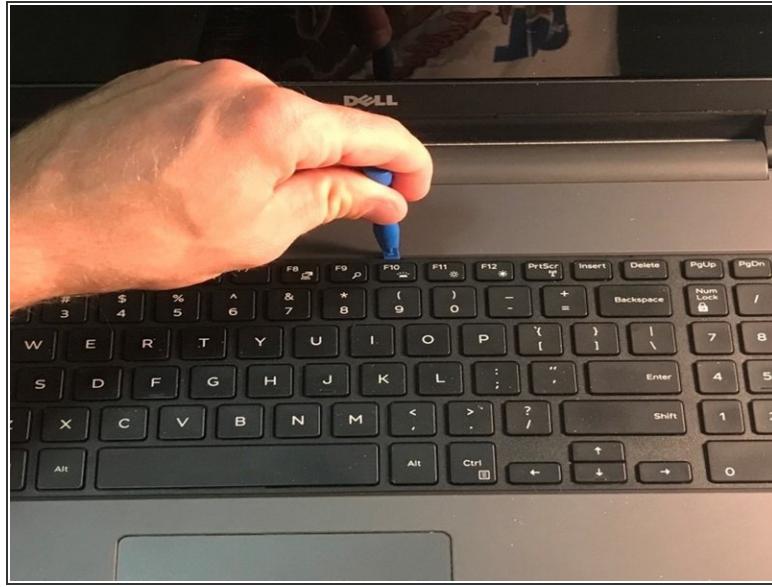


- Press in the tabs to loosen the keyboard.
- Carefully lift the keyboard up and turn it over.

## Step 10

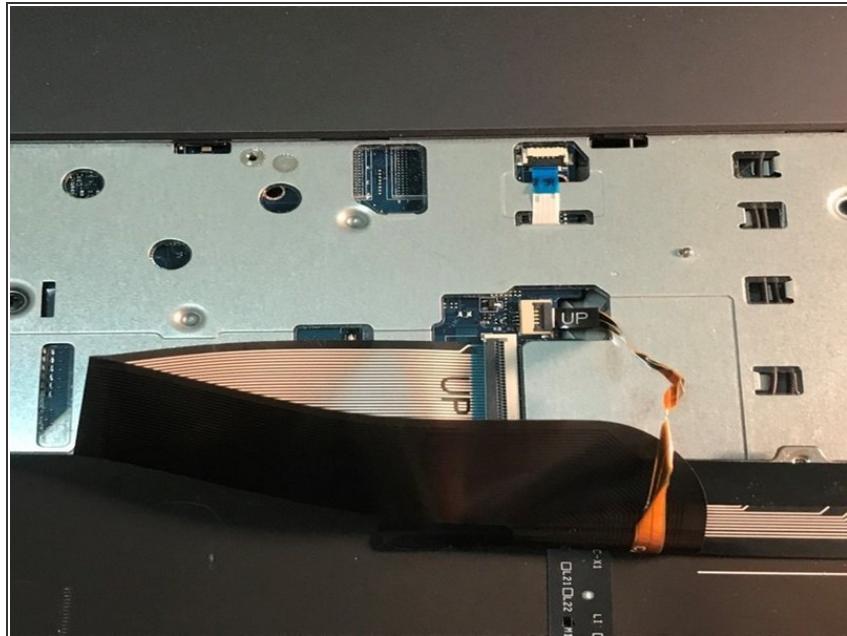



- Unplug the keyboard cable & remove the keyboard.

## Step 11

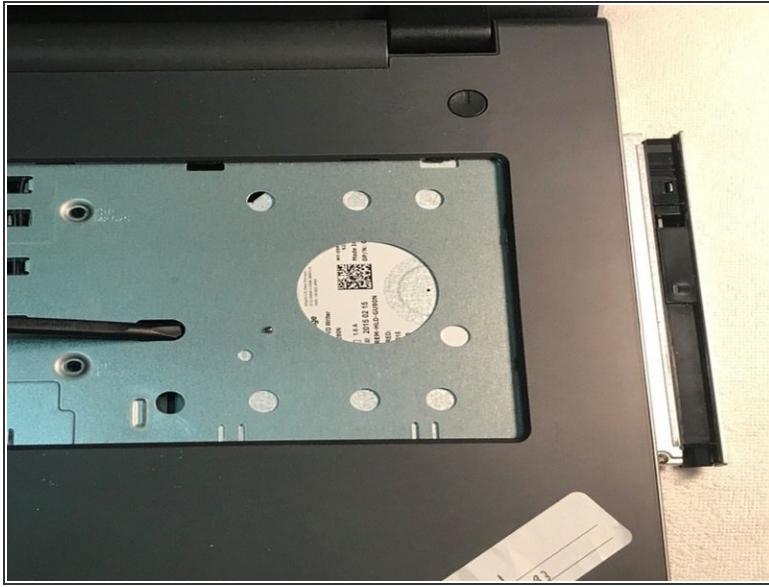



- Slide the DVD optical drive over & remove it from the laptop.

## Step 12

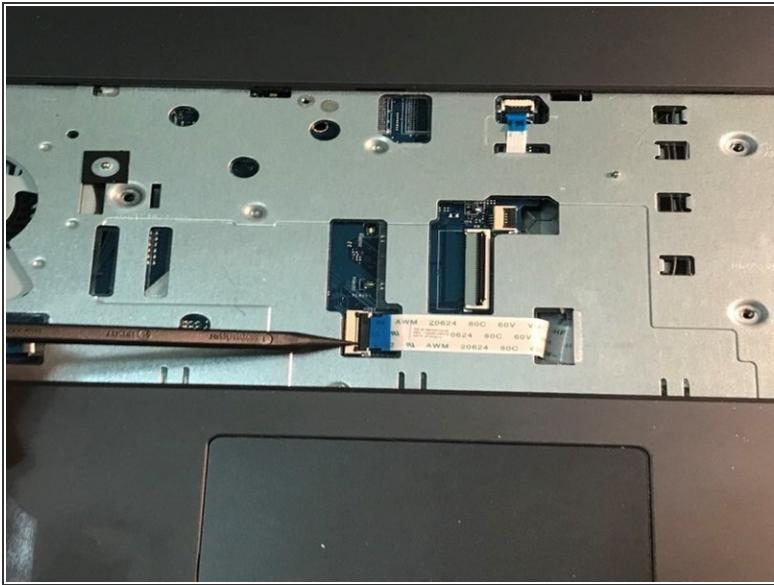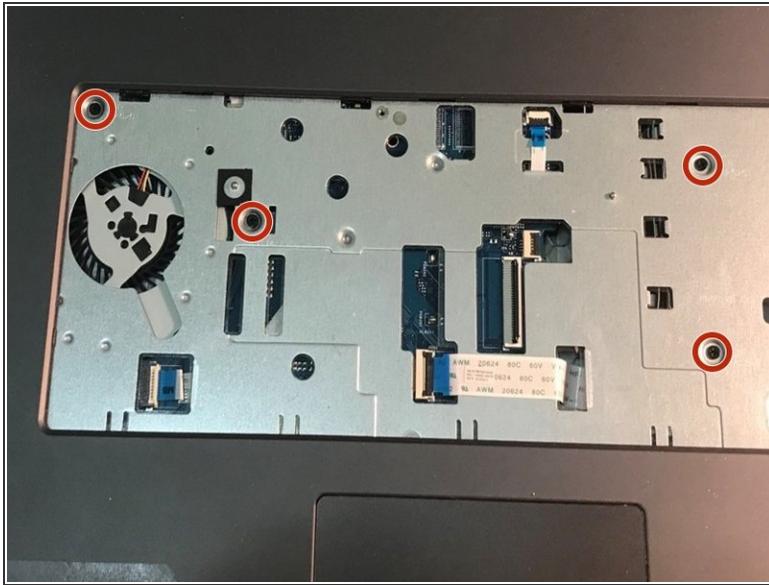

- Remove the four 5 mm screws.
- Unplug the optical drive interposer cable.

## Step 13

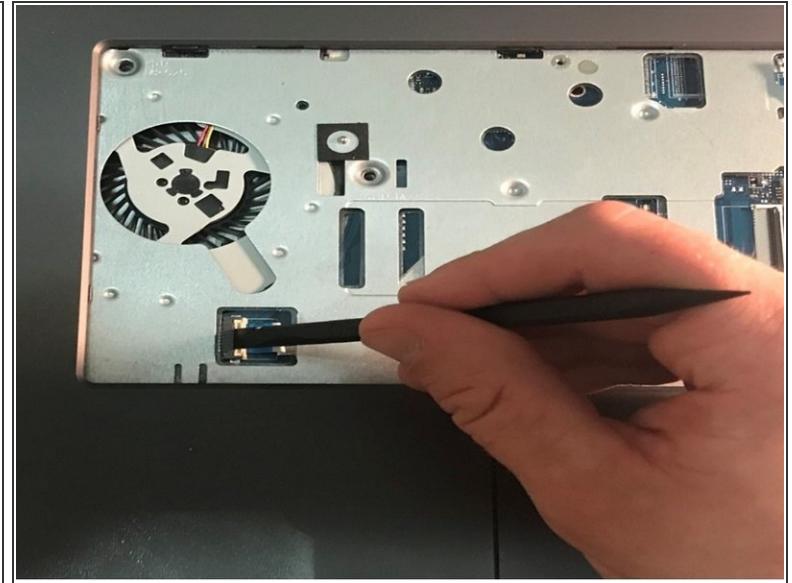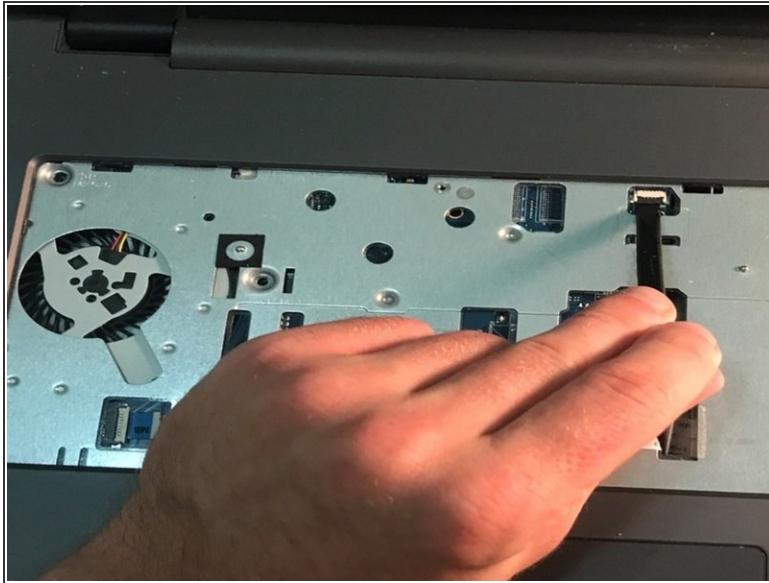


- Unplug the power button cable.
- Unplug the touchpad cable.

## Step 14





- Carefully pry off & loosen the bottom base.

## Step 15

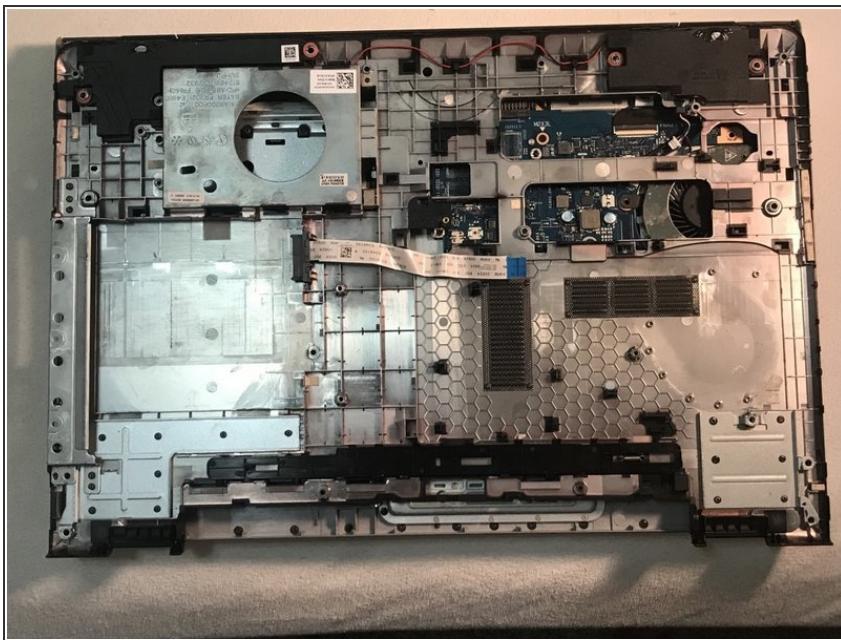

- Remove the bottom base.

## Step 16

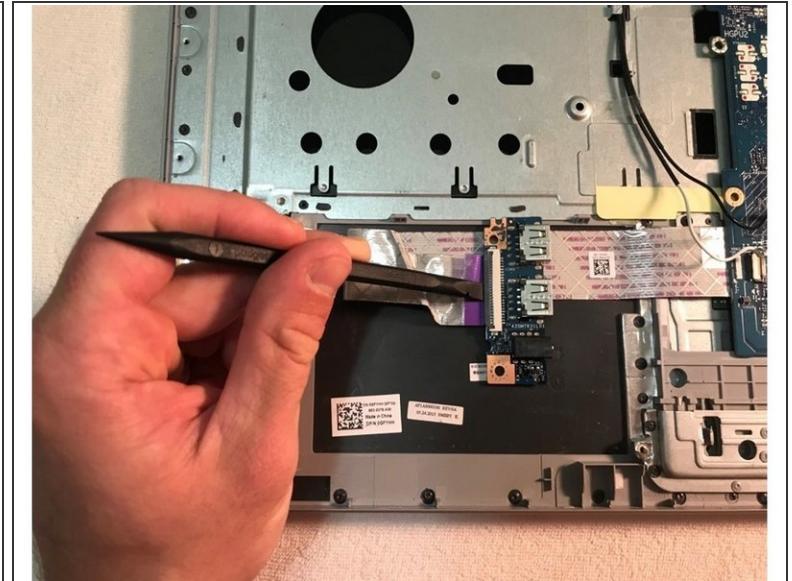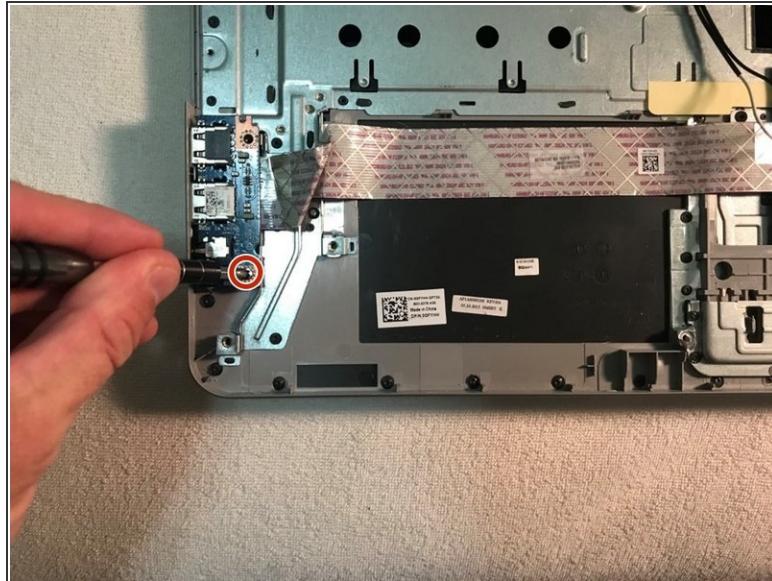

- Remove the one 5mm screw.
- Lift the circuit board & turn it over.
- Unplug the cable.
- Remove the audio/USB circuit board.

## Step 17



- Loosen the audio / USB cable.
- Remove the one 3mm motherboard screw.
- Lift the motherboard & carefully move it out of the way.

## Step 18



- Unplug the DC jack cable.
- Remove the one 3mm screw.
- Remove the DC Jack.

To reassemble your device, follow these instructions in reverse order.