



# Dell Inspiron 6000 RAM Replacement

Dell Inspiron 6000 RAM upgrade or replacement

Written By: Kenneth Odum



## INTRODUCTION

Accessing the RAM in this laptop is fairly simple and requires little disassembly.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



 To prevent injury, make sure the laptop is unplugged before removing the battery.


- Flip the laptop over, bottom-side up.

## Step 2



- Push the switch next to the battery.
- At the same time, lift the battery away from the laptop.

## Step 3 — RAM

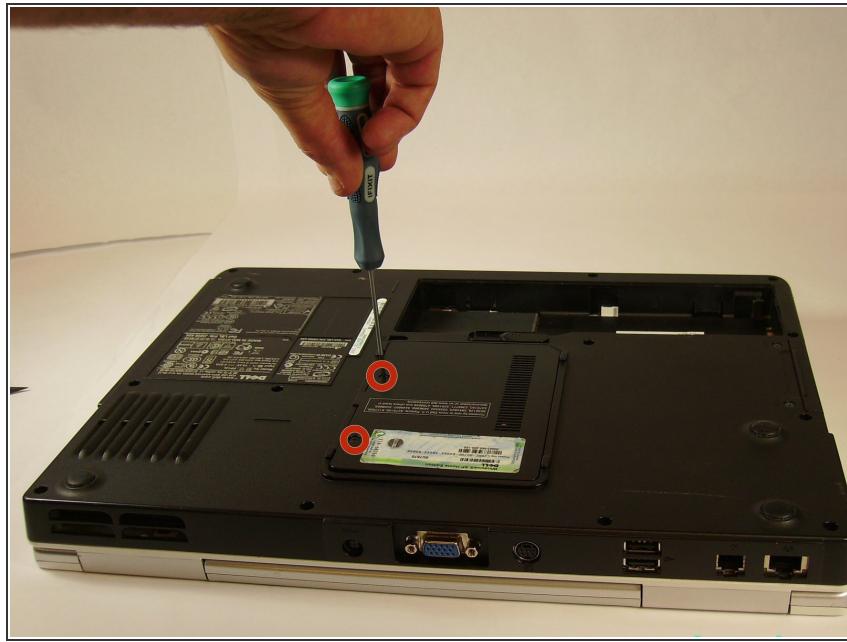

- Unscrew two 4 mm Philips #00 screws.
- Remove the RAM door panel.

## Step 4



- Pull the tabs located at red circles apart in order to separate the ram from its housing.

To reassemble your device, follow these instructions in reverse order.