




# Dell Inspiron 600m Battery Removal

Removing the battery from your Dell Inspiron 600M laptop.

Written By: Taylor Woods

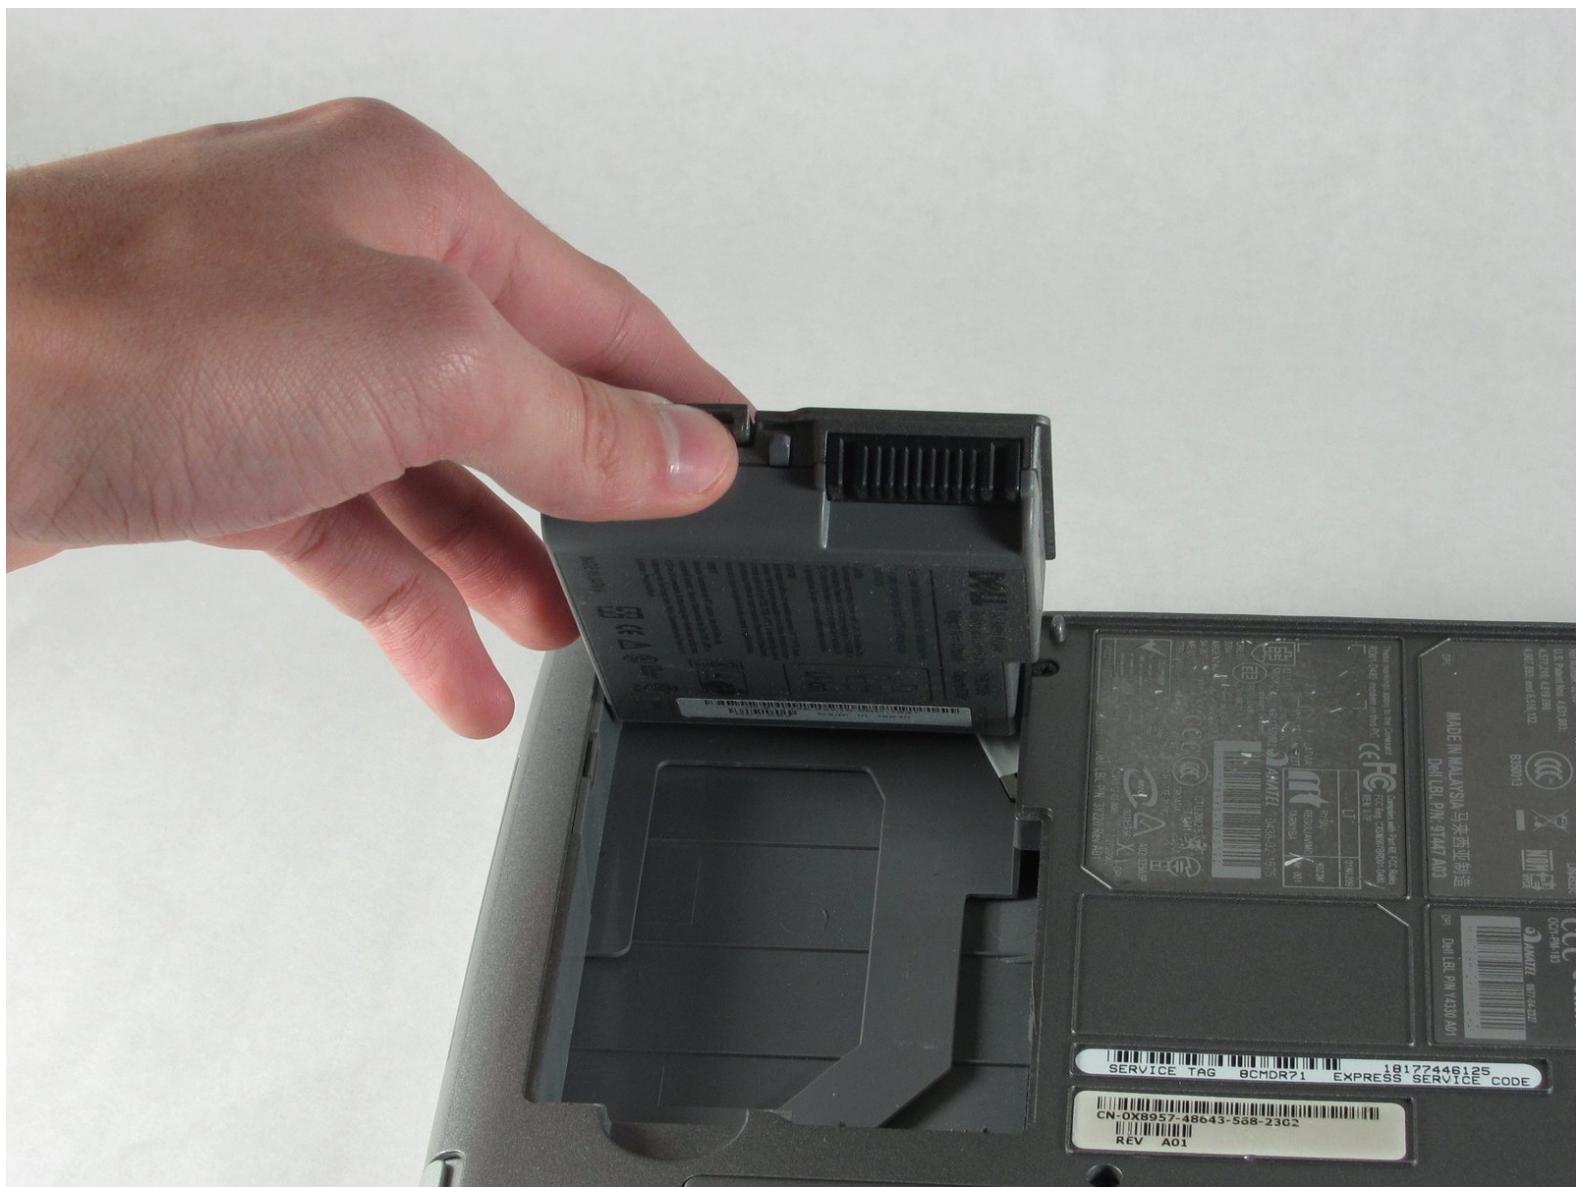

## INTRODUCTION

Take out the battery of your laptop, required before any other disassembly.

## Step 1 — Battery



- Push in the tab on the battery and lift up. The battery should detach very easily.

To reassemble your device, follow these instructions in reverse order.