



# Dell Inspiron 7568 Display Assembly Replacement Guide

This guide will demonstrate how to replace the LCD screen assembly for the Dell Inspiron 7568.

Written By: Yash Samant




## INTRODUCTION

By following the steps in this guide one should be able to replace the complete display assembly on the a Dell Inspiron 7568.

### TOOLS:



- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Battery

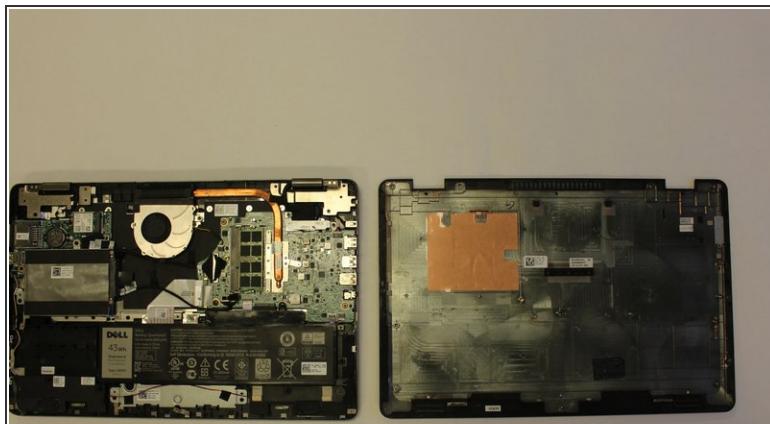



- Remove the ten 7mm Phillips #1 screws on the bottom cover.
- Remove the bottom cover.

## Step 2

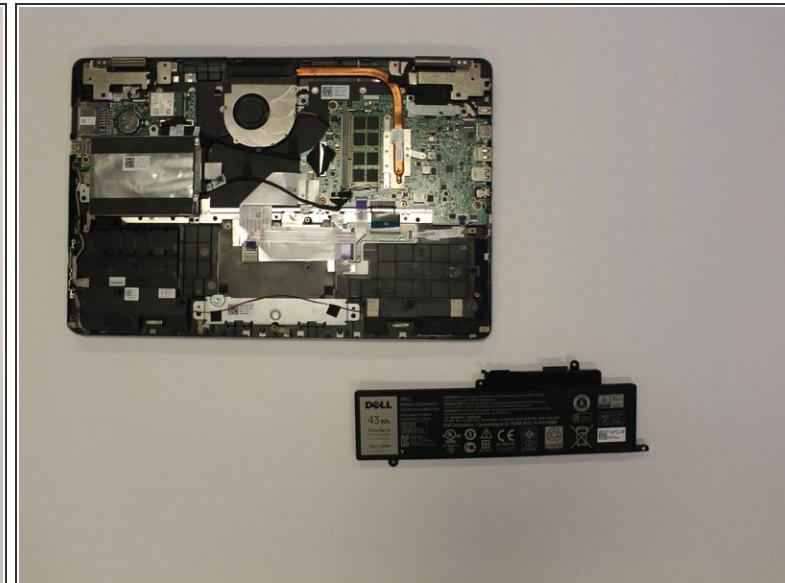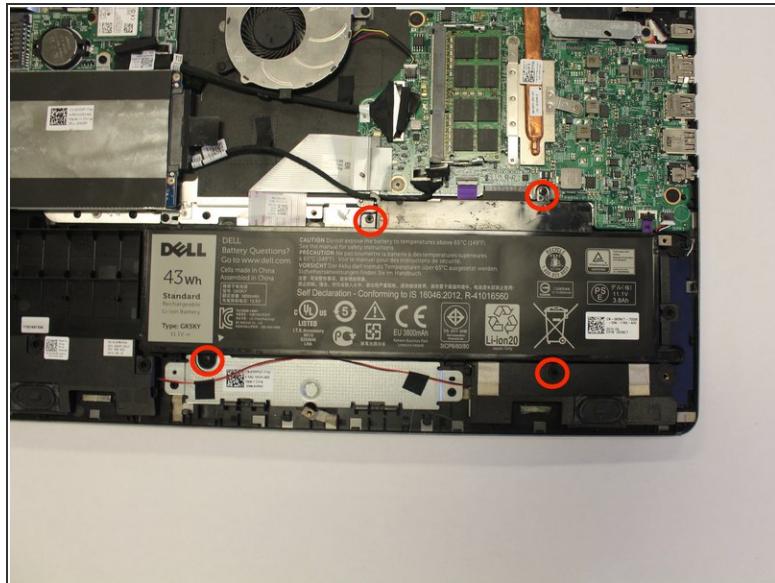



- Remove the four 3mm Phillips #1 screws holding the battery.
- Unhinge the connector cable to the battery.
- Remove the battery.

## Step 3 — Display Assembly

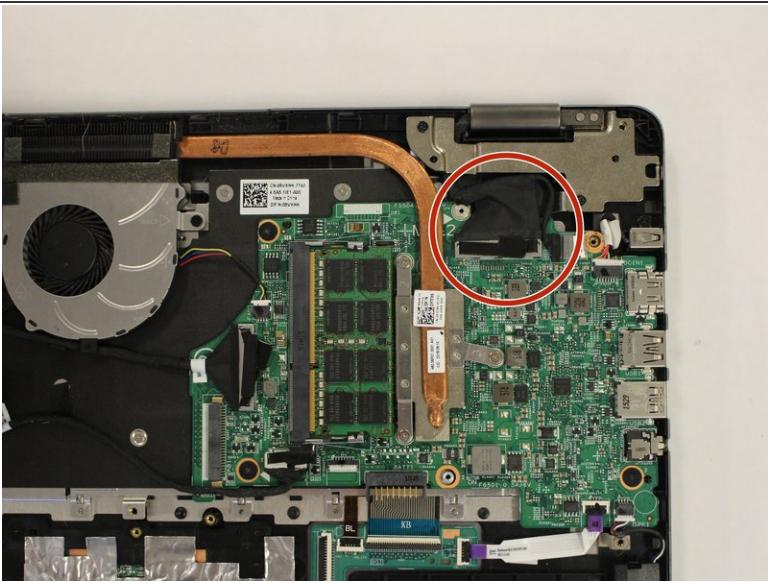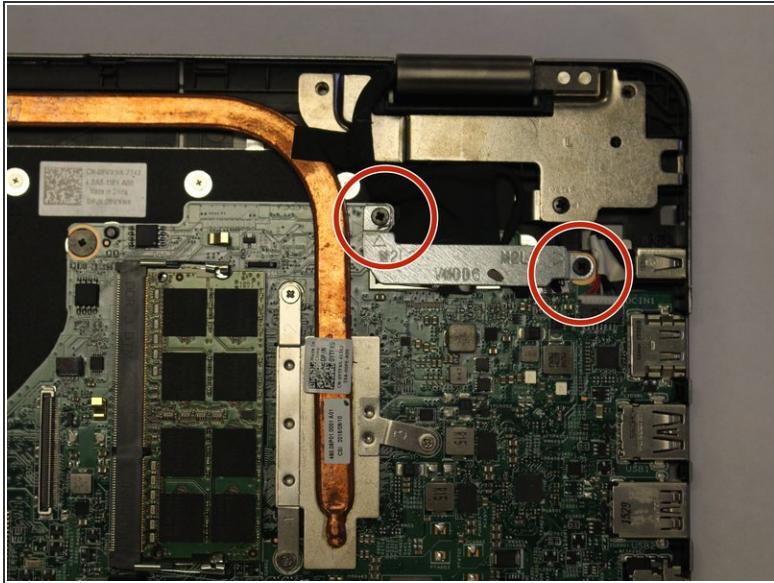


- Unscrew & remove the two 3mm screws (using a ph1 screwdriver bit) and the cable bracket, above the motherboard
- Doing this will allow one to access the LCD-motherboard connector cables.

## Step 4

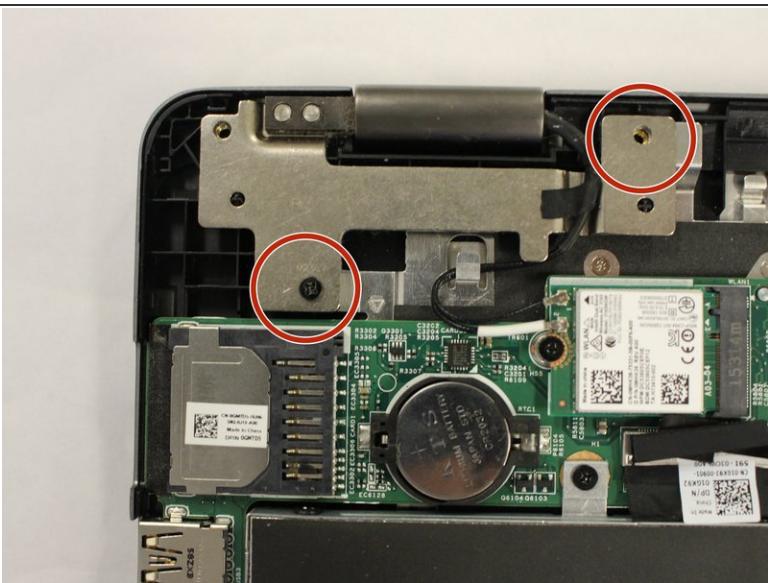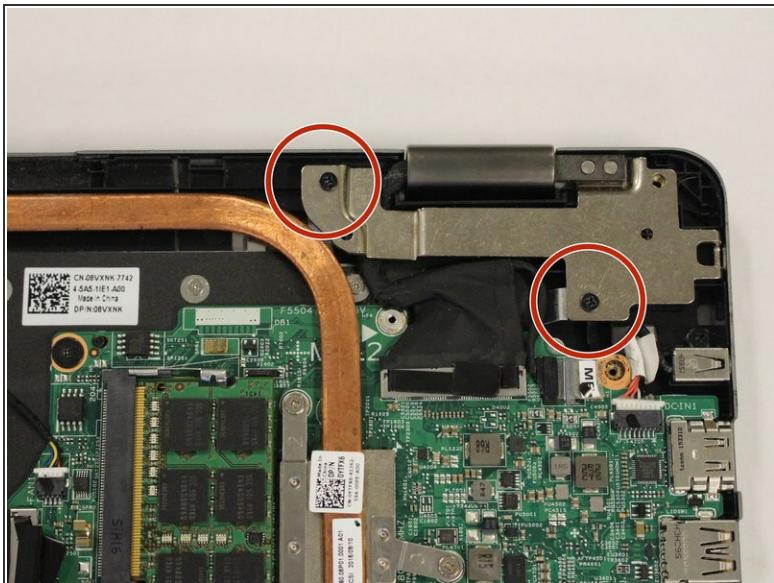

- Unscrew the 7mm screws that secure the left and right hinges (using a ph1 screwdriver bit).

## Step 5

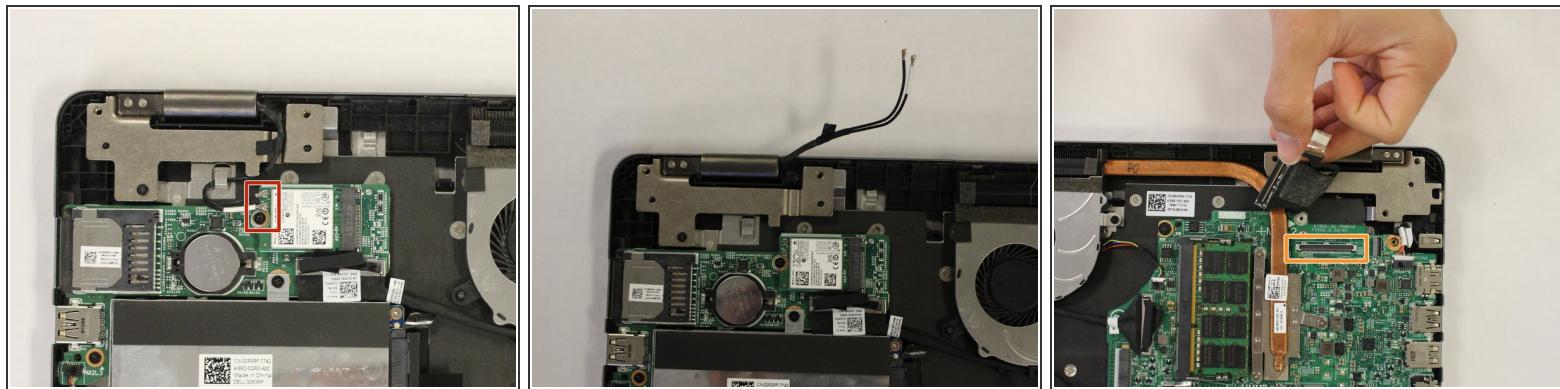

- Disconnect the antenna cable (under the left hinge)
- Disconnect the LCD and Touchscreen display cables under the right hinge.

*(i)* These are a set of two cables. For better image see image two in step one of this guide.

## Step 6



- Carefully separate the screen from the bottom half of the device.

To reassemble your device, follow these instructions in reverse order.