



Dell Inspiron 8600 Display Removal

Follow this guide if you would like to remove the entire display module, case and all.

Written By: Victor



INTRODUCTION

Follow this guide to remove the display module.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



- Remove the battery from the bottom of the laptop.

- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)

(i) It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.


Step 2 — Hinge Cover



- Insert a spludger into the notch at the far left side of the top blue panel and pry hinge cover off.
- Note: You may need to pry the other side off by inserting the spludger between the hinge and the top cover.


 Be careful of wire attached to underside of the hinge cover.

Step 3

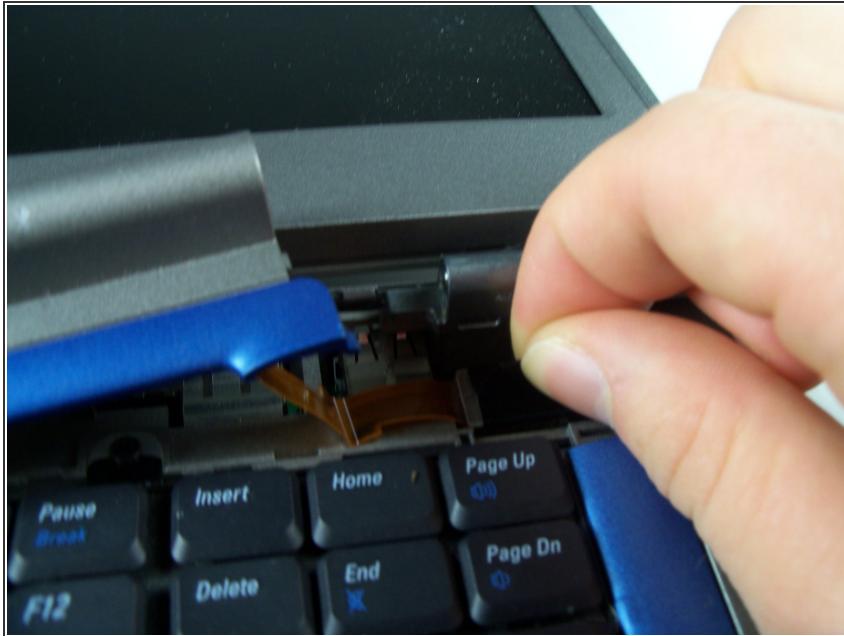


- Pull the small black tab on the right hand side of the laptop.
- The hinge cover has now been removed.

Step 4 — Display Module

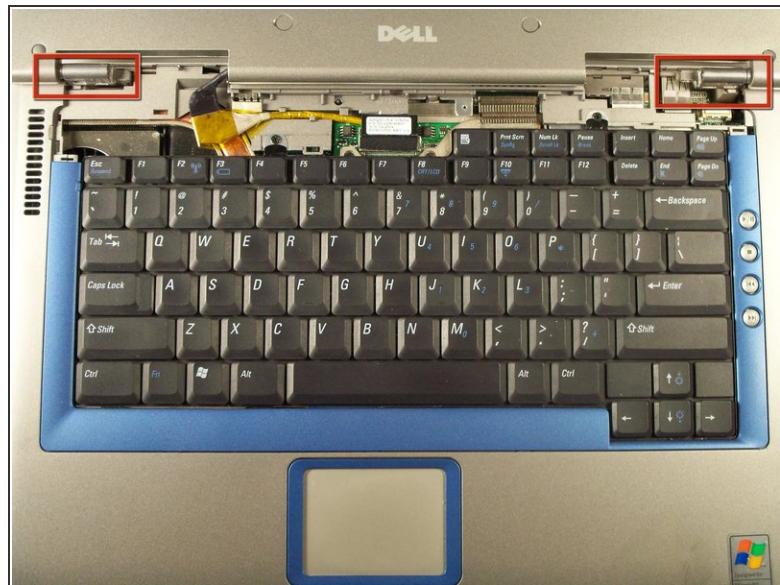

- Flip the laptop over and remove the indicated screws.
- Flip the laptop back over.
- Find the two places where the display module is attached to the base of the computer.

Step 5

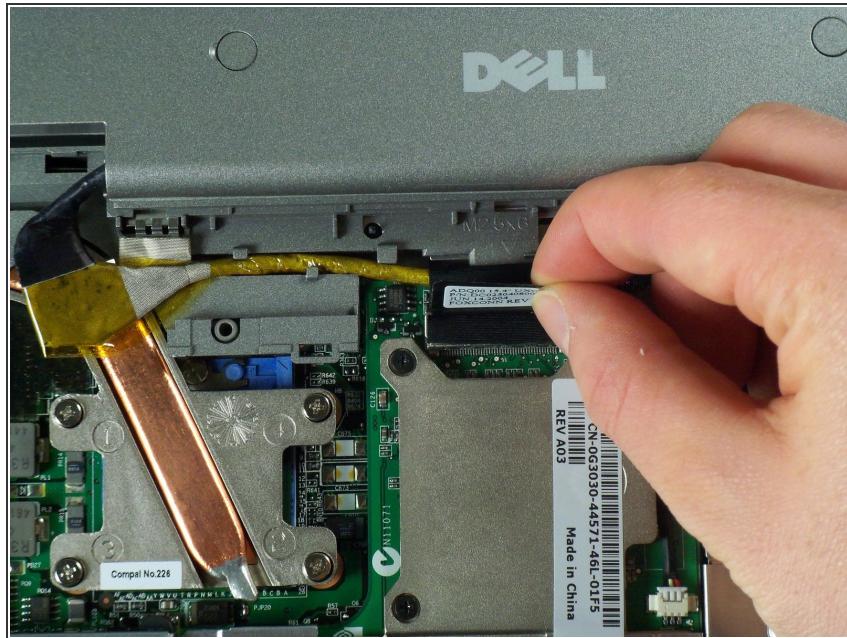

- Disconnect the video card from the display module by gently lifting upwards on the black tab.

Step 6



- Lift the display module directly upwards from the base of the computer.

Step 7



- The display module has been removed.

To reassemble your device, follow these instructions in reverse order.