


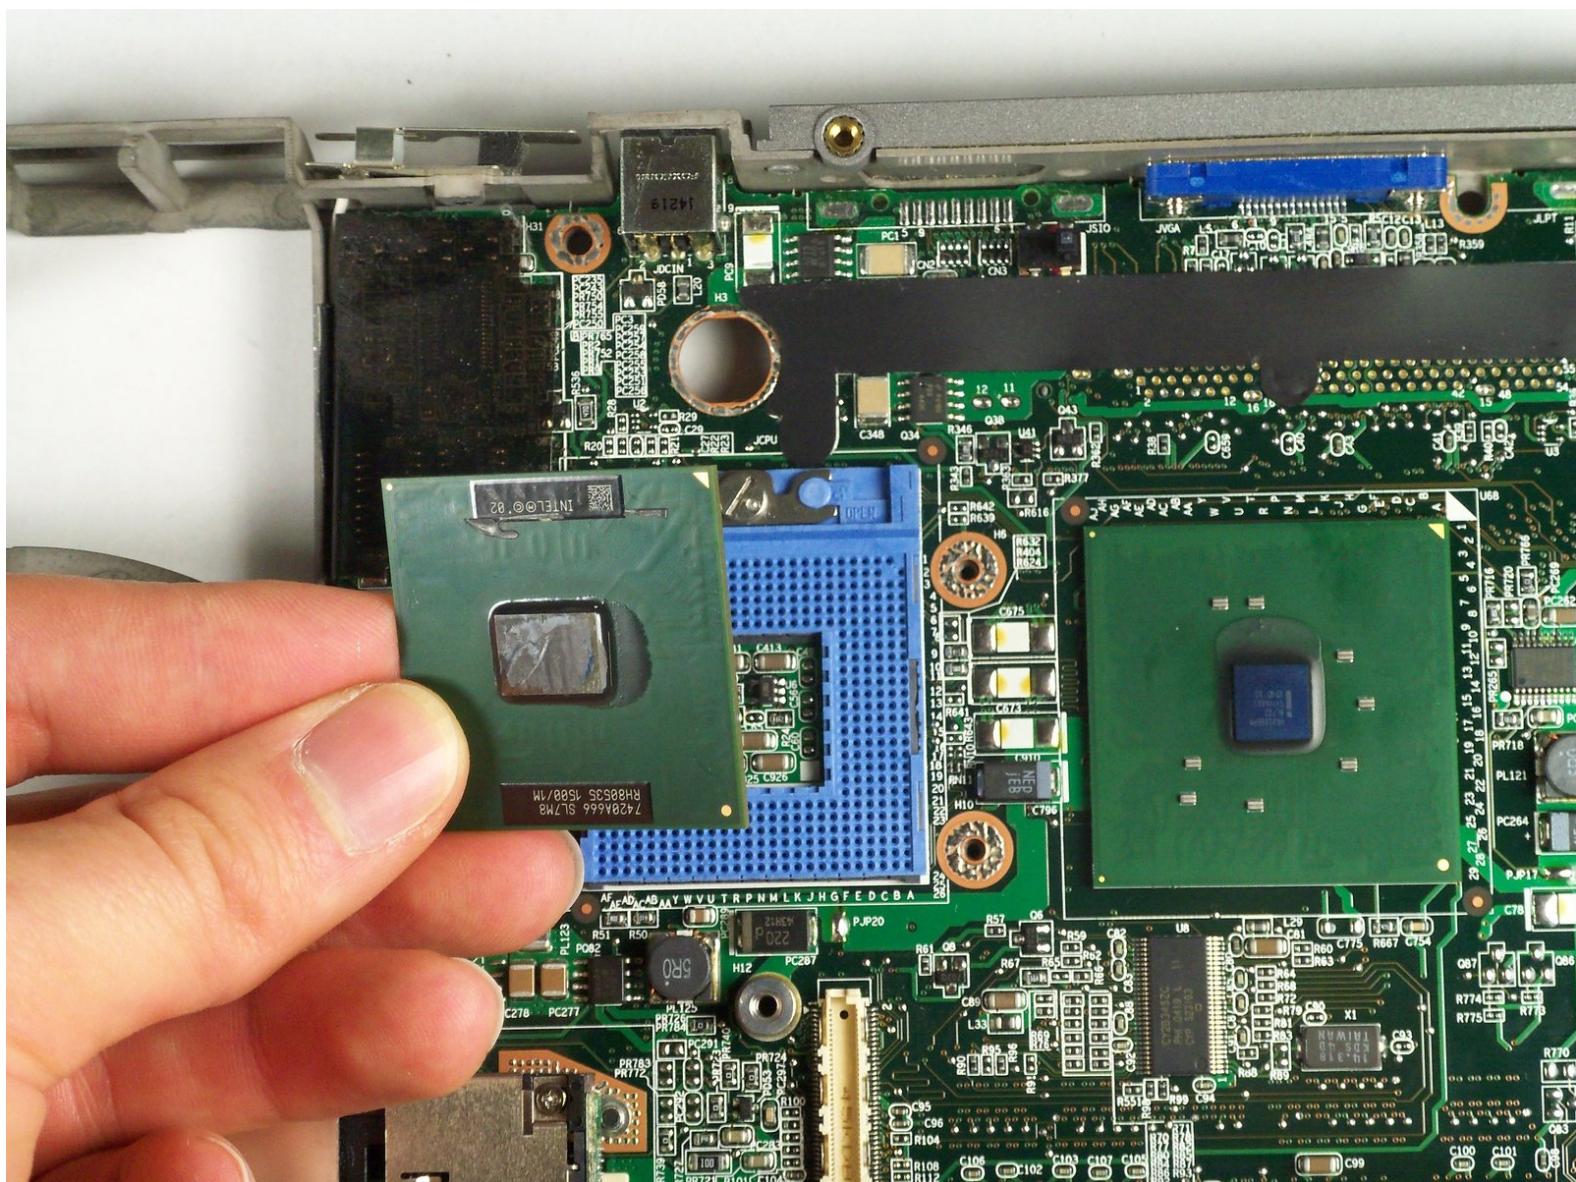

Dell Inspiron 8600 Processor (CPU) Replacement

This guide will show you how to remove and replace the processor.

Written By: John Nesthus



INTRODUCTION

This guide will show you how to remove and replace the processor unit.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery




- Remove the battery from the bottom of the laptop.

- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)

i It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.


Step 2 — Hinge Cover

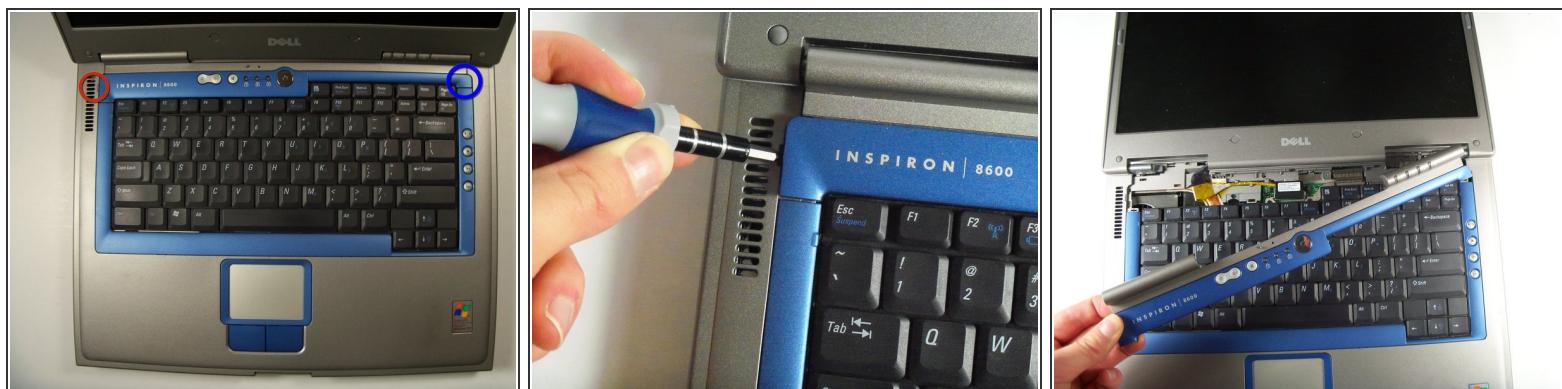

- Insert a spludger into the notch at the far left side of the top blue panel and pry hinge cover off.
- Note: You may need to pry the other side off by inserting the spludger between the hinge and the top cover.

⚠ Be careful of wire attached to underside of the hinge cover.

Step 3

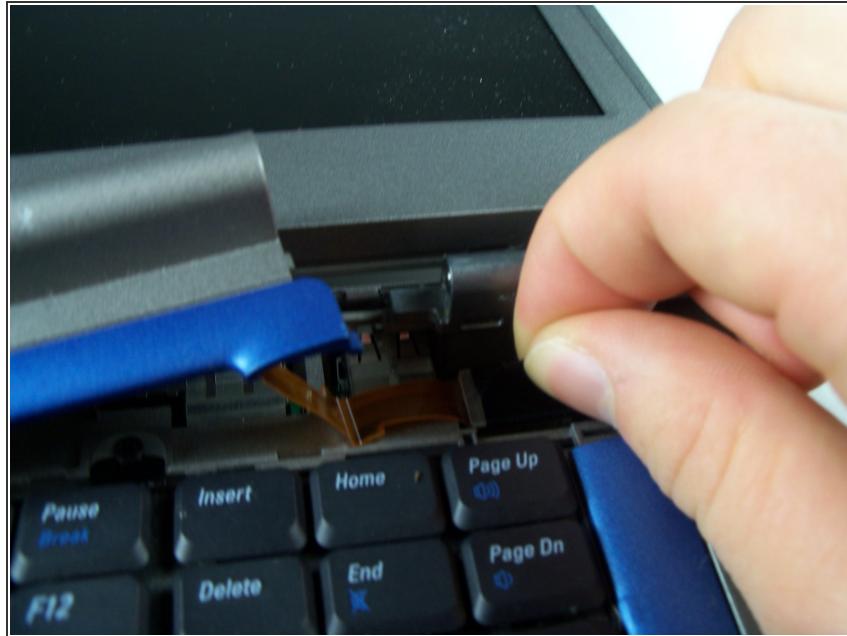


- Pull the small black tab on the right hand side of the laptop.
- The hinge cover has now been removed.

Step 4 — Display Module



- Flip the laptop over and remove the indicated screws.
- Flip the laptop back over.
- Find the two places where the display module is attached to the base of the computer.

Step 5

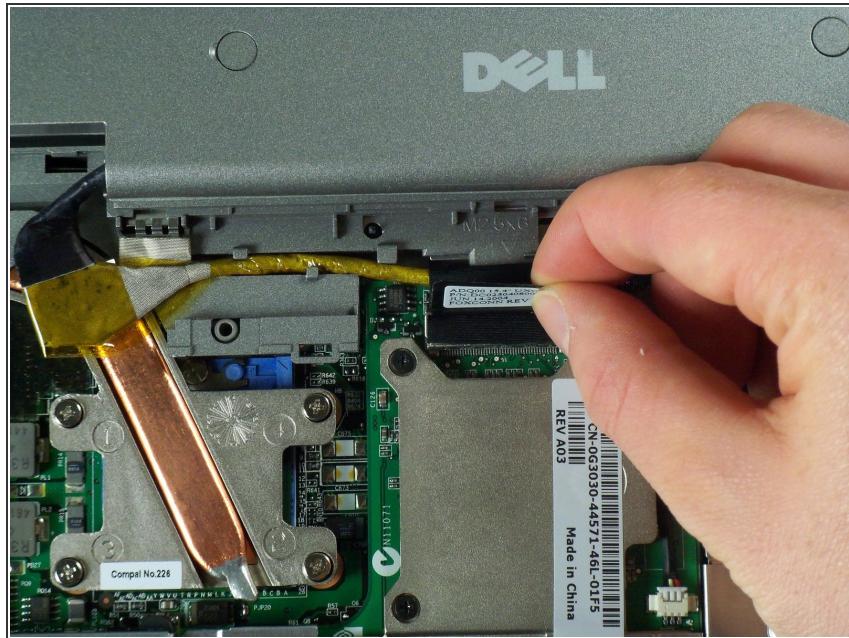

- Disconnect the video card from the display module by gently lifting upwards on the black tab.

Step 6



- Lift the display module directly upwards from the base of the computer.

Step 7




- The display module has been removed.

Step 8 — Processor (CPU)




- Locate and remove the top two screws and all the screws on the underside holding the top case down.
- Gently pop off the top plastic case from the unit.
- Gently pop off the top plastic case from the unit.

Step 9

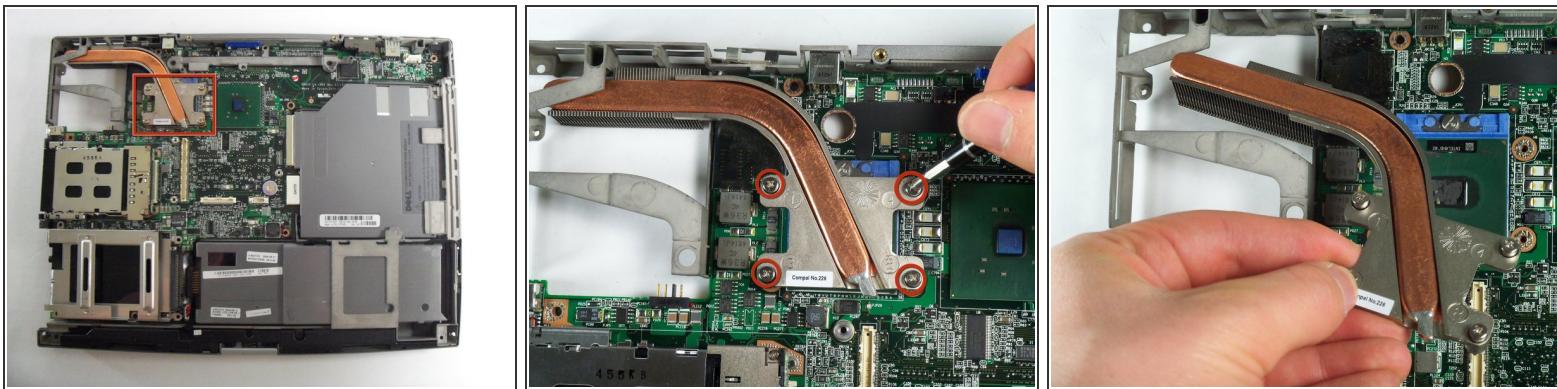

- Remove the copper heat sink that is housing the CPU by removing the four securing screws.
- Gently lift and remove the heat sink.

Step 10

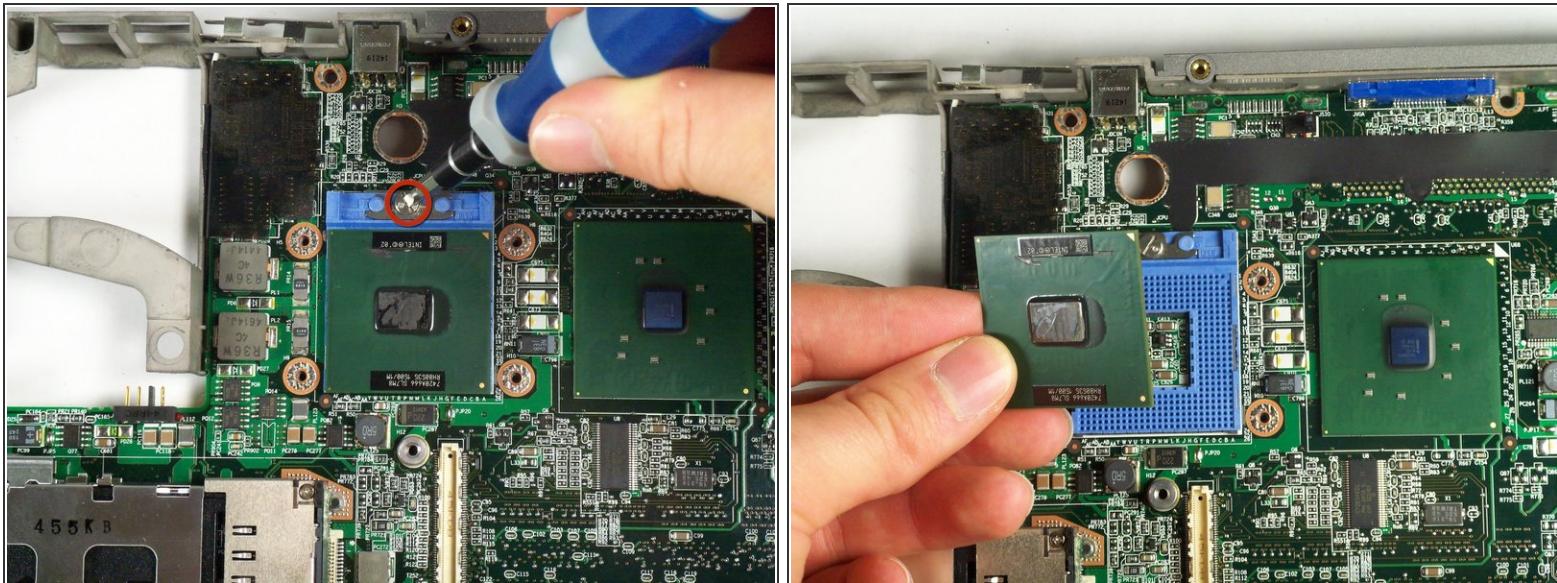

- Gently loosen but do not remove the screw, and lift the CPU.

(i) You will have to remove and replace the [How to Apply Thermal Paste](#) on the CPU base.

- You may now replace the CPU.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-07 10:45:32 PM (MST).

