




# Dell Inspiron 8600 RAM Replacement

If the RAM is not working, follow this guide.

Written By: Brian Murphy

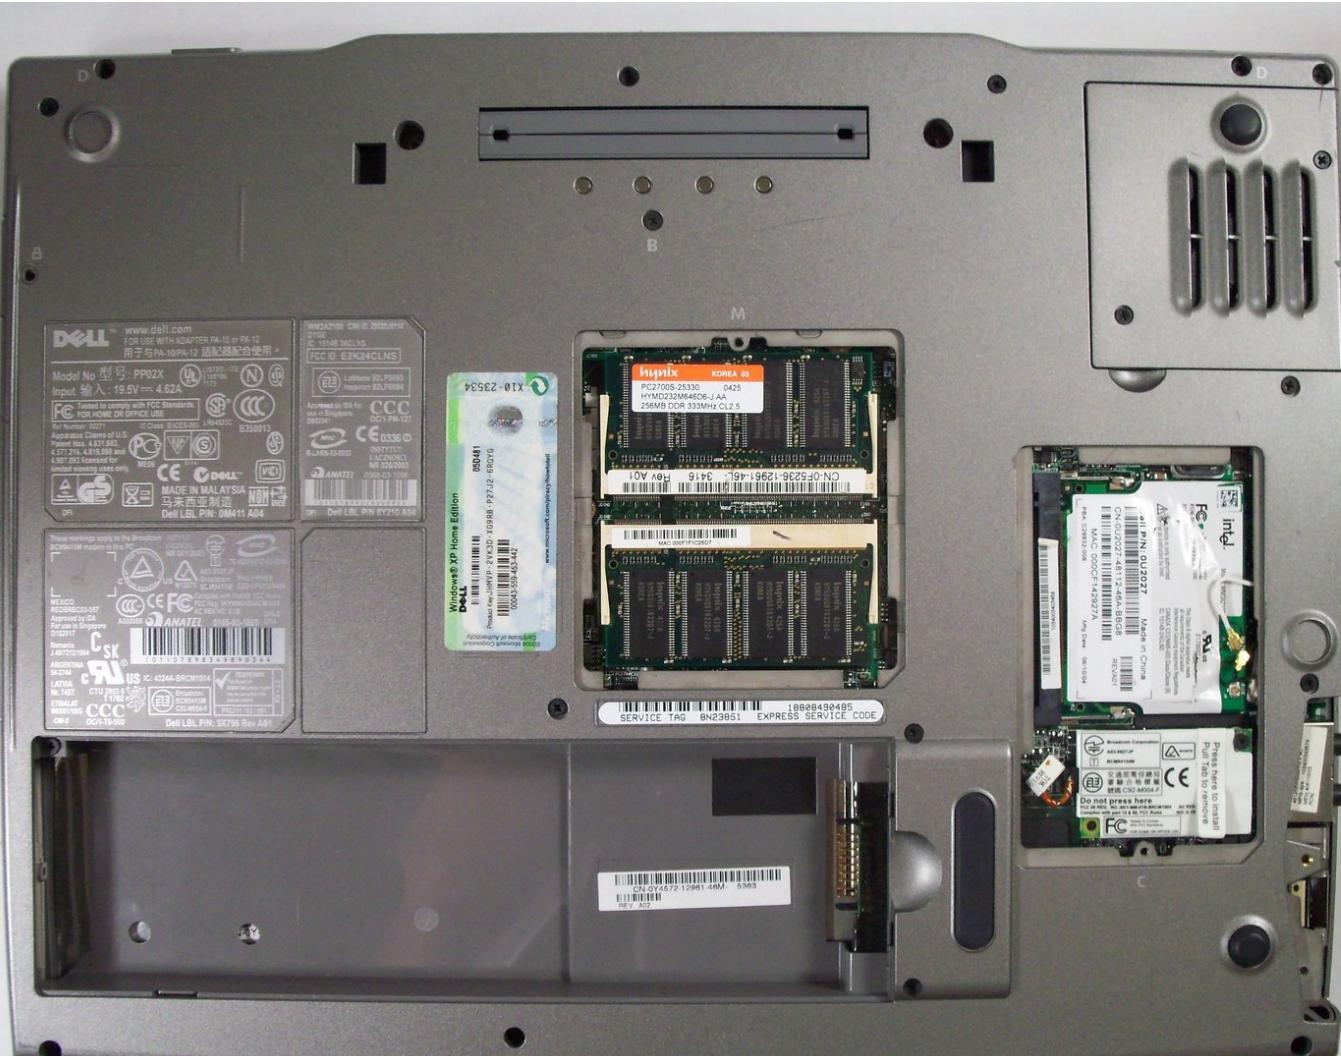

## INTRODUCTION

If the RAM is not working, follow this guide.

### TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Battery




- Remove the battery from the bottom of the laptop.

- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)

- ⓘ* It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.


## Step 2 — RAM

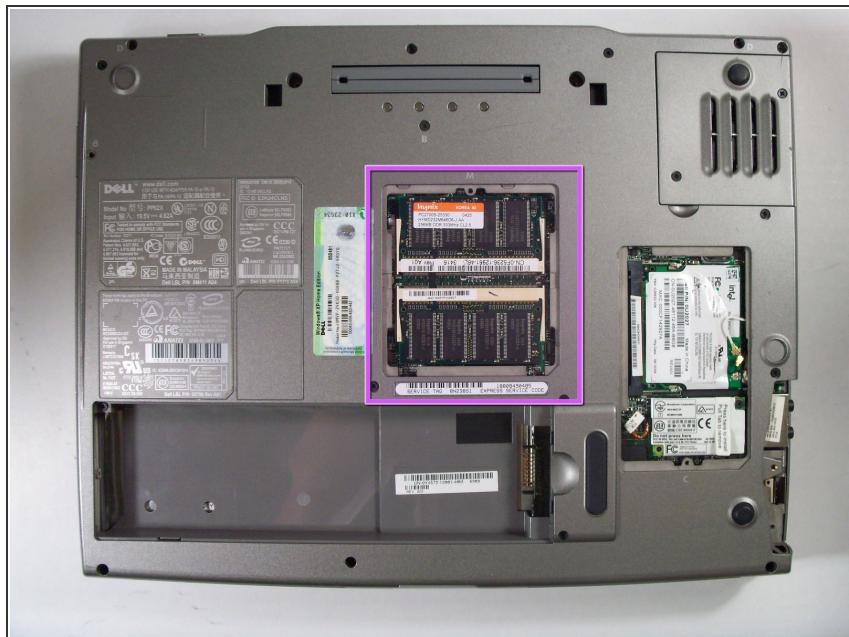

- Remove memory cover on bottom of laptop.

- ⓘ* To view the removal of the memory cover, follow the [Dell Inspiron 9100 Memory Replacement](#).

## Step 3

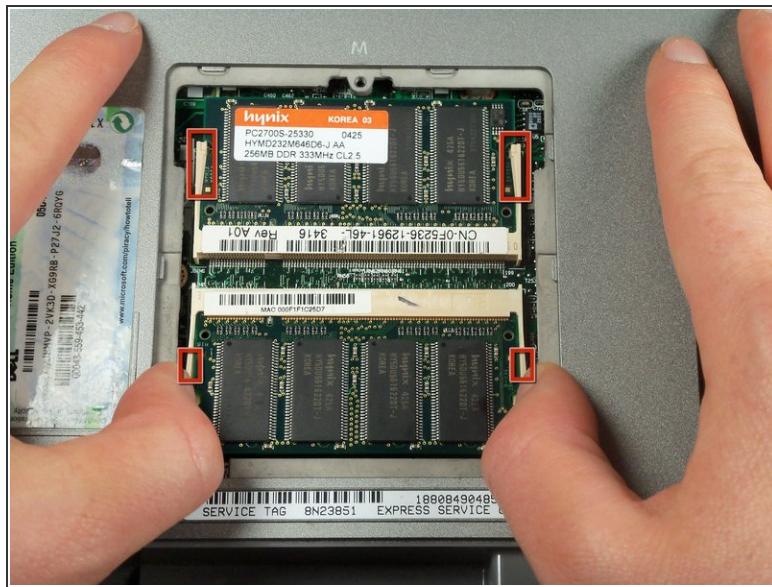

- Pull apart the white plastic tabs on either side of the RAM which will cause it to rise upwards.
- Gently remove the RAM, only touching the edges of the component.

To reassemble your device, follow these instructions in reverse order.