



# Dell Inspiron 8600 Top Case Replacement

Follow this guide to replace the top case of the Dell Inspiron 8600.

Written By: Perry



---

## INTRODUCTION


Follow this guide to replace the top case of the Dell Inspiron 8600.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery

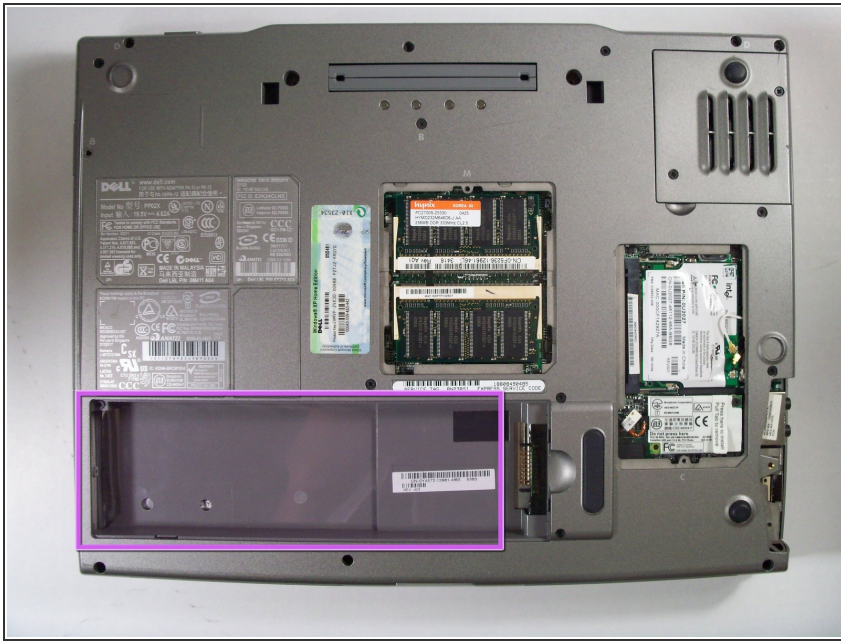

- Remove the battery from the bottom of the laptop.
- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)
- ⓘ It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.


## Step 2 — Power Button



- Locate the small opening at the upper left of the top blue panel which houses the power button.
  - Use a spudger to lift up and remove the blue panel.
- ⚠ Caution: The hinge cover is still connected to the interior of the computer by a small black tab.





## Step 3

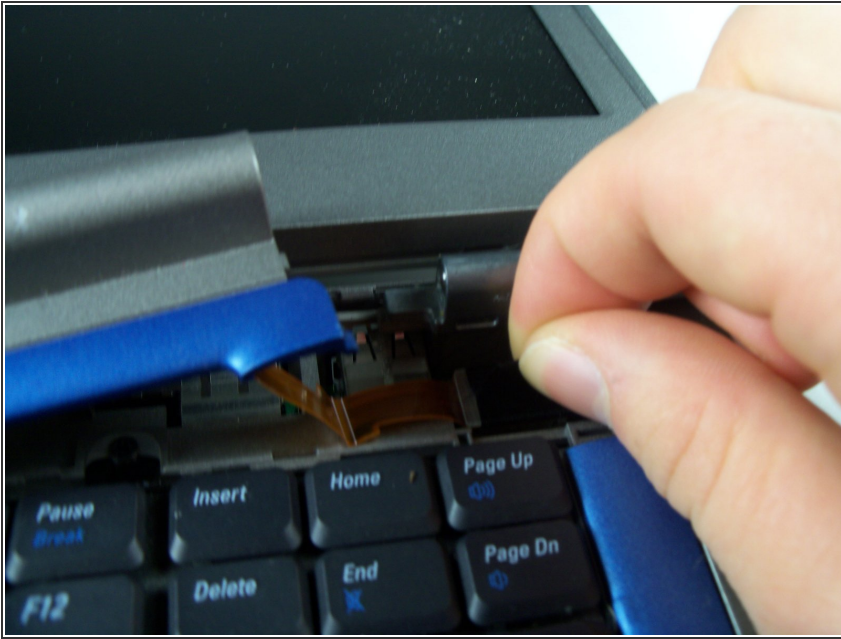


- Locate the black tab at the upper right corner of the keyboard, and gently pull the black tab to the left to disconnect the hinge cover.
- You should now be able to completely remove the hinge cover.

## Step 4 — Display Module

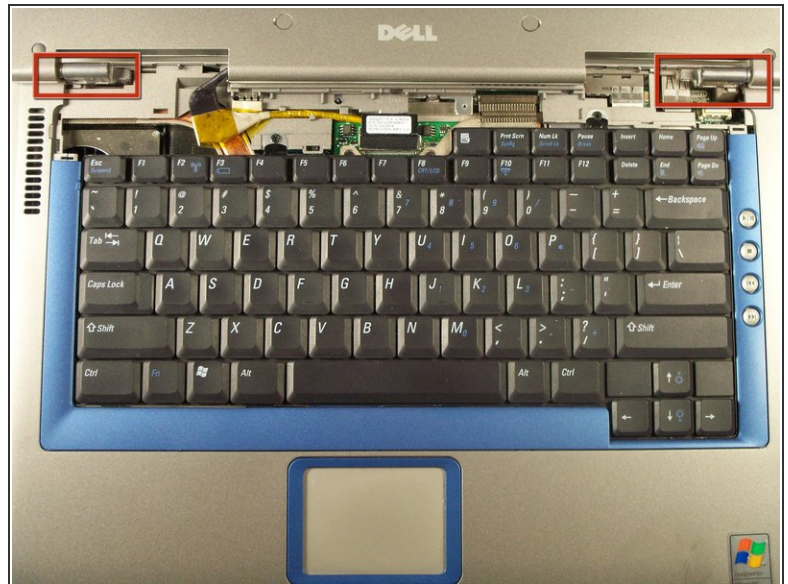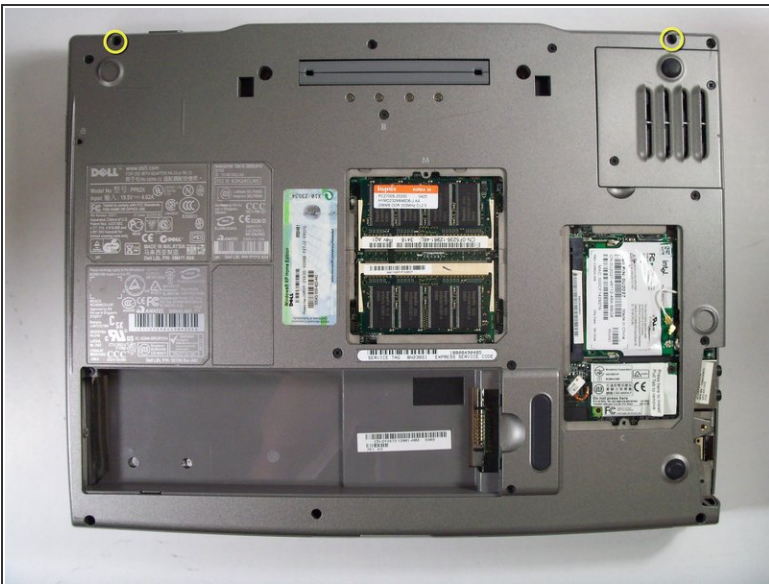

- Flip the laptop over and remove the indicated screws.
- Flip the laptop back over.
- Find the two places where the display module is attached to the base of the computer.

## Step 5

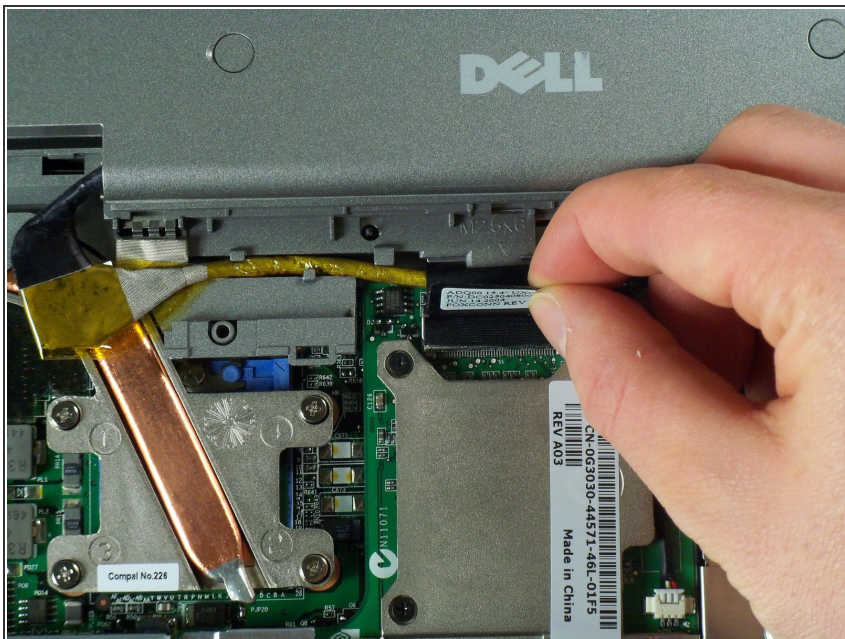

- Disconnect the video card from the display module by gently lifting upwards on the black tab.

## Step 6



- Lift the display module directly upwards from the base of the computer.




## Step 7



- The display module has been removed.

## Step 8 — Top Case

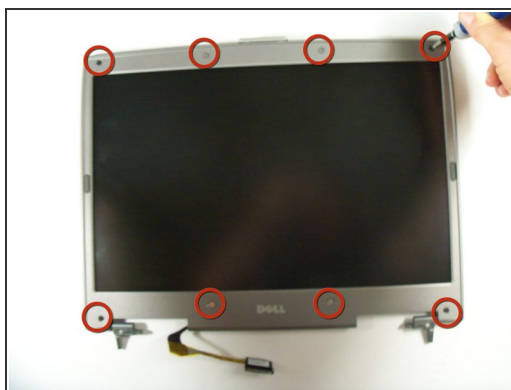

- First, remove all tabs using a flat head/ finger.
  - Next, remove all screws using a #1 Philips screwdriver.
- ⚠ Pull apart top case from the lower case. It will be quite difficult to separate.

## Step 9



- Remove all screws on the top of the lcd
- There all several screw on each side of the LCD. Remove all.

## Step 10



- LCD should remove smoothly.
- The top case will be what remains.

To reassemble your device, follow these instructions in reverse order.