



Dell Inspiron 910 RAM Replacement

This guide will teach you how to remove and replace the RAM from your Dell Inspiron 910 Laptop.

Written By: Kyle Beekman



INTRODUCTION

In this guide it will be demonstrated how to replace the memory on a Dell Inspiron 910 laptop.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Remove Battery



- Locate the release tabs located on either side of the battery, on the bottom of the laptop.
- Push the release tabs toward the center of the device.
- Remove the battery.

Step 2 — Preparation



Remember to power off the device before starting!

- Disconnect any cables or external devices from the laptop, then flip it and remove the battery by pressing the battery tabs inward.

Step 3



- Locate the large black panel with two screws holding it in place. (This is the panel with ventilation holes)
- Unscrew both of the screws using a Philips Screwdriver.

Step 4



- Remove the panel by pulling upward.

⚠ Removal may require some force!

Step 5



- After removing the panel, locate the memory modules.
- Look for the silver tabs on either side of the white plastic holding the RAM in place. Then gently remove the RAM.

Step 6 — For Reinstallation



- Depress the RAM until it locks into place; there should be an audible clicking noise when it does so and the gold contacts should be barely visible.

(i) Congratulations! You have completed the guide.

To reassemble your device, follow these instructions in reverse order.