



Dell Inspiron 9300 Modem Replacement

Replace the modem card.

Written By: Randy McMillan





INTRODUCTION

This guide describes how to access the modem card and replace it.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Modem & WIFI Card Prerequisite

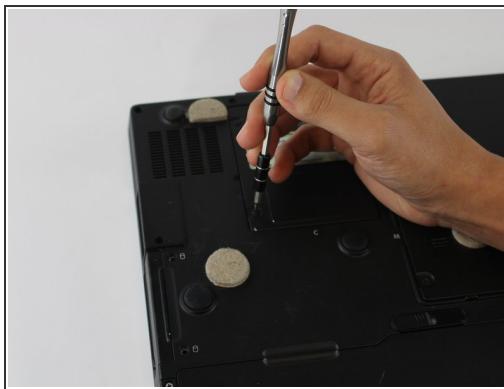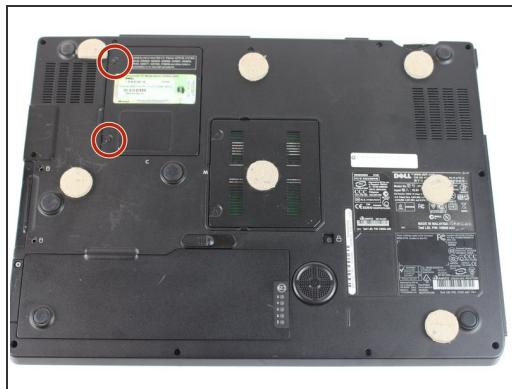

- Flip the computer over and place it on a clean level surface.
- Loosen the screws using a size #0 Phillips screwdriver.

(i) The screws do not come completely out.

! It is strongly recommended that the [Anti-Static Wrist Strap](#) is used to avoid damage to internal components.

Step 2



- Once the screws are loose, open the panel using a plastic opening tool to access the components below.
- (i)* The modem card should be labeled MODEM. The WIFI card is larger than the modem and closer to the outer edge of the computer.

Step 3 — Modem Card



- Remove the screw holding the card in place using a size #0 Phillips screwdriver.
- Gently unplug the card from the connecting black wire using a black spudger.

(i) The modem can now be safely removed.

To reassemble your device, follow these instructions in reverse order.