



Dell Inspiron 9300 Prerequisite Only Replacement

Prerequisite Only

Written By: Steven Faulkner



INTRODUCTION

Prerequisite Only

TOOLS:

- [Heavy-Duty Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Prerequisite Only



- Remove the battery prior to working on any internal components.

- Remove the twelve 6mm Phillips screws from the bottom of the case.

⚠ Remove the battery before working on internal components to ensure a safe working environment.


Step 2



- Gently pry away the silver bezel above the keyboard and below the display using a spudger.



ⓘ Start on the right hand side, where there is a notch in the bezel for easiest removal.

Step 3

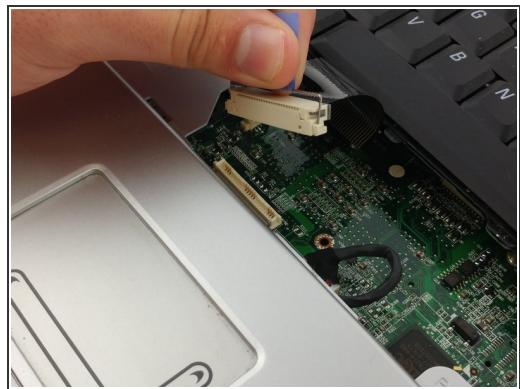

- Remove the two 5mm Phillips screws retaining the keyboard.
- Pull the keyboard up and toward the monitor to reveal the ribbon cable beneath.
- Firmly grasp the blue tape attached to the keyboard ribbon cable connector and pull upward away from the motherboard.


Step 4

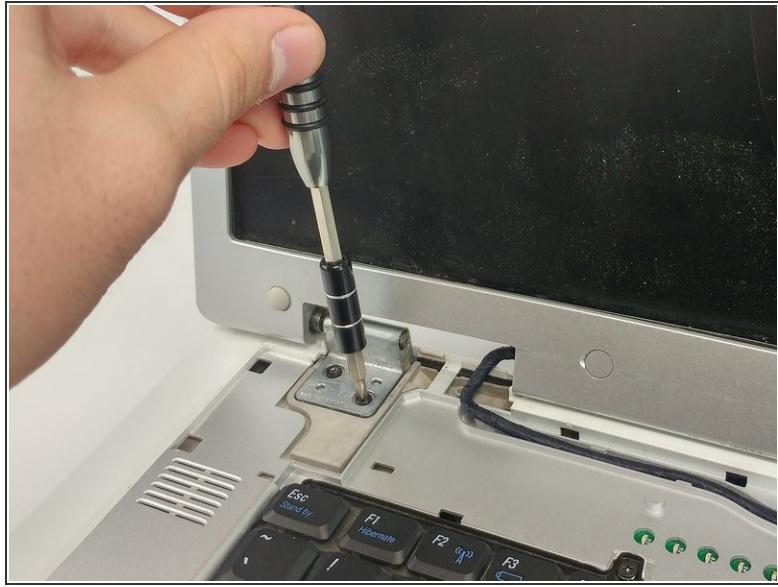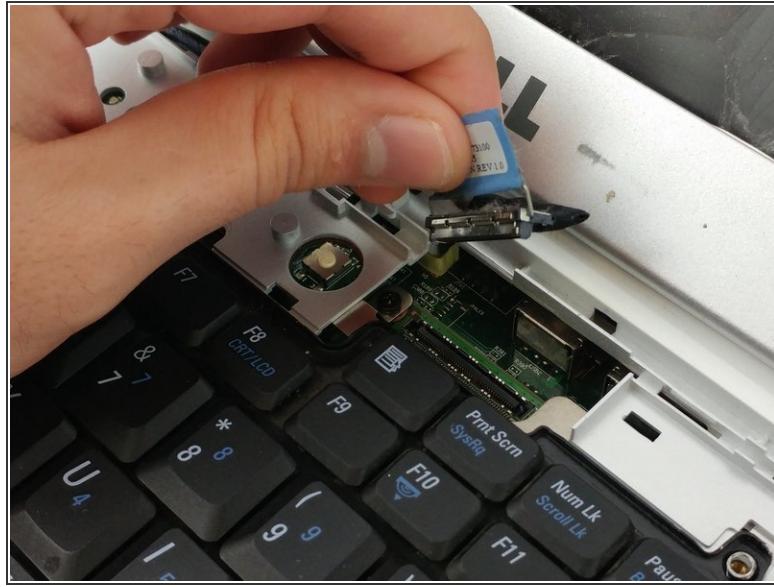

- Firmly grasp the blue tape attached to the LCD display ribbon cable connector and pull upward away from the motherboard.
- Remove the two 5mm Phillips screws holding the display hinge on both sides of the laptop.


⚠ Support the display as you loosen the hinges, to avoid the screen falling and breaking.

Step 5

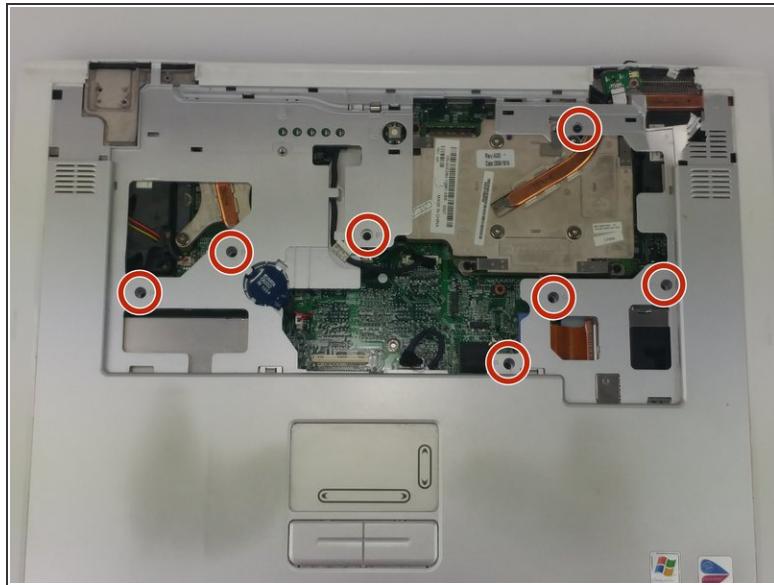


- Remove the seven 6mm Phillips screws holding the trackpad/palm rest to the motherboard.
- Gently pry the CMOS battery out of its retaining clip using a spudger.

Step 6

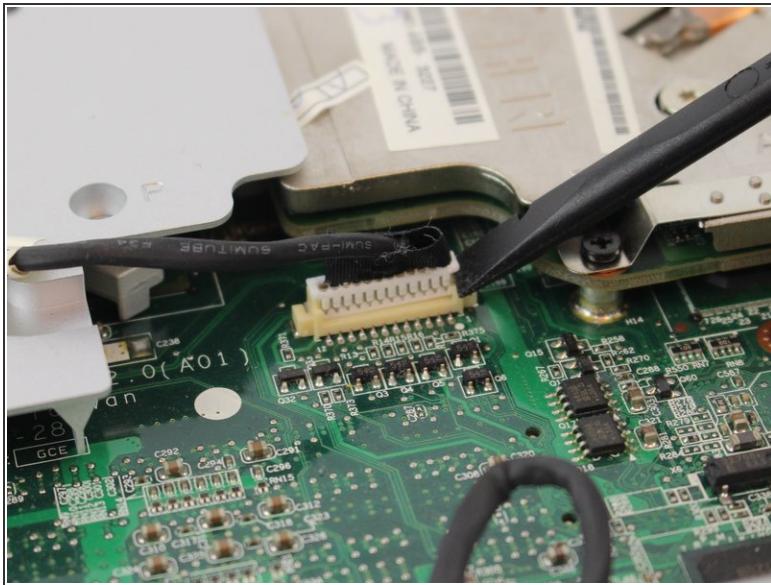

- Remove the low profile connector for the keyboard status lights located next to the video card heat sink using a spudger.
- Remove the trackpad ribbon cable from the motherboard using a spudger.

Step 7

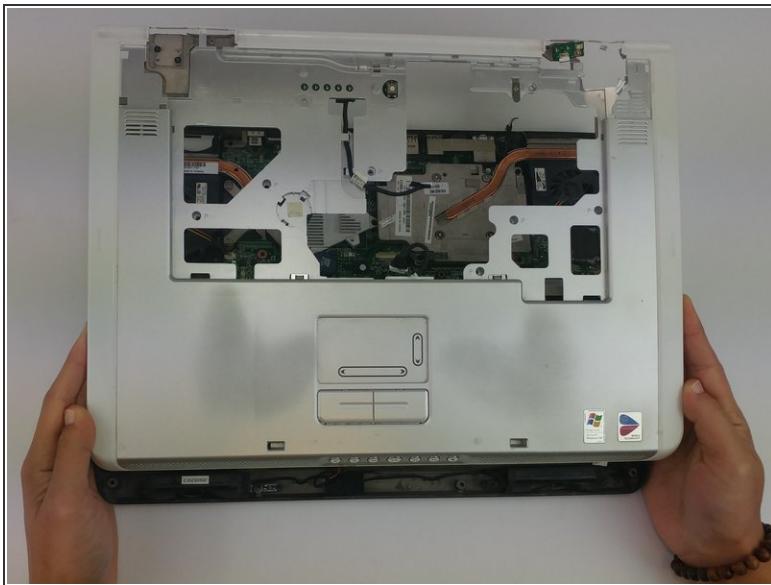

- Pull up and away on the track pad to expose the internal components below.

To reassemble your device, follow these instructions in reverse order.