



Dell Inspiron 9300 WIFI Card Replacement

the WIFI Card enables the computer to network with other computers wirelessly using a radio frequency.

Written By: Randy McMillan



This document was generated on 2019-09-23 10:20:25 AM (MST).


INTRODUCTION

This content will describe the procedure for replacing the WIFI Card.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Modem & WIFI Card Prerequisite

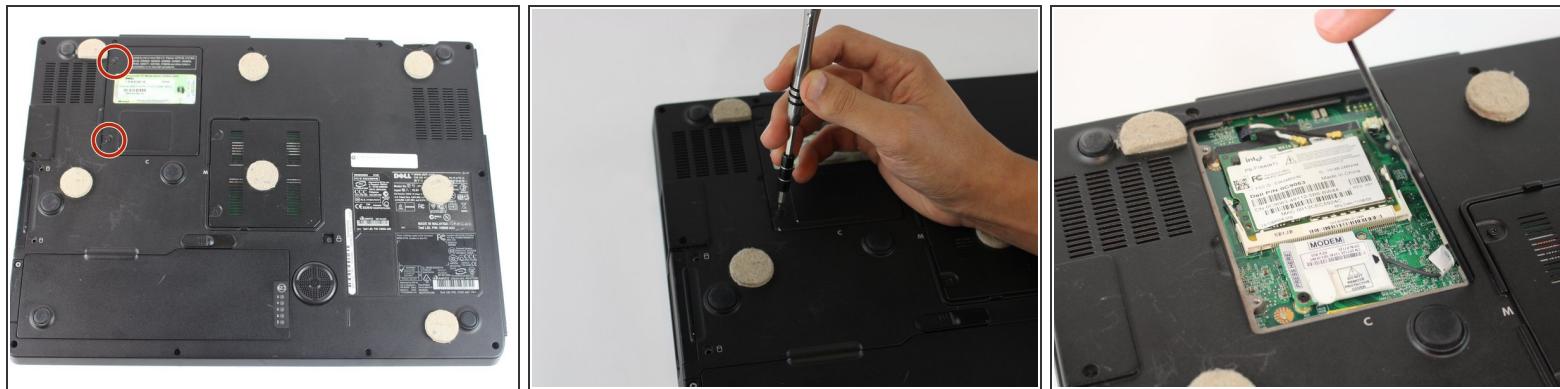

- Flip the computer over and place it on a clean level surface.
- Loosen the screws using a size #0 Phillips screwdriver.

i The screws do not come completely out.

! It is strongly recommended that the [Anti-Static Wrist Strap](#) is used to avoid damage to internal components.

Step 2



- Once the screws are loose, open the panel using a plastic opening tool to access the components below.
- (i)* The modem card should be labeled MODEM. The WIFI card is larger than the modem and closer to the outer edge of the computer.

Step 3 — WIFI Card



- Gently pry up on the gold antennae connections using a spudger.
- Gently pry open both retaining clips on either side of the WiFi card using a spudger.

(i) Once the clips are open and the card is unplugged, it is safe to remove.

To reassemble your device, follow these instructions in reverse order.