



Dell Inspiron M5010 CC/DVD Drive Replacement

This guide will demonstrate how to remove the back cover and remove the CD/DVD drive.


Written By: April Poucher



 **TOOLS:**

- Phillips #000 Screwdriver (1)

Step 1 — Battery

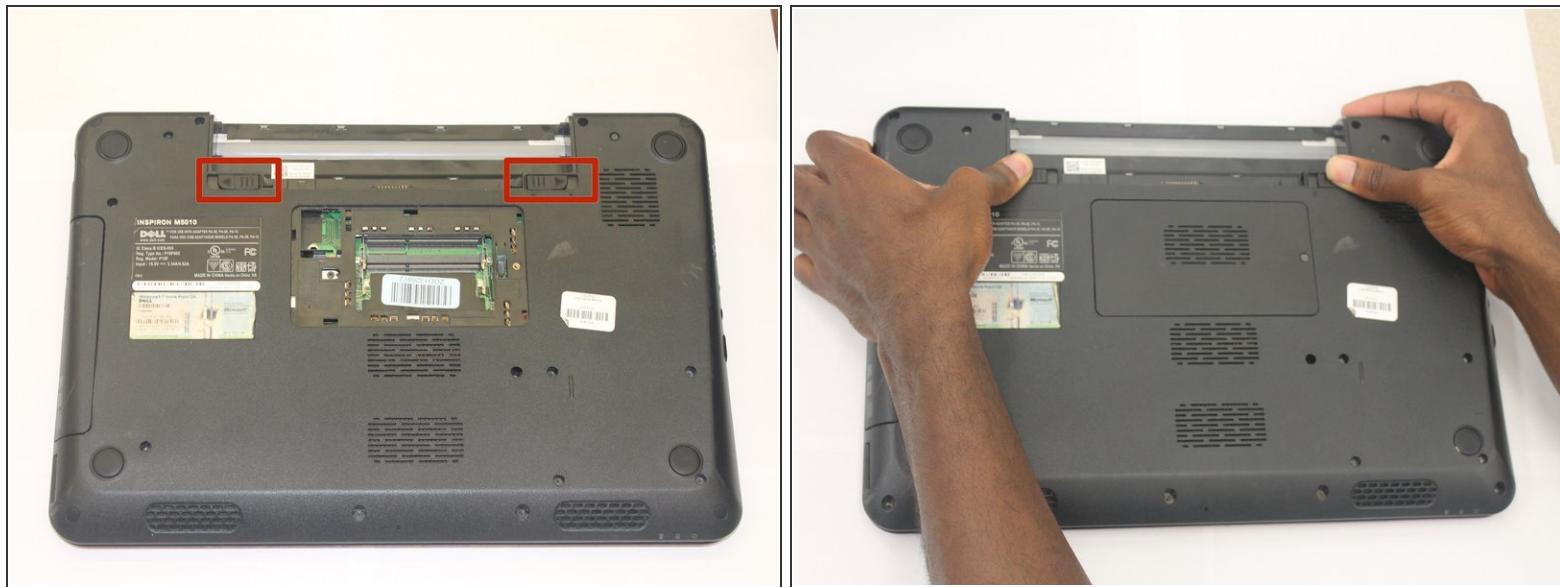

⚠ Make sure laptop is powered off before removing the battery.

- Slide both arrow tabs towards the outer edge of the computer to release the battery.
- ⓘ Battery is not shown.

Step 2 — CC/DVD Drive



- Using the Phillips #000 screwdriver, remove the 6 mm Phillips #000 screw holding in the back cover.
- Lift the back cover away from the computer and remove it.

Step 3



- Remove the 6 mm Phillips #000 screw using the Phillips #000 Screwdriver.

Step 4



- Pull the CC/DVD drive from computer.

To reassemble your device, follow these instructions in reverse order.