



Dell Inspiron M5010 RAM Replacement

This guide will show you how to remove the back cover and replace the RAM.


Written By: April Poucher



 **TOOLS:**

- Phillips #000 Screwdriver (1)


Step 1 — Battery

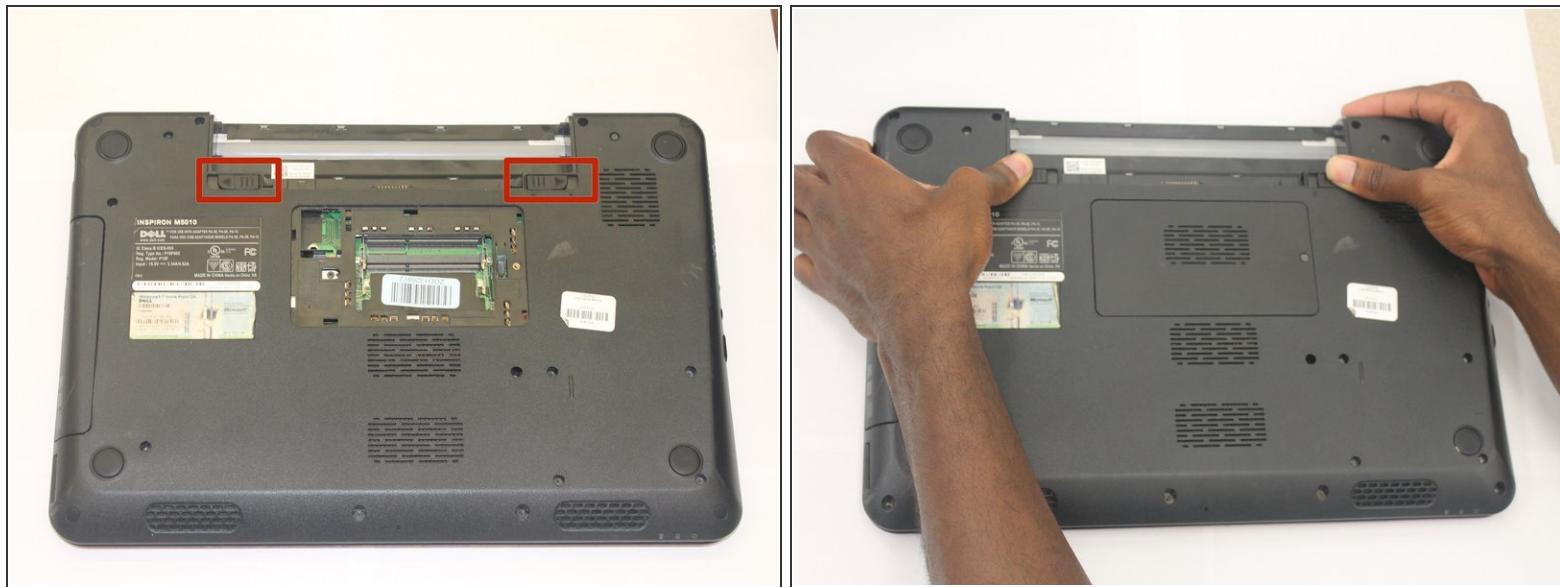

⚠ Make sure laptop is powered off before removing the battery.

- Slide both arrow tabs towards the outer edge of the computer to release the battery.
- **(i)** Battery is not shown.

Step 2 — RAM

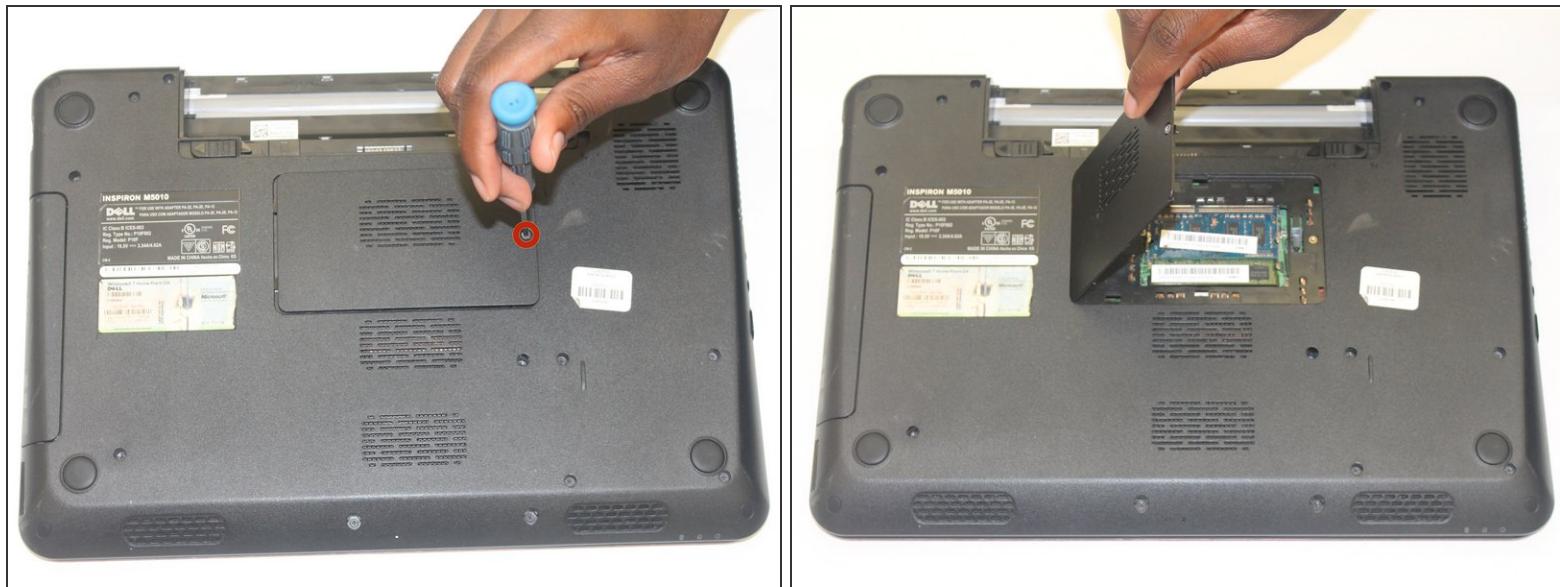

- Using the Phillips #000 screwdriver, loosen the screw holding in the back cover.
- Then, lift up the back cover to remove it.

Step 3



- Snap open the top memory clips and remove the memory drive they hold in.

Step 4



- Snap open the bottom memory clips and remove the memory drive they hold in.

Step 5



- The laptop computer should look like this once both memory cards are removed.

To reassemble your device, follow these instructions in reverse order.